

# Neon Fitting Instructions

## Switches

Neon bulb should slide into bulb aperture easily with a gentle push. Do not force as you may cause damage to the neon.

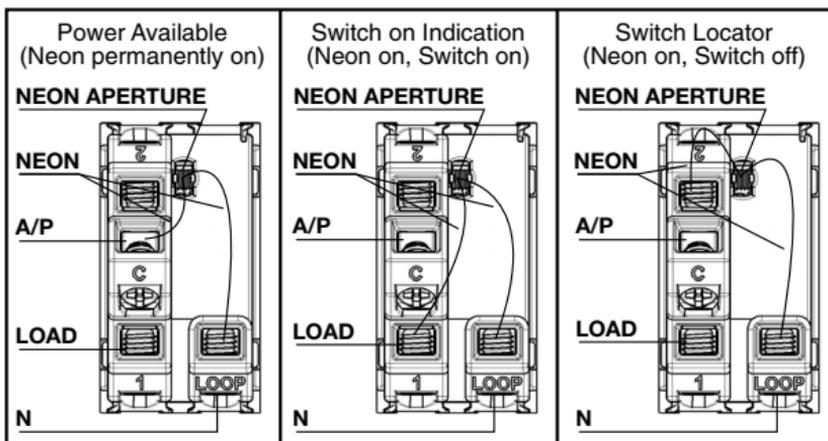


Diagram shows 881M16 switch mech.

For other detailed neon wiring options refer to the 800 Modena Series Catalogue.

## Sockets

The 892, 894 and 895 sockets are fitted with push-in connection points for "ON" indication.

The bare neon wires should be pushed firmly into the holes marked neon using a pair of pliers taking care not to damage the sheathing.

Neons can also be wired into the terminals for "POWER AVAILABLE" indication.

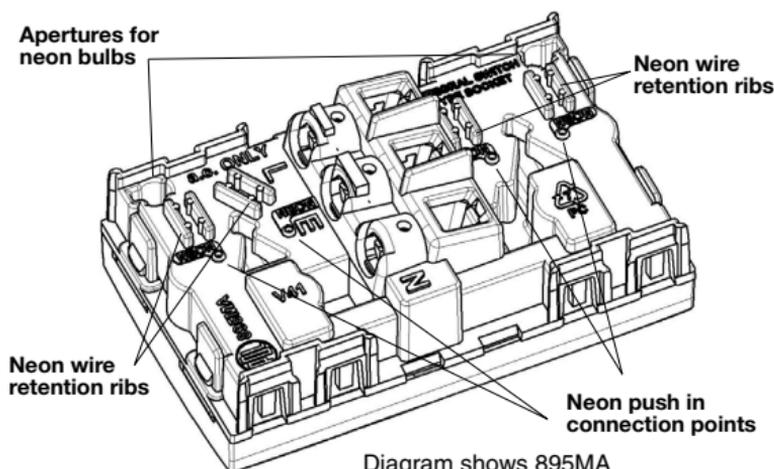


Diagram shows 895MA



New Zealand Head Office:  
 PO Box 15 355, New Lynn, Auckland, New Zealand  
 Telephone +64-9-829 0490, Fax +64-9-829 0491  
 www.schneider-electric.co.nz



PDL Industries Australia Pty Ltd  
 Locked Bag 5500, Baukham Hills Business Centre  
 Baukham Hills NSW 2153 Australia  
 Freephone 1300 735 266, Freefax 1300 735 329  
 Telephone +61 29851 2666, Fax: +61 29851 2695  
 www.pdl.com.au

