

en

Installation Guide

EVlink Pro DC 320 Charging Station
EVlink Pro DC 180 Charging Station

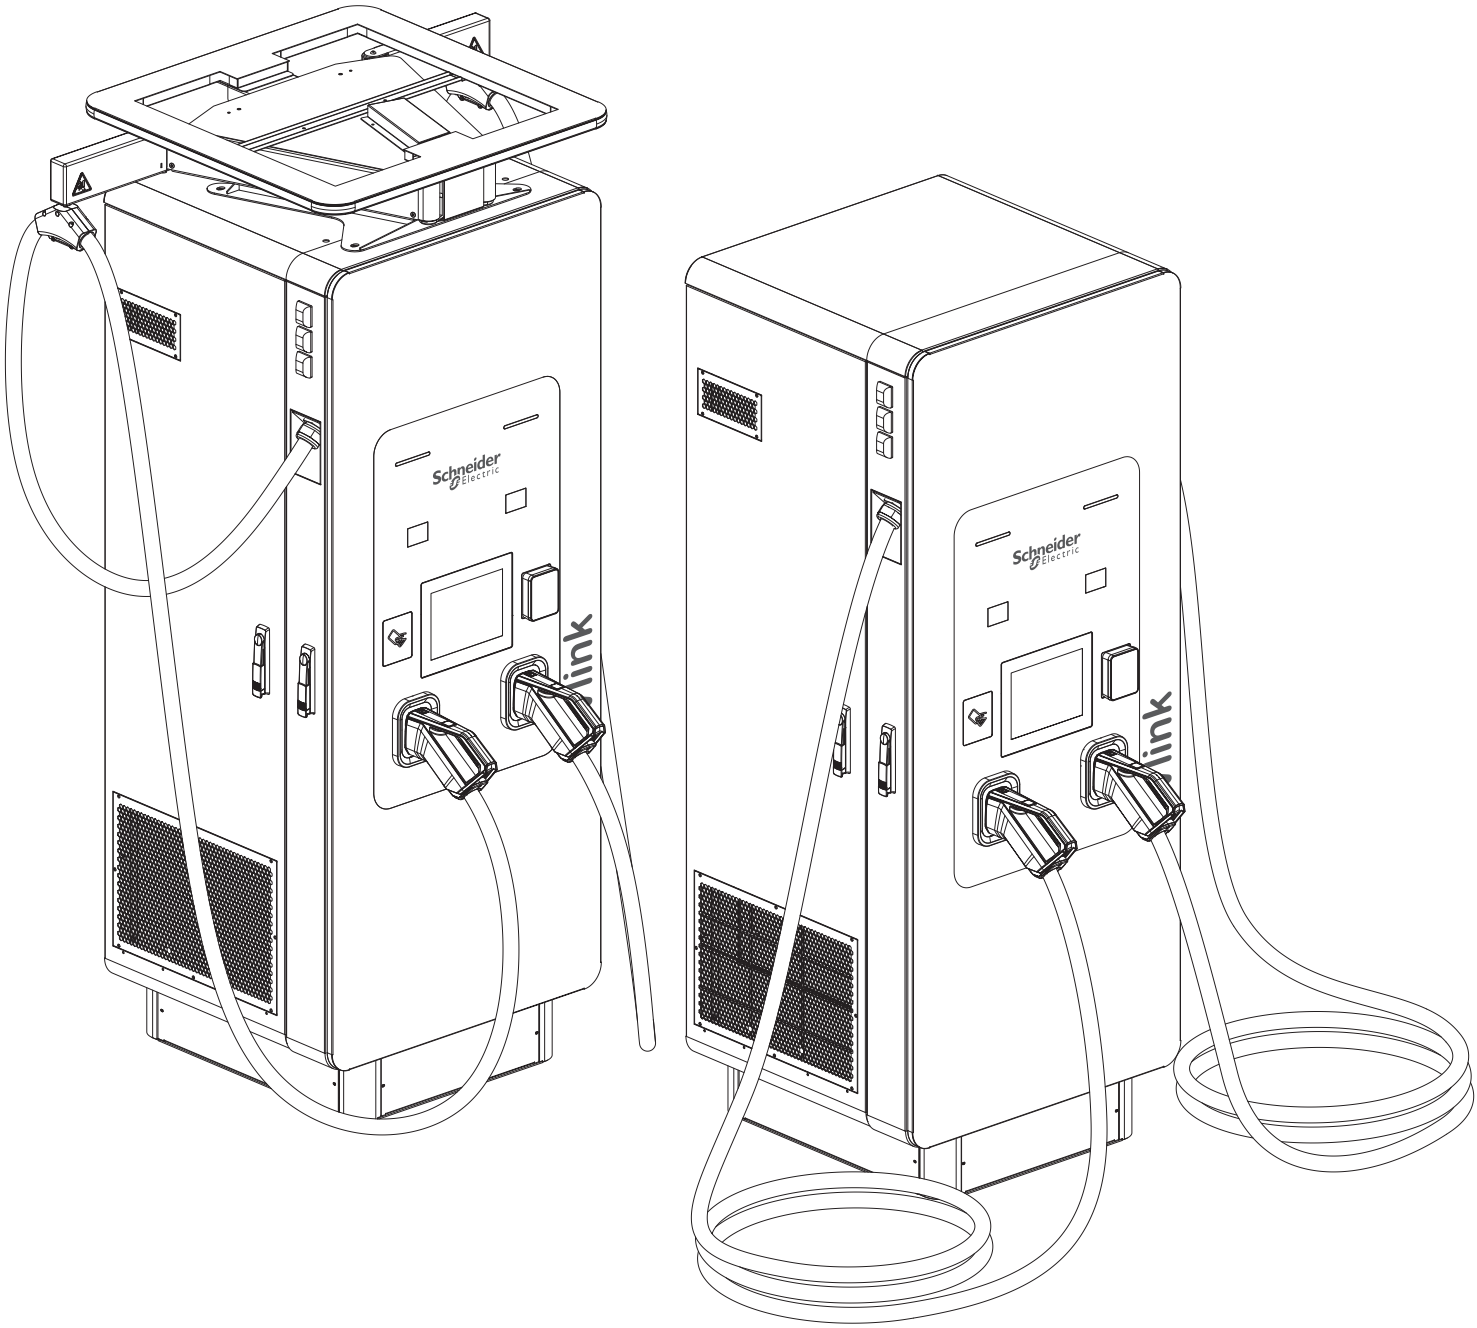

Customer Care Center

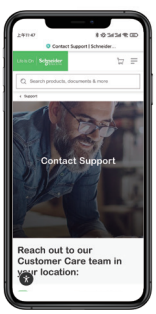

NAT2513802-04
08/2026

Legal Information 3
General 3
Radio Equipment Conformity 4
Important 5
Preface 5
1. System Overview 6
2. Installation Environment 6
3. Site Preparation 7
3.1 Maintenance Distance 7
3.2 Underground Concrete Base 7
3.3 Ventilation Requirements 9
3.4 Parking Place Arrangements Layout 10
3.5 Signage and Location 11
3.6 Bollards 11
3.7 Tilt / Collision Sensor 11
4. Electrical Requirements 11
5. Communication 13
6. Required Materials and Tools 13
7. Receiving, Handling 13
7.1 Receiving 13
7.2 Contents 14
8. Unpacking and Inspection 15
8.1 Inspection 15
8.2 Install Cable Management (If applicable) 15
9. Handling and Mounting 16
9.1 Handling and Fixing in Place 16
10. Connecting 20
10.1 Connecting the Charging Station 20
10.2 Installation of 4G SIM Card (Optional) 21
10.3 Ethernet Connection (Optional) 23
11. Finalization 25
12. Startup / Shutdown 26
12.1 Startup 26
12.2 Shutdown 26
13. Hide Emergency charge stop button (Optional) 26
14. Recycle 27
Appendix 1: Installation Check List 27
Appendix 2: Charging Station Mounting Template 28
Appendix 3: Schematic Diagram 29

Legal Information

The information provided in this document contains general descriptions, technical characteristics and/or recommendations related to products/solutions.
This document is not intended as a substitute for a detailed study or operational and site-specific development or schematic plan. It is not to be used for determining suitability or reliability of the products/solutions for specific user applications. It is the duty of any such user to perform or have any professional expert of its choice (integrator, specifier or the like) perform the appropriate and comprehensive risk analysis, evaluation and testing of the products/solutions with respect to the relevant specific application or use thereof.
The Schneider Electric brand and any trademarks of Schneider Electric SE and its subsidiaries referred to in this document are the property of Schneider Electric SE or its subsidiaries. All other brands may be trademarks of their respective owner.
This document and its content are protected under applicable copy right laws and provided for informative use only. No part of this document may be reproduced or transmitted in any form or by any means (electronic, mechanical, photocopying, recording, or otherwise), for any purpose, without the prior written permission of Schneider Electric.
Schneider Electric does not grant any right or license for commercial use of the document or its content, except for a non-exclusive and personal license to consult it on an "as is" basis.
Schneider Electric reserves the right to make changes or updates with respect to or in the content of this document or the format thereof, at any time without notice.
To the extent permitted by applicable law, no responsibility or liability is assumed by Schneider Electric and its subsidiaries for any errors or omissions in the informational content of this document, as well as any non-intended use or misuse of the content thereof.
Electrical equipment should be installed, operated, serviced, and maintained only by qualified personnel. No responsibility is assumed by Schneider Electric for any consequences arising out of the use of this material.

General

Warning Symbols Definitions

The following safety messages may appear throughout this manual or on the equipment to warn of potential hazards or to call attention to information that clarifies or simplifies a procedure.



The addition of this symbol to a “Danger” or “Warning” safety message indicates that an electrical hazard exists which will result in personal injury if the instructions are not followed.



This is the safety alert symbol.
It is used to alert you to potential personal injury hazards.
Obey all safety messages that follow this symbol to avoid possible injury or death.

⚠ DANGER

DANGER indicates a hazardous situation which, if not avoided, **will result in** death or serious injury.

⚠ WARNING

WARNING indicates a hazardous situation which, if not avoided, **could result in** death or serious injury.

⚠ CAUTION

CAUTION indicates a hazardous situation which, if not avoided, **could result in** minor or moderate injury.

NOTICE

NOTICE is used to address practices not related to physical injury. The safety alert symbol shall not be used with this signal word.

Safety Instructions

⚠⚠ DANGER

HAZARD OF ELECTRICAL SHOCK, EXPLOSION OR ARC FLASH

- Apply appropriate personal protective equipment (PPE) and follow safe electrical work practices or equivalent local standards.
- This equipment must only be installed, commissioned and serviced by qualified electrical personnel.
- Turn off all power supplying this equipment before working on or inside equipment.
- Always use a properly rated voltage sensing device to confirm power is off.
- Do not use this product if the enclosure, EV cable, or the EV connector is broken, cracked, open, or shows any other indication of damage.
- Do not put fingers or objects into the electric vehicle connector.
- The use of extension DC cables or vehicle connector adapters is not permitted.

Failure to follow these instructions will result in death or serious injury.

⚠ WARNING

RISK OF BURNING

- Do not store flammable and explosive materials near the Charging Station.
- In case of overheating or fire starting near the Charging Station, press the emergency charge stop button of the Charging Station and unplug the car. Move away from the Charging Station and call the fire department.

Failure to follow this instruction can result in death or serious injury.

⚠ CAUTION

HAZARD OF DEGRADATION OF EQUIPMENT PERFORMANCE

- You must be a licensed electrician and complete a training course to become a EVlink Pro DC Charging Station certified installer.
- Schneider Electric will not accept any liability for consequences arising from the use of this material.Do not modify any mechanical or electrical parts.
- A qualified person is a person who has the skills and know-how relating to the construction, installation and operation of electrical equipment and who has received a safety training which enables him to recognize and avoid risks.

Failure to follow these instructions can result in injury or equipment damage.

NOTICE

RISK OF DAMAGING

- EVlink Pro DC Charging Station should be installed, operated, serviced and maintained only by qualified personnel.
- Schneider Electric will not accept any liability for consequences arising from the use of this material.
- A qualified person is a person who has the skills and know-how relating to the construction, installation and operation of electrical equipment and who has received a safety training which enables him to recognize and avoid risks.

Failure to follow these instructions can result in equipment damage.

Radio Equipment Conformity

EU Declaration of Conformity

EVlink Pro DC 320/180 is in compliance with the essential requirements and other relevant provisions of Radio Equipment Directive: 2014/53/EU.

The EU declaration of conformity for EVlink Pro DC 320/180 offer (EU1006137-4) can be downloaded on: **www.se.com/docs**.

UK Declaration of Conformity

EVlink Pro DC 320/180 is in compliance with the essential requirements and other relevant provisions. of Radio Equipment Regulations 2017-UK SI 2017 No.1206.

The UK declaration of conformity for EVlink Pro DC 320/180 offer (UK1007288-1) can be downloaded on: **www.se.com/uk/docs**.

Communication Frequencies

	Operation Frequency	Output Power
RFID:	13.56 MHz	5.42dBμA/m
GSM900:	TX: 880 MHz to 915 MHz RX: 925 MHz to 960 MHz	27.92dBm
GSM1800:	TX: 1710 MHz to 1785 MHz RX: 1805 MHz to 1880 MHz	24.92dBm
WCDMA		
Band1:	TX:1920-1980 MHz RX:2110-2170 MHZ	27.11dBm
Band8:	TX:880-915 MHz RX: 925-960 MHz	27.11dBm
LTE		
Band1:	TX:1920-1980 MHz RX: 2110-2170 MHZ	27.11 dBm
Band3:	TX:1710-1785 MHz RX:1805-1880 MHz	27.11 dBm
Band7:	TX: 2500-2570 MHz RX: 2620-2690 MHz	27.11 dBm
Band8:	TX: 880-915 MHz RX: 925-960 MHz	27.11 dBm
Band20:	TX:832-862 MHz RX: 791-821 MHz	27.11 dBm
Band28:	TX: 703-748 MHz RX: 758-803 MHz	27.11 dBm
Band38:	2570-2620 MHz(TDD)	27.11 dBm
Band40:	2300-2400 MHZ(TDD)	27.11 dBm
Band41:	2496-2690 MHZ(TDD)	27.11 dBm

Wireless Frequencies

Operate Freq. Band	Frequency Range (MHz)	Modulation	Channel Bandwidth	Data Rate
IEEE 802.11b	2412~2472	DSSS	20MHz	Up to 11Mbps
IEEE 802.11g	2412~2472	OFDM	20MHz	Up to 54Mbps
IEEE 802.11n 2.4GHz 20MHz	2412~2472	OFDM	20MHz	Up to 72.2Mbps
Channel Number	IEEE 802.11b/g, IEEE 802.11n HT20: 13 Channels			
Channel Step	WiFi: Channels with 5MHz step			

Standards and Compliance

Directive RE: 2014/53/UE	**RE Directive: 2014/53/EU**
Directive RoHS: 2011/65/UE, 2015/863/UE	**RoHS Directive: 2011/65/EU: 2015/863/EU**
Based on following standards:	
EN IEC 61851-1:2019+AC:2023-12, EN 61851-23:2014+AC:2016-06, EN 61851-24:2014 + AC:2015, EN 61000-6-2:2005 + AC 2005,	
EN IEC 61000-6-2:2019*, EN 61000-6-4:2007 + A1:2011, EN IEC 61000-6-4:2019, EN IEC 61851-21-2:2021***	
EN 301 489-1 V1.9.2(2011-09), EN 301 489-1 V2.2.3(2019-11)**, EN 301 489-3 V2.3.2(2023-01), EN 301 489-17 V3.2.4(2020-09),**	
EN 301 489-17 V3.3.1(2024-09), EN 301 489-52 V1.2.1(2021-11), EN 301 489-52 V1.3.1(2024-11)	
EN 300 330 V2.1.1(2017-02), EN 301 511 V12.5.1(2017-03), EN 301 908-1 V15.2.1(2023-01), EN 301 908-2 V13.1.1(2020-06),	
EN 301 908-13 V13.2.1(2022-02), EN 301 908-13 V13.3.1(2024-10)***, EN 300 328 V2.2.2(2019-07)**	
EN 62311:2008, EN IEC 62311:2020	
IEC 61439-7:2018	
EN ISO 15118-1:2019, EN ISO 15118-2:2016, EN ISO 15118-3:2016, EN ISO 15118-4:2019, EN ISO 15118-5:2019	
EN IEC 63000:2018	
EN 18031-1:2024, EN 18031-2:2024, EN 18031-3:2024	

* The EN IEC 61000-6-2:2019 is not an harmonized standard but the EVlink Pro DC 320/180 is already compliant with EN IEC 61000-6-2:2019.

** The EN IEC 61000-6-4:2019 is not an harmonized standard but the EVlink Pro DC 320/180 is already compliant with EN IEC 61000-6-4:2019.

*** The EN IEC 61851-21-2:2021 is not an harmonized standard but the EVlink Pro DC 320/180 is already compliant with EN IEC 61851-21-2:2021.

**** The EN 301 489-1 V2.2.3(2019-11) is not an harmonized standard but the EVlink Pro DC 320/180 is already compliant with EN 301 489-1 V2.2.3(2019-11).

***** The EN 301 908-13 V13.3.1(2024-10) is not an harmonized standard but the EVlink Pro DC 320/180 is already compliant with EN 301 908-13 V13.3.1(2024-10).

Important

To help you make the best use of your Charging Station, we have prepared this manual with the utmost care.
It provides all the information you need to prepare for the installation and to install your equipment.
We urge you to read it attentively and follow its instructions.

- The product must be installed according to the specifications and requirements as defined by Schneider Electric. No responsibility is assumed by Schneider Electric if these requirements are not respected.
- Non-approved installation methods are performed at the risk of the contractor and void the (limited) warranty.
- Under no circumstances will compliance with the information in this manual relieve the user of his/her responsibility to comply with all applicable codes or safety standards.
- This document describes the most used installation and mounting scenarios.
- If situations arise in which it is not possible to perform an installation following the procedures provided in this document, contact Schneider Electric.
- Schneider Electric is not responsible for any damages that may result from custom installations that are not described in this document or for any failure to adhere to installation recommendations.

Preface

This guide describes the planning and physical installation of the EVlink Pro DC 320 or 240 or 180 or 120 Charging Stations.
The EVlink Pro DC Charging Stations are easy to install (Mode 4) for electric vehicles.
Fast Charging Stations are electrical installations with high electric currents.
Therefore, the installation must be planned carefully, and must be done by certified personnel only (according to local standards).

The EVlink Pro DC 240 is physically the same Charging Station as a EVlink Pro DC 320.
The EVlink Pro DC 120 is physically the same Charging Station as a EVlink Pro DC 180.
The main difference is the output power it can deliver and therefore also the input power needed.

As the physical installation of all types is equal, they will be referred to hereafter as EVlink Pro DC 320/180 only and this will account for all types, unless specifically stated otherwise.
EVlink Pro DC 320/180 is available in different versions. The different versions are described in the scope of application section.

NOTE: Installing the EVlink Pro DC 320/180 Charging Station requires at least two people and takes approximately 1-2 hours. This time estimate does not include the time needed to commission the Charging Station.

Scope of Application

Type of equipment applicable to this manual: EVlink Pro DC 120 – 180; EVlink Pro DC 240 – 320
List of references supported are:

Commercial Reference	Nominal Power	Vehicle Connector	Cable Management	Cable Range (m)	Payment Terminal
EVD2S320TBB-IEC	320kW DC	2 x CCS2	Yes	3.8	No
EVD2S240TBB-IEC	240kW DC	2 x CCS2	Yes	3.8	No
EVD2S180TBB-IEC	180kW DC	2 x CCS2	Yes	3.8	No
EVD2S120TBB-IEC	120kW DC	2 x CCS2	Yes	3.8	No
EVD2S320TBBC7-IEC	320kW DC	2 x CCS2	No	7.5	No
EVD2S180TBBC7-IEC	180kW DC	2 x CCS2	No	7.5	No
EVD2S320TBBC10-IEC	320kW DC	2 x CCS2	No	10	No
EVD2S240TBBC10-IEC	240kW DC	2 x CCS2	No	10	No
EVD2S320TBB-AN	320kW DC	2 x CCS2	Yes	3.8	No
EVD2S240TBB-AN	240kW DC	2 x CCS2	Yes	3.8	No
EVD2S180TBB-AN	180kW DC	2 x CCS2	Yes	3.8	No
EVD2S120TBB-AN	120kW DC	2 x CCS2	Yes	3.8	No
EVD2S320TBBCC-AN	320kW DC	2 x CCS2	Yes	3.8	Payter Apollo
EVD2S180TBBCC-AN	180kW DC	2 x CCS2	Yes	3.8	Payter Apollo
EVD2S320TBBC7-AN	320kW DC	2 x CCS2	No	7.5	No
EVD2S180TBBC7-AN	180kW DC	2 x CCS2	No	7.5	No
EVD2S180TBBC10-IEC	180kW DC	2 x CCS2	No	10	No
EVD2S150TBBC10-IEC	150kW DC	2 x CCS2	No	10	No
EVD2S120TBBC10-IEC	120kW DC	2 x CCS2	No	10	No
EVD2S320TBB-T	320kW DC	2 x CCS2	Yes	3.8	No
EVD2S240TBB-T	240kW DC	2 x CCS2	Yes	3.8	No
EVD2S180TBB-T	180kW DC	2 x CCS2	Yes	3.8	No
EVD2S150TBB-T	150kW DC	2 x CCS2	Yes	3.8	No
EVD2S120TBB-T	120kW DC	2 x CCS2	Yes	3.8	No
EVD2S320TBBC7-T	320kW DC	2 x CCS2	No	7.5	No
EVD2S240TBBC7-T	240kW DC	2 x CCS2	No	7.5	No
EVD2S180TBBC7-T	180kW DC	2 x CCS2	No	7.5	No
EVD2S150TBBC7-T	150kW DC	2 x CCS2	No	7.5	No
EVD2S120TBBC7-T	120kW DC	2 x CCS2	No	7.5	No
EVD2S320TBBC10-T	320kW DC	2 x CCS2	No	10	No
EVD2S240TBBC10-T	240kW DC	2 x CCS2	No	10	No
EVD2S180TBBC10-T	180kW DC	2 x CCS2	No	10	No
EVD2S150TBBC10-T	150kW DC	2 x CCS2	No	10	No
EVD2S120TBBC10-T	120kW DC	2 x CCS2	No	10	No

*For more customized commercial reference, please contact Schneider Electric.

⚠ CAUTION

RISK OF TRIPPING ON LOOSE CABLE

- For versions not equipped with cable management system, it is mandatory to allocate a solution or space to place the cable in order to prevent cars from running on it.


Failure to follow these instructions can result in injury or equipment damage.

Available Documentation

EVlink Pro DC available documents for each phase of the project:

Document	Reference	Content	Audiences
EVlink Pro DC 320/180 Datasheet	**998-23989650**	Full Charging Station specifications	Site designer, installer, and station operator
EVlink Pro DC 320/180 Installation Guide	**NAT2513802**	Civil, mechanical, and electrical installation guidelines	Site engineer or installer/contractor
EVlink Pro DC 320/180 Owners Guide	**NAT2513901**	Operation and maintenance guidelines	Site operator and end user
EVlink Pro DC 320/180 Commissioning Guide	**NAT2514001**	Electrical and Communication guidelines	Site engineer or installer/contractor/station operator
EVlink Pro DC 320/180 OCPP Guide	**DOCA0311_IEC**	Integration rule of charger for Charge Point Operator	Charge Point Operator / Contractor
EVlink Pro DC 320/180 Cybersecurity Guide	**DOCA0310EN_IEC**	Cybersecurity rules and guidelines	Charge Point Operator / Contractor

1 System Overview

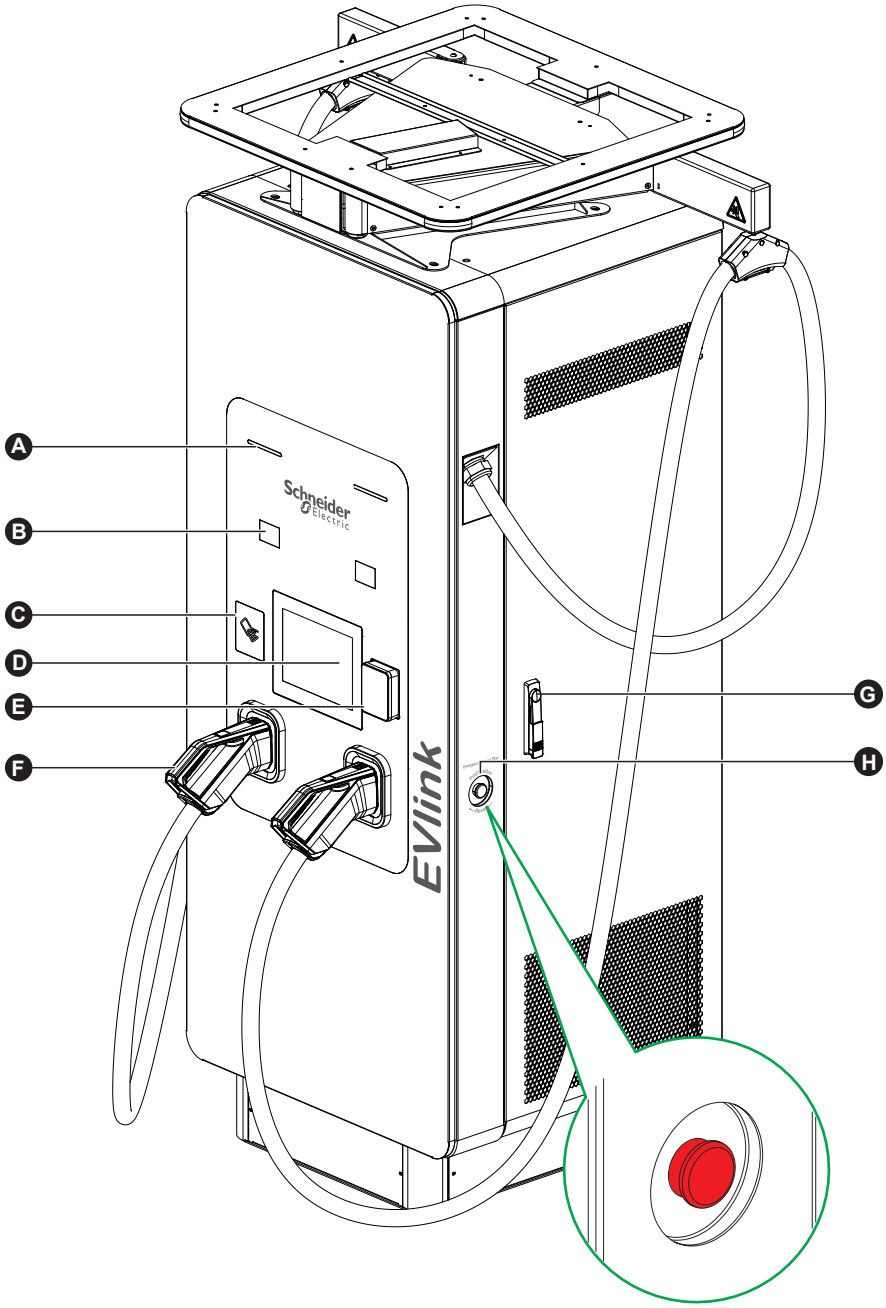

A	Indicator lights
B	DC energy meter
C	Card tapping area
D	Touch screen
E	Credit card reader
F	Vehicle connector slot
G	Door handle with Lock
H	Emergency Charge Stop

Image showing version equipped with cable management system and credit card reader.

2 Installation Environment

The environmental conditions listed in the table below should be taken into consideration when selecting the installation site of the EVlink Pro DC Charging Station.

Environmental parameter	Permissible Conditions
EMC environment	Industrial environment – Class A
Ambient temperature	-30°C ~ 50°C, derating after 50°C
Humidity	5%~ 95%
Altitude	Up to 2000 m
Degree of protection	IP55
Mechanical impact protection	IK10 (IK08 for screen)
Pollution degree	PD3
Mounting method	Stationary equipment, ground mounted or floor mounted
Ambience	Non explosive environments Housing corrosion protection level C4M Example of environment ■ Outdoor: Urban and industrial atmospheres, moderate sulphur dioxide pollution, coastal area with low salinity ■ Indoor: Production rooms with high humidity and some air pollution
Location	Avoid accumulation of sand, dust, snow etc with non-restricted access

NOTE: Contact Schneider Electric if the Charging Station will be installed closer than 4 km to a sea/ocean coastline.

3 Site Preparation


3.1 Maintenance Distance

NOTICE

RISK OF EQUIPMENT DAMAGE

Always follow the instructions described below when Charging Stations need to be installed near walls or other obstacles, a certain maintenance distance needs to be allocated.

Failure to follow these instructions can result in equipment damage.

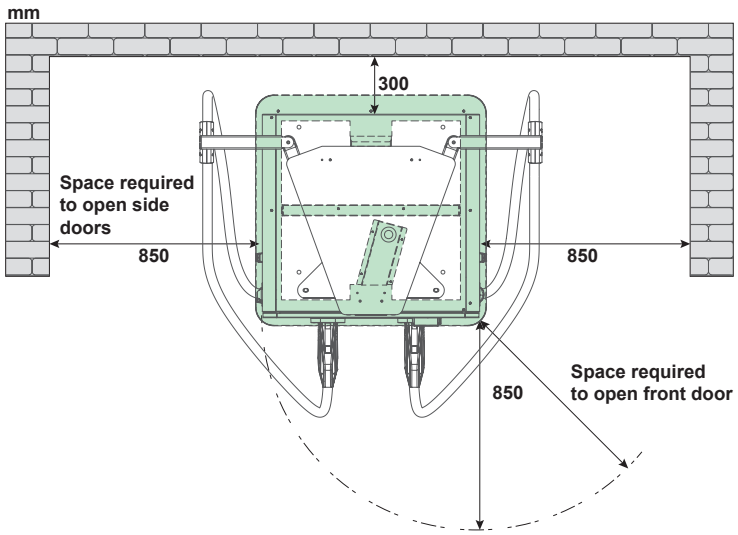

NOTE: Ensure that enough space is available around the installation pad to use a forklift and other lifting equipment, unpack crates, remove packing materials, and allow two people to freely move throughout the area.
For versions equipped with Cable Management System, It is recommended to allow for 500 mm clear space above the Charging Station to allow for maintenance.

3.2 Underground Concrete Base

⚠ WARNING

HAZARD OF HEAVY EQUIPMENT FALLING


- The EVlink Pro DC shall be mounted on concrete flooring. If the Charging Station will be installed outdoors in sandy or soil ground or on a frost line, a concrete base is mandatory.
- Always follow the instructions and information provided in this guide or a Schneider Electric-approved mounting solution, to install the EVlink Pro DC 320/180.
- Non-approved installation methods are performed at the risk of the contractor and void the limited warranty.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

Before beginning work, check that the site meets these civil and mechanical requirements outlined below, as illustrated in the following image.

1. Underground concrete base guidelines


- The concrete pad must have a site drawing approved by a structural engineer for this specific site considering the soil behavior and/or any frost line and conforms to the mentioned specifications.
  Ensure a flat surface level with slight outward slope to drain any water, ensuring no obstacles prevent water draining from the base.
  The top of the concrete base must not be lower than the 0 finish floor level. However it may be higher according to the different site situations and local regulations.
  Please consider the height of the screen and the vehicle connector when designing the concrete base elevation.

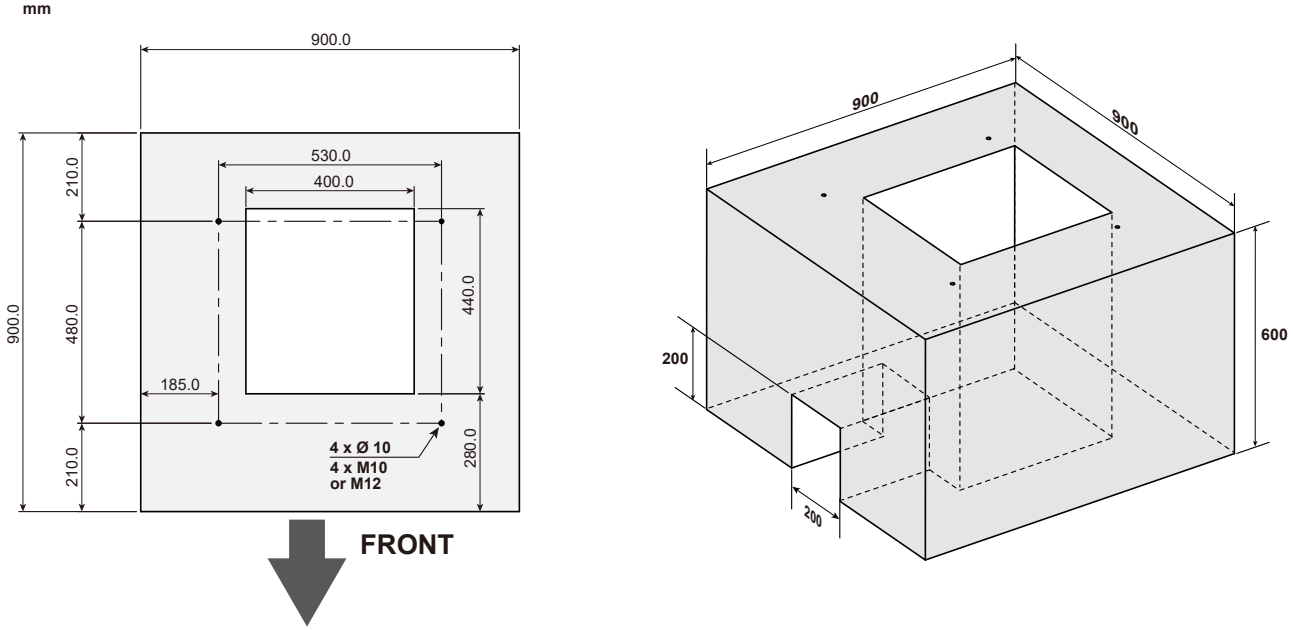

- After the concrete has dried, 4 x M10 or M12 screws with length L = 250 mm are fixed into the concrete pad according to the provided template (Appendix 2) with 30 - 40 mm of threads exposed.

3.2 Underground Concrete Base


2. Installation and construction

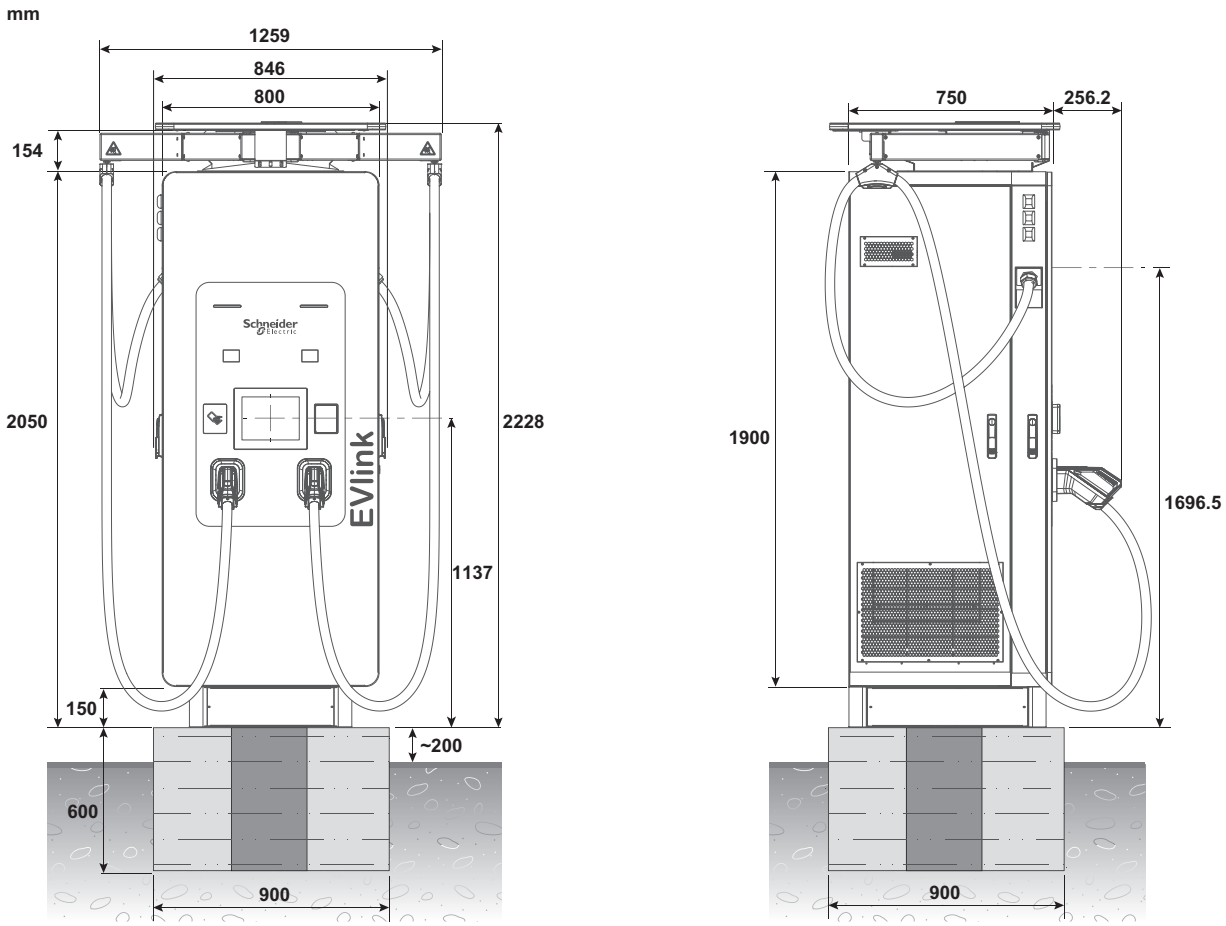

3 Site Preparation

3.3 Ventilation Requirements

Air cold ventilation of the Charging Station

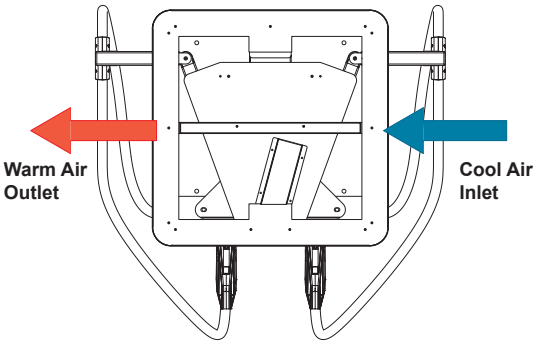

NOTE: If necessary, take precautions to prevent snow or objects from blocking the inlets, outlets or the operation of the cable management system.


3.4 Parking Place Arrangements Layout

It is possible to position the EVlink Pro DC 320/180 such that several parking spots can be served. Two vehicles can be charged at a time.
Some possible arrangements of parking places in relation to the EVlink Pro DC 320/180 are shown in the figures that follow.


NOTE: The usable connector cable range with optional Cable Management System is 3.8 m.
For all other references the full length of the cable is usable providing extended range of 7.5 m.

- The cover ranges of 5m charging cable with cable management:

Left

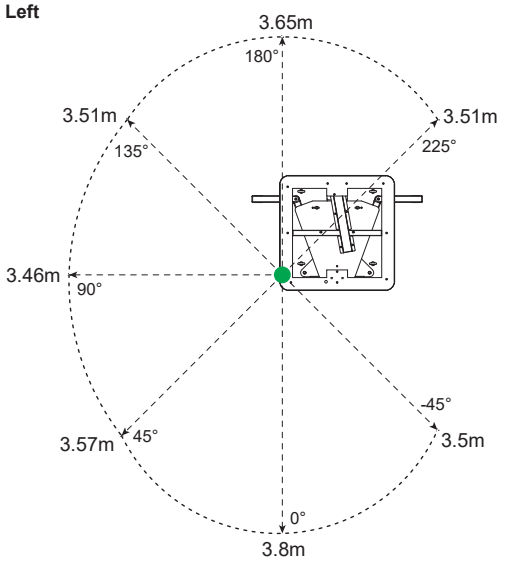


Right

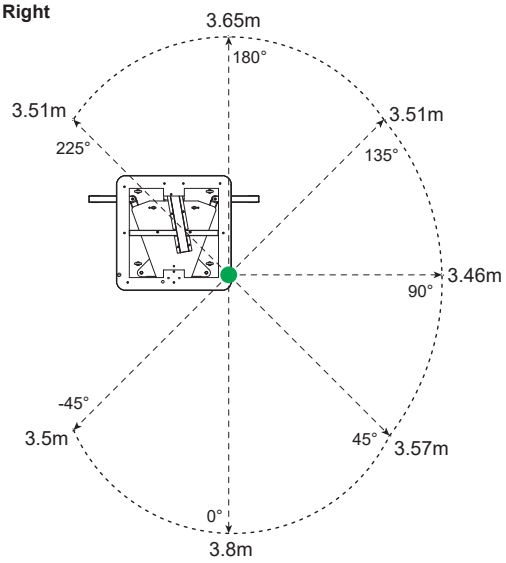


- The cover ranges of 7.5m charging cable without cable management:

Left

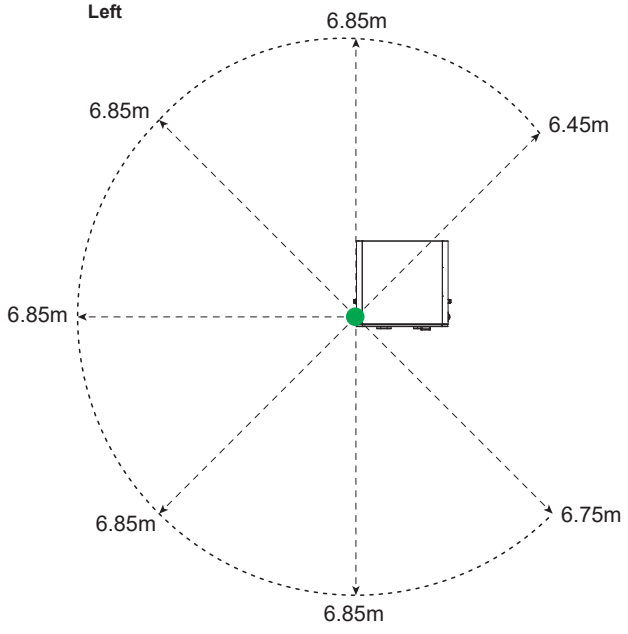

Right

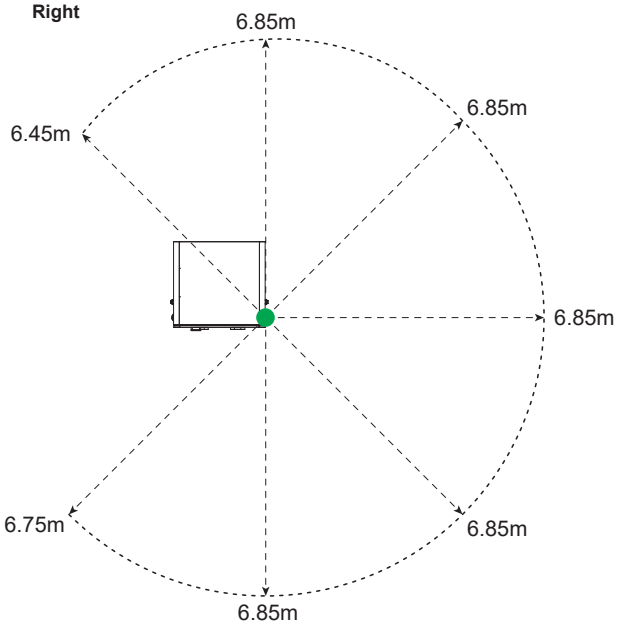


3 Site Preparation


3.4 Parking Place Arrangements Layout

- The cover ranges of 10m charging cable without cable management:

Left

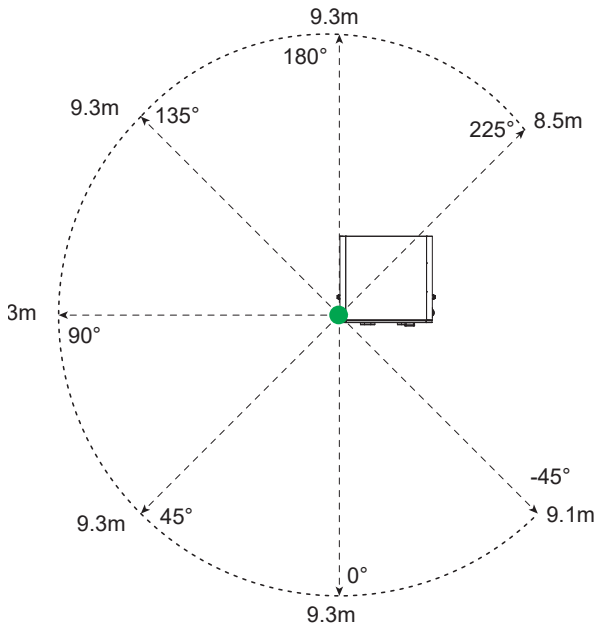

Right

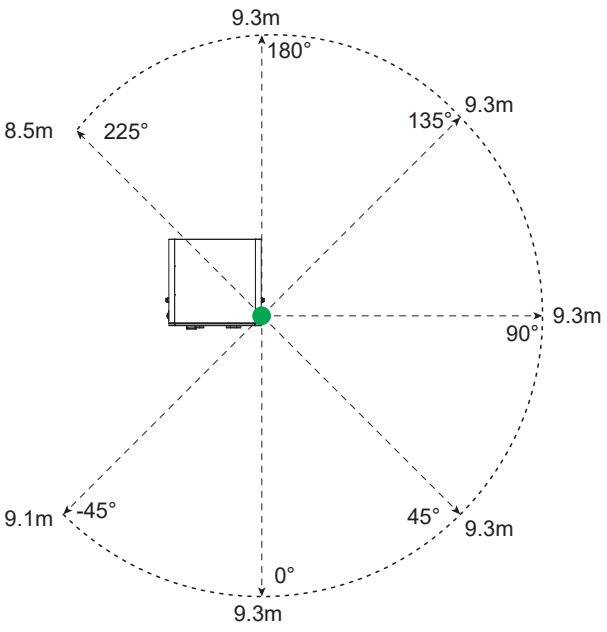

3.5 Signage and Location

Use road signs and/or special marking to direct drivers to the Charging Station locations and to distinguish the Electric Vehicle parking spaces from ICE (Internal Combustion Engine) vehicles spaces.
To provide a secure comfortable environment for users, and to prevent vandalism and/or theft:

- Install the Charging Station in a location where it can be clearly seen and/or monitored.
- Use 24/7 security control.
- Install sufficient lighting around the Charging Station.
- For a comfortable user experience it is recommended to install a shed or other protection from the direct sunlight while using the Charging Station.

3.6 Bollards

It is advised to place bollards around the Charging Station to protect against cars collisions.

NOTE: Bollards limiting the access

When installing bollards around the Charging Station make sure all doors can still be opened to be able to service the Charging Station.
In case bollards are installed that are blocking the doors, make sure they are the removable kind.
If removable bollards are used, ensure the tool/key required to remove them is available in case of the Charging Station requiring services.

3.7 Tilt / Collision Sensor

EVlink Pro DC 320/180 is equipped with a tilt sensor that will interrupt output power/charging session if the sensor detects a tilt in the cabinet in any direction, for example if a vehicle collides with the Charging Station.
If triggered the indicator light will turn RED and any ongoing charging session will stop. The relevant error message will be shown on screen and an error code will be relayed to the OCPP backend if connected.

4 Electrical Requirements

⚠ WARNING

RISK OF FIRE AND/OR EQUIPMENT DAMAGE


- Ensure the appropriate circuit protection, and metering is in place at the installation site.
- Ensure that a grounding conductor that complies with local codes is properly grounded to earth at the power distribution equipment.
- Ensure that a correctly rated, dedicated breaker is installed for each Charging Station.
- In the event of irregularities or disturbances in the operation of the device press the emergency charge stop button and unplug your car.


Failure to follow these instructions can result in death, serious injury, or equipment damage.

The electrical requirements for each type of Charging Station shall be followed according to this table:

Electrical Parameters				
Rated supply voltage	380 V – 415 Vac +/- 10 % 50 / 60 Hz			
Earthing system	TT/TN-S / TN-C-S			
Protection against electric shock	Class I			
Connection method	Permanently connected			
Rated insulation voltage	500 V			
Rated impulse withstand voltage	4 kV			
Rated conditional short-circuit current	25 kA			
Power factor	0.99 at nominal output power			
Efficiency	97 % at nominal output power			
THDi	<5 % at nominal output power			
Upstream Protection				
Circuit breaker* *It is required to use circuit breaker, and type A residual current protection may be installed upstream in accordance with local regulations or customer application.	3PH + N + PE			
Nominal output power	120 kW	180 kW	240 kW	320 kW
Rated input current	190 A	285 A	380 A	507 A
Max input current	211 A	316 A	422 A	563 A
Upstream Cables				
Suggested cable type	U1000 R2V Fine or Extra Fine Wire Strands			
Cable Entry**				
Conductor cross section/phase (For 120~180kW range):	■ Suggested cable with **copper** conduct: 0.6kV/1kV 4 x 185mm² + 1 x 95mm² ■ Suggested cable with **aluminum** conduct: 2 x (0.6kV/1kV 4 x 120mm² + 1 x 70mm²)			
Conductor cross section/phase (For 240~320kW range):	■ Suggested cable with **copper** conduct: 2 x (0.6kV/1kV 4 x 150mm² + 1 x 95mm²) ■ Suggested cable with **aluminum** conduct: 2 x (0.6kV/1kV 4 x 240mm² + 1 x 120mm²)			
Maximum outer cable diameter (with factory-fitted glands):	32mm (L1/L2/L3/N/PE)			

**For additional flexibility in installations with different cable cross sections and/or number of cables per phase, the EVlink Pro DC 320/180 is delivered with 2 different cable entry plates. Factory-fitted glands only provide a single PE terminal, if using a dual power supply, combine the two PE cables outside the Charging Station and then insert through the PE gland.

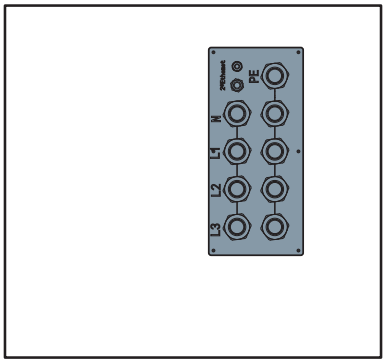

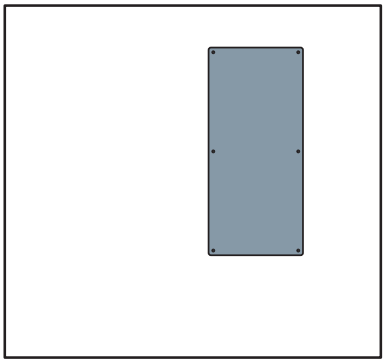

NOTE:
- The suggested cross-section above is based on the following specific conditions:
  - For the 240 kW to 320 kW Charging Station, the upstream circuit breaker rating and its protection settings are assumed to be 630 A; for the 120 kW to 180 kW Charging Station, the assumed value is 400 A;
  - Cable type: single-core or multi-core, copper or aluminum conductor, XLPE insulation, 90°C conductor temperature;
  - Single layer touching arrangement on unperforated cable tray systems (reference installation method C in IEC 60364-5-52);
  - 30°C ambient air temperature.
- The customer or installer shall calculate and verify the cable cross-section in accordance with IEC 60364-4-43, IEC 60364-5-52 and the following on-site conditions:
  - Upstream circuit breaker rating and protection setting;
  - Cable type;
  - Cable conductor;
  - Cable insulation and conductor temperature;
  - Methods of installation;
  - Ambient temperature;
  - Cable length and allowable voltage drop.

  If the customer have future upgrade plans, it is recommended to install electric infrastructure suitable for the future installation.
- According to the section 524.2.3 of IEC 60364-5-52:2009 and section 431.2.1 of IEC 60364-4-43:2023, if a detection of overload current in the neutral conductor has been provided in the upstream breaker, the cross-sectional area of the neutral conductor may be lower than the cross-sectional area of the line conductors.
- If the cable size exceeds the recommendations above and cannot pass through the glands, please use the other entry plate and drill/punch a suitably sized hole on-site.
- Bimetallic lugs must be used in the case of Aluminum cables.

5 Communication

1. Cellular and wireless signal

Use a signal detection device to ensure the signal is within the recommended strength according to the below guidelines:

Signal Quality	Cellular Signal	CSQ
	Excellent	> 15
	Fair	2 to 14
	Poor	< 2

(Note that these numbers are negative, so -70 dBm is stronger than -85 dBm,and -90 dBm is weaker).

Signal Quality	Wireless LAN Signal (WIFI)	CSQ
	Excellent	> -70
	Fair	-70 to -90
	Poor	< -90

2. Ethernet cable

Use RJ45 cat 6, shielded, twisted pairs.

6 Required Materials and Tools

1. Specific equipment

Before you go to the site, please prepare the following tools/equipment:

- Forklift/Crane
- Step ladder
- Personal Protective Equipment (PPE)
- Cable cutter
- Wire stripper
- Wire presser/pliers
- Power drill
- Spirit level
- Toolbox
- Multimeter
- LOTO (Lock Out Tag Out) equipment

NOTE: The above tools should be selected according to the actual situation on-site.

7 Receiving, Handling

7.1 Receiving

⚠⚠ DANGER

HAZARD OF HEAVY EQUIPMENT FALLING

Do not stand or move beneath the crate as it is being lifted or tilted.

Failure to follow these instructions will result in death or serious injury.

⚠ WARNING

HAZARD OF EQUIPMENT FALLING

- When handled from the bottom, the Charging Station must be lifted with care and held in place during transport by properly strapping them onto the forklift or handling equipment.
- Always transport and store the Charging Station in its original packaging.
- Ensure the load rating of all lifting equipment (forklift, crane and lifting straps, etc) is adequate for the weight of the Charging Station as shown below.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

⚠⚠ DANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

- Do not install the Charging Station during harsh weather.
- If you must complete the installation in rain or wind, you must use a weather-proof shelter that covers all boxes and components to avoid water entering inside the enclosure.
- Ensure upstream protection breaker is locked in the Open (Off) position and a voltage absence test is performed before starting the installation.
- Do not use power tools during installation or servicing. Over-torquing can damage the equipment.

Failure to follow these instructions will result in death or serious injury.


7.2 Contents

Inside the EVlink Pro DC shipping box you should find the below mentioned items and documents.
If there are any missing items or documents, please contact Schneider Electric for the necessary replacements.

Item	Quantity
Charging Station mounting template	1
EVlink Pro DC Station (120, 180, 240 or 320)	1
Keys	3
Lifting rings	4
Generic RFID badge (for testing)	2
User guidance sticker	1
Bottom entry cable plate	2
Emergency charge stop cover plate	1
Cable hook only for references with 10m output cable (hook x 1, M6x60 wall mounting expansion screws x 5)	1
Documents	
Installation manual	

Each EVlink Pro DC (120, 180, 240 or 320) Charging Station ships in one crate. Ensure you have correct crate at the installation site.

Commercial Reference	Shipping dimensions (W*D*H)	Shipping weight (kg)
EVD2S320TBB-IEC	1185*1240*2460mm	756
EVD2S240TBB-IEC	1185*1240*2460mm	722
EVD2S180TBB-IEC	1185*1240*2460mm	716
EVD2S120TBB-IEC	1185*1240*2460mm	684
EVD2S320TBBC7-IEC	1185*1240*2460mm	737
EVD2S180TBBC7-IEC	1185*1240*2460mm	697
EVD2S320TBBC10-IEC	1185*1240*2460mm	753
EVD2S240TBBC10-IEC	1185*1240*2460mm	719
EVD2S320TBB-AN	1185*1240*2460mm	756
EVD2S240TBB-AN	1185*1240*2460mm	722
EVD2S180TBB-AN	1185*1240*2460mm	716
EVD2S120TBB-AN	1185*1240*2460mm	684
EVD2S320TBBCC-AN	1185*1240*2460mm	756
EVD2S180TBBCC-AN	1185*1240*2460mm	716
EVD2S320TBBC7-AN	1185*1240*2460mm	737
EVD2S180TBBC7-AN	1185*1240*2460mm	697
EVD2S180TBBC10-IEC	1185*1240*2460mm	713
EVD2S150TBBC10-IEC	1185*1240*2460mm	698
EVD2S120TBBC10-IEC	1185*1240*2460mm	683
EVD2S320TBB-T	1185*1240*2460mm	788
EVD2S240TBB-T	1185*1240*2460mm	754
EVD2S180TBB-T	1185*1240*2460mm	748
EVD2S150TBB-T	1185*1240*2460mm	733
EVD2S120TBB-T	1185*1240*2460mm	718
EVD2S320TBBC7-T	1185*1240*2460mm	737
EVD2S240TBBC7-T	1185*1240*2460mm	703
EVD2S180TBBC7-T	1185*1240*2460mm	697
EVD2S150TBBC7-T	1185*1240*2460mm	682
EVD2S120TBBC7-T	1185*1240*2460mm	667
EVD2S320TBBC10-T	1185*1240*2460mm	753
EVD2S240TBBC10-T	1185*1240*2460mm	719
EVD2S180TBBC10-T	1185*1240*2460mm	713
EVD2S150TBBC10-T	1185*1240*2460mm	698
EVD2S120TBBC10-T	1185*1240*2460mm	683

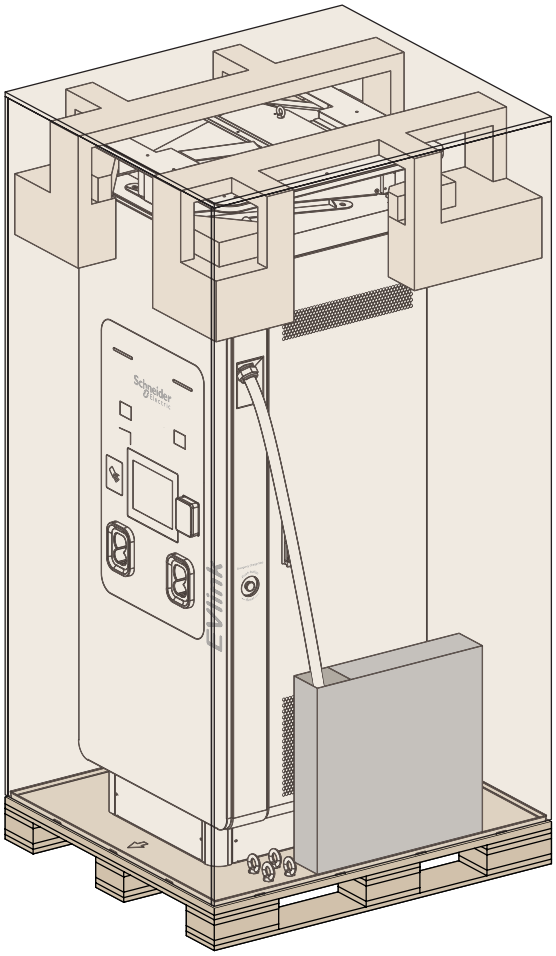

*For more customized commercial reference, please contact Schneider Electric.

8 Unpacking and Inspection

⚠ CAUTION

HAZARD OF SHARP EDGES
It is recommended to wear protection gloves when unpacking the Charging Station as there could be sharp edges.
Failure to follow these instructions can result in injury.

⚠ CAUTION

HAZARD OF POTENTIAL LOOSE COMPONENTS INSIDE BOX
- At receiving always inspect the Tilt and Shock sensors on the crate for potential damage or mishandling.
- If the sensors are triggered do not attempt to unpack, inform the transport agent and refuse reception.

Failure to follow these instructions can result in injury or equipment damage.




⚠ CAUTION

RISK OF EQUIPMENT DAMAGE
- 2 operators and safety step ladders are required to safely unbox the EVlink Pro DC Charging Station.

Failure to follow these instructions can result in injury or equipment damage.

Unpacking steps:
- Place the Charging Station crate close to where it will be installed.
- Remove the top cover of the wooden crate.
- Proceed to removing the side panels of the crate.
- Remove the inner foam protection profiles.
- Carefully remove the plastic wrapping around the charger.

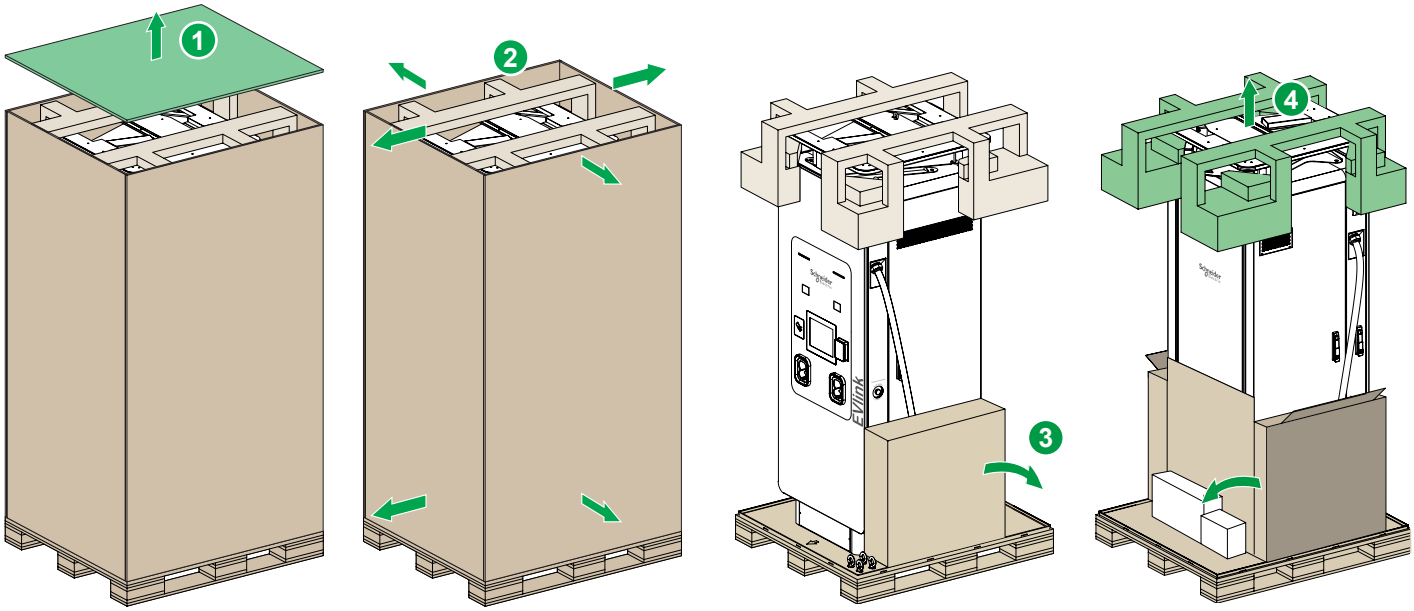


8.1 Inspection

After unpacking the EVlink Pro DC Charging Station, the installer should check all the items below:
- Appearance: check whether the appearance of the Charging Station is damaged, whether there is any damage such as paint loss, scratch, deformation, and whether the structure of Charging Station is damaged during transportation.
- Labels: check whether the nameplate of Charging Station is correct, clear and complete, and whether the safety warning signs are posted in place.
- Contents: check whether the documents and accessories are complete according to the list of contents above.
- After inspection ensure the Charging Station is covered/protected from the weather.

8.2 Install Cable Management (If applicable)

Unpack the DC cable from its attached BOX and attach to the cable management system before lifting the charger.

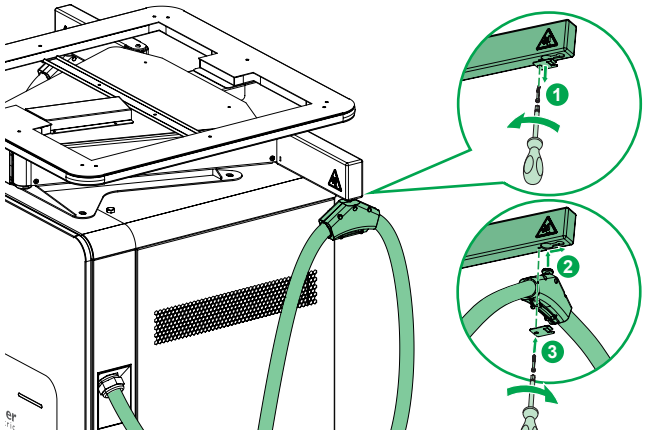

- Remove the sealing plate.
- Insert the axis of charging cable clamp into the hole of the CMS. Move the charging cable clamp to the right position.
- Install the sealing plate.

9 Handling and Mounting

9.1 Handling and Fixing in Place


⚠ WARNING

HAZARD OF HEAVY EQUIPMENT FALLING


- The strength of the lifting slings must be sufficient to bear the weight of the EVlink Pro DC Charging Station.
- Extreme caution must be exercised while handling, lifting, or hoisting the Charging Station.
- Personal Protective Equipment required, hard hat, safety shoes, gloves.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

1. Before hoisting:

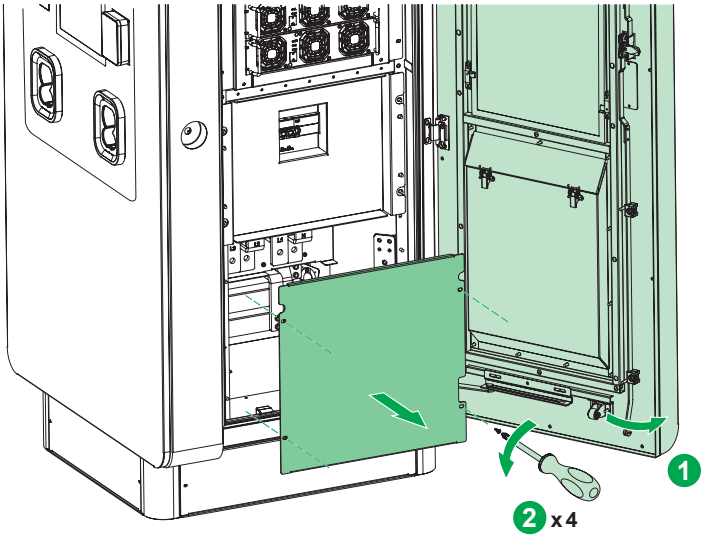


- Before lifting the Charging Station open the right door and remove the cover plate to expose the copper bars.
- Replace with the provided gland plate for larger cross sections if required.
- Romove the lifting rings from the pallet.

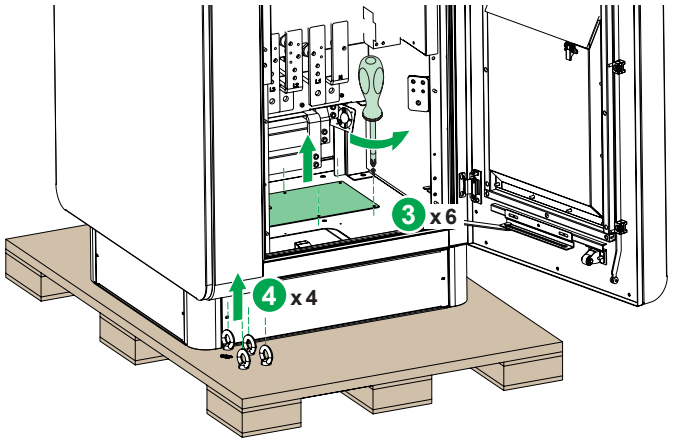



2. Hoisting:

Unscrew 4 screws.

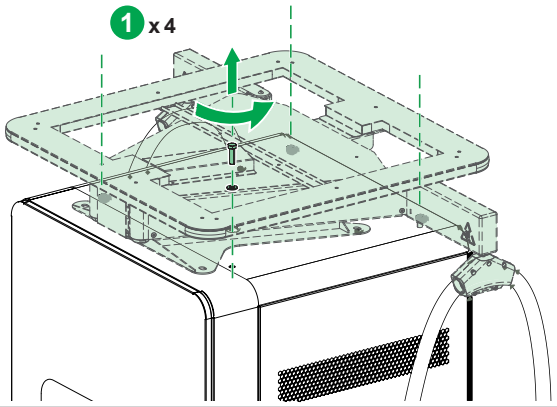

Screw the rings.

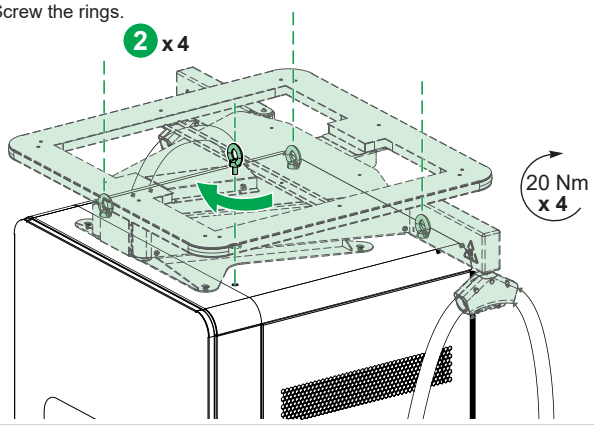

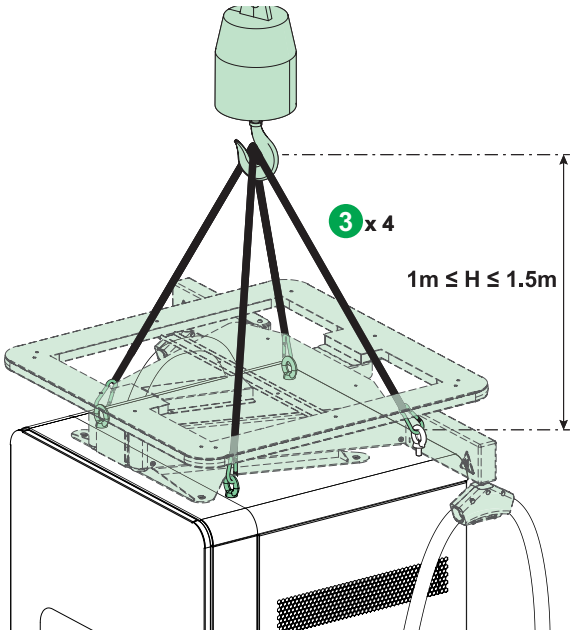


- Each of the top 4 lifting rings shall have a rope at each lifting point.
- Keep the hoisting angle of the rope between 45° and 60°.
- The force center of the hook shall be located at a symmetrical force center.
- Ensure the suitable rope length.

NOTE: The Charging Station can be damaged if the suitable rope length is not used. The door shall be closed when lifting the charger.

9 Handling and Mounting


9.1 Handling and Fixing in Place


2. Hoisting:

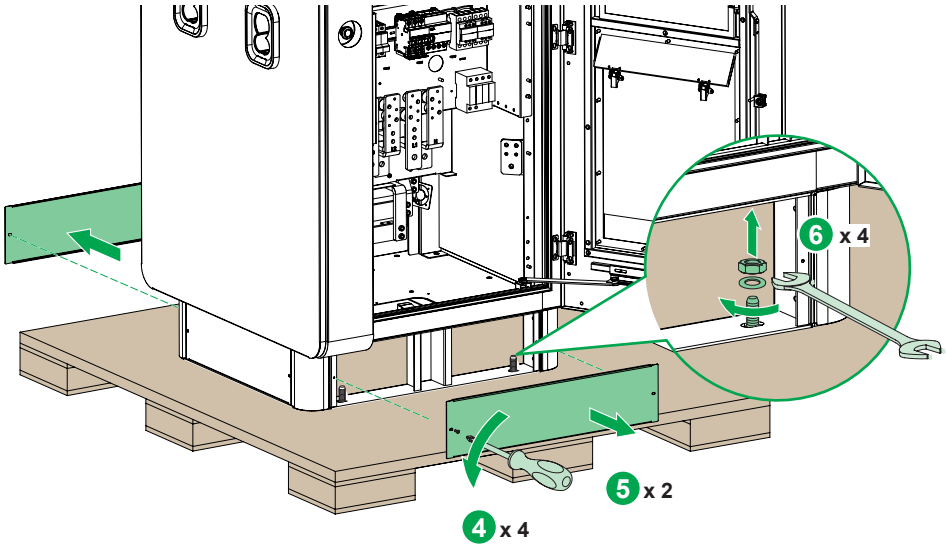


- Ensure the charger is supported from top before removing the pallet.
- The Charging Station can be hoisted.

3. Fixing:

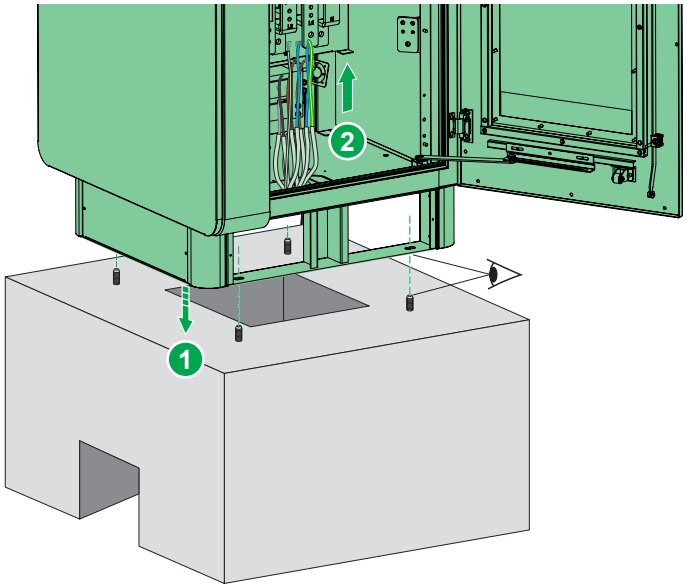

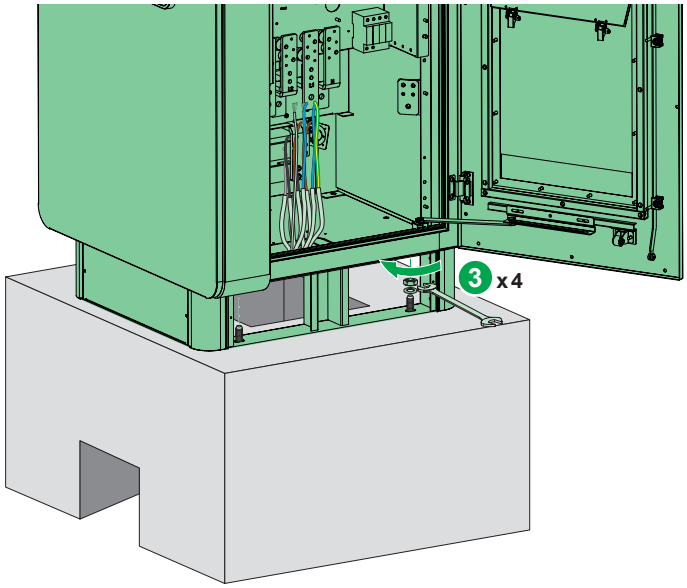


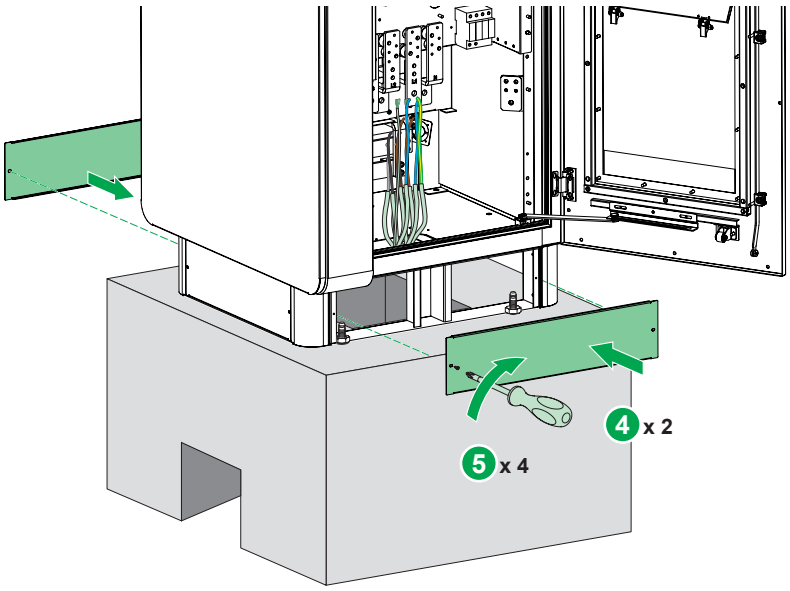


9 Handling and Mounting

9.1 Handling and Fixing in Place

3. Fixing:

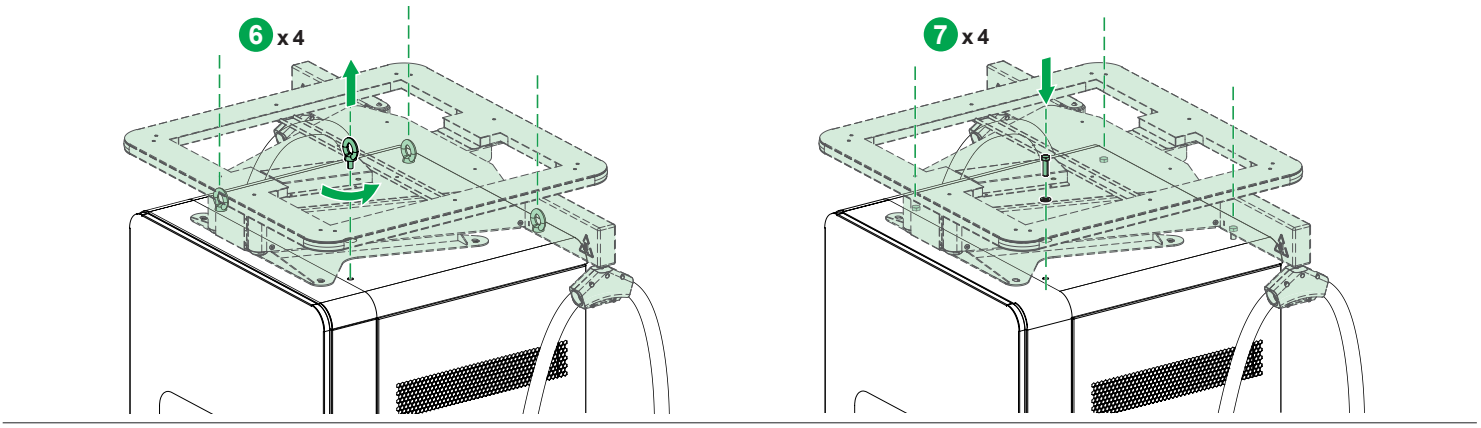


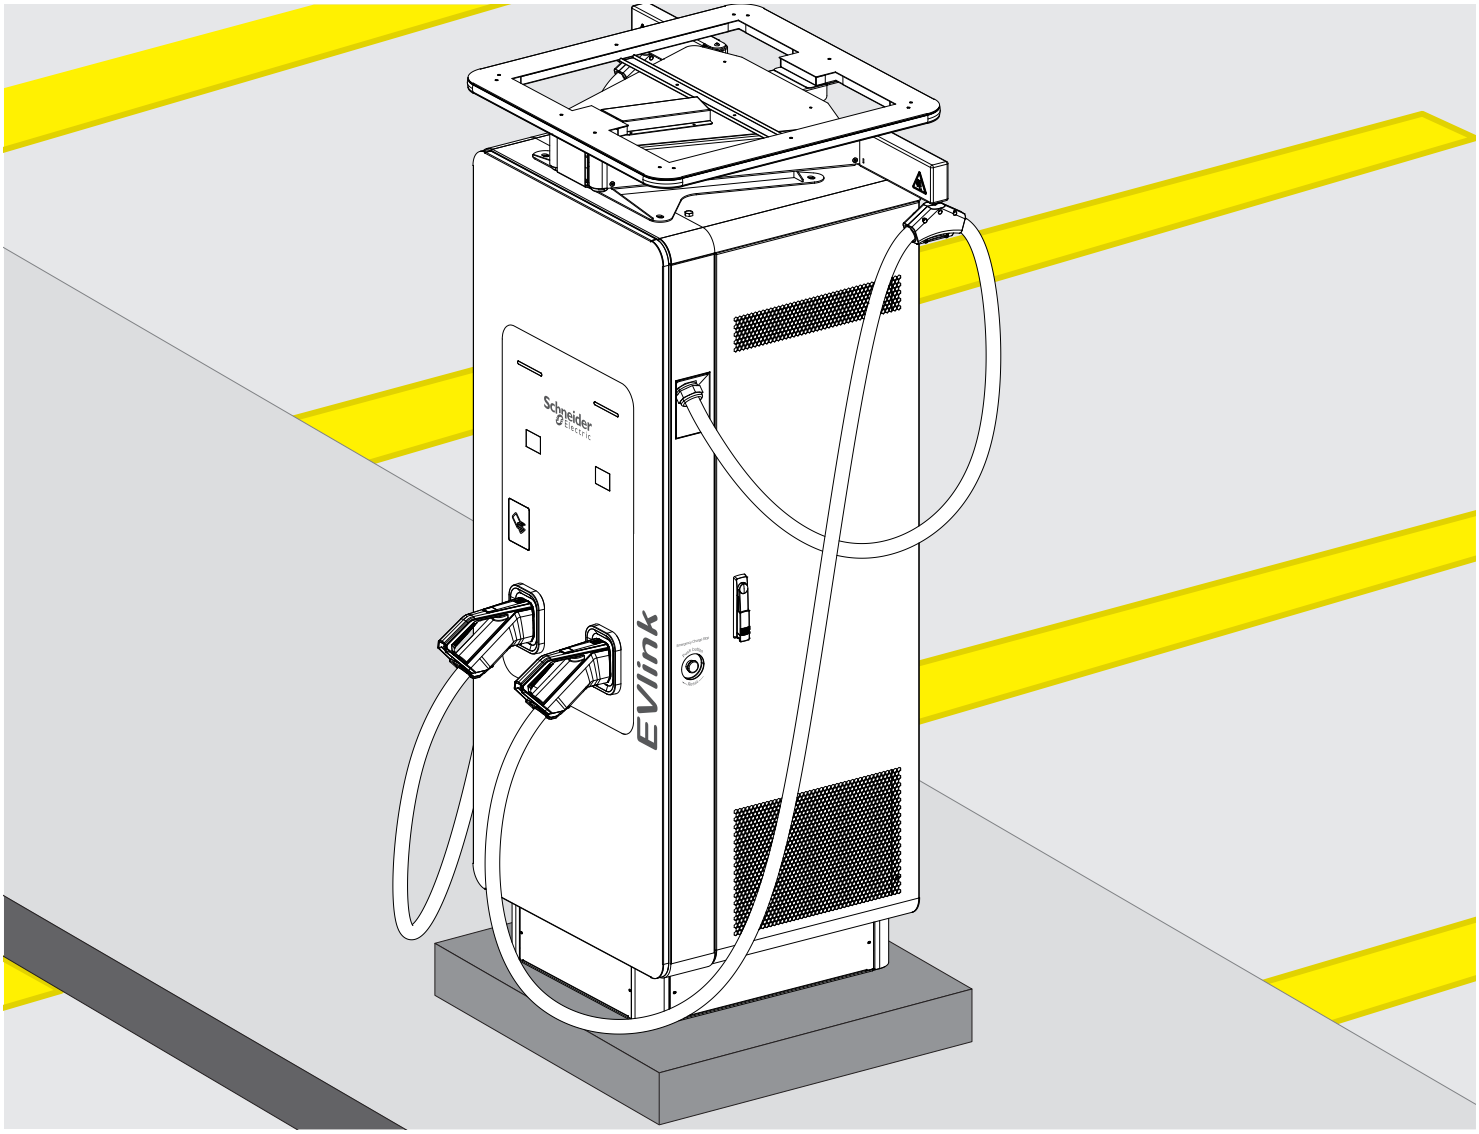

9 Handling and Mounting


9.1 Handling and Fixing in Place

3. Fixing:

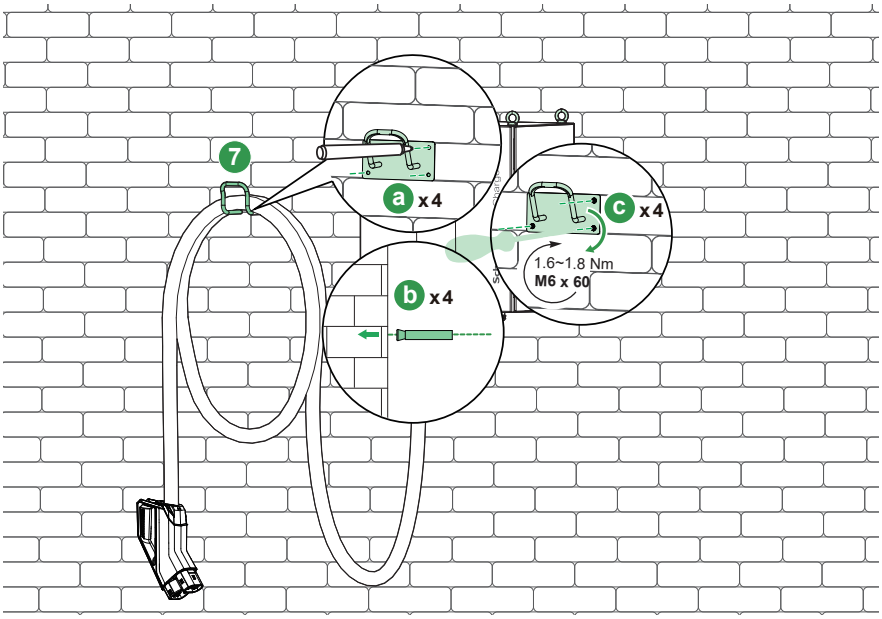

NOTE:

- Only for references with 10m output cable.
- Select a suitable position on the wall and make sure it complies with local regulations and/or accessibility to disable people, ensure that the wall can hold an equipment with weight > 40kg.

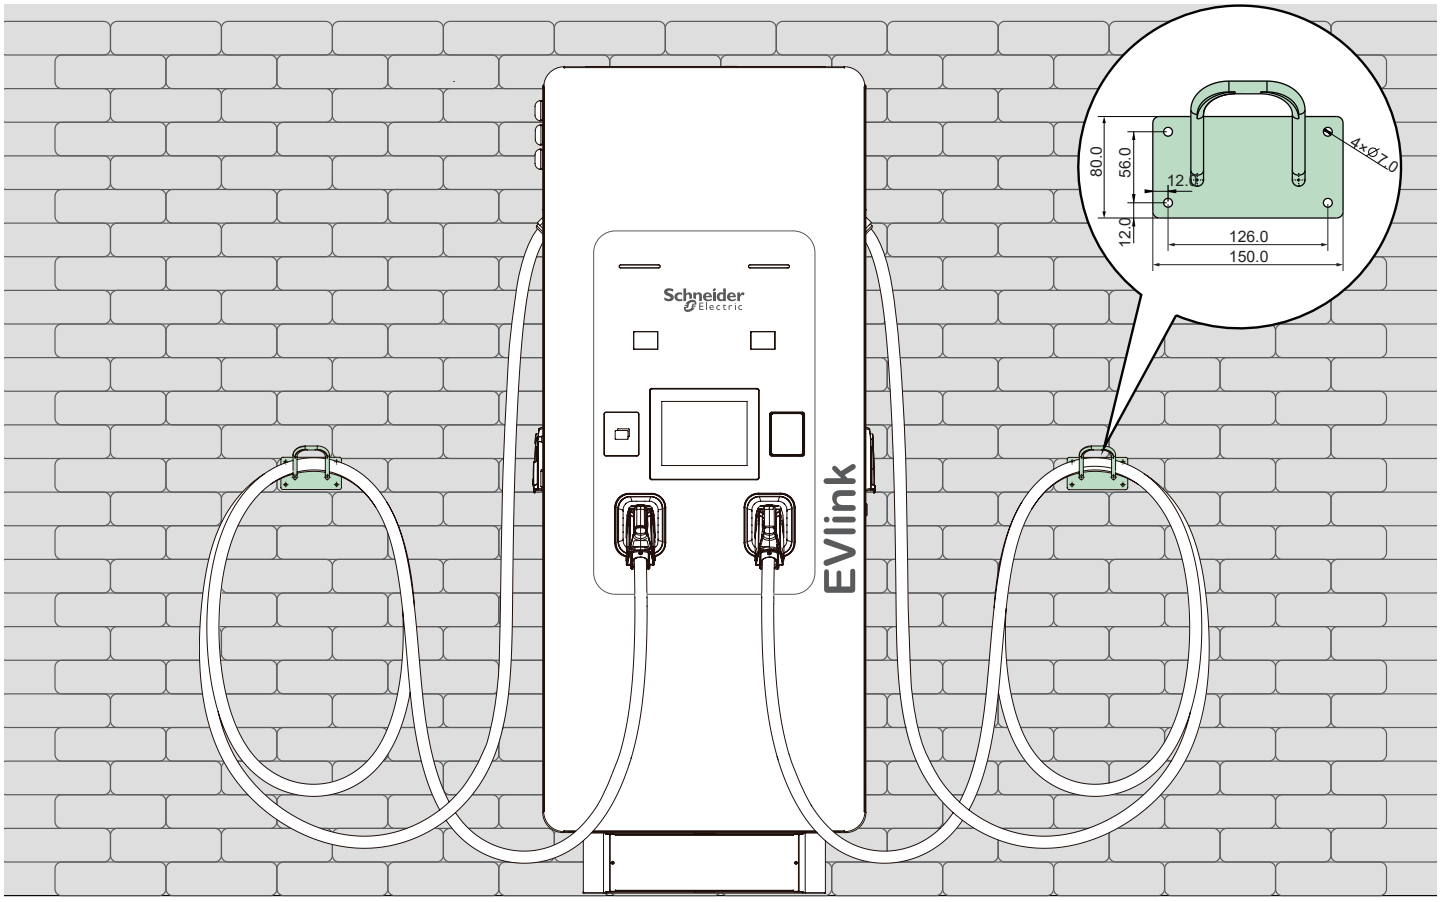

NOTE:

- Only for references with 10m output cable.
- If the installation position is not next to a wall, an additional pedestal is needed.It shall comply with local regulations and/or accessibility requirements for people with disabilities, and ensure the pedestal is capable of supporting weight > 40 kg.For hook dimensions, refer to the enlarged view.


10.1 Connecting the Charging Station


⚠ ⚠ DANGER


HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH


- It is recommended to make the PE wire longer than the phase wires to ensure that the PE wire stays connected the longest if the Charging Station is moved by an accident/ collision.
- Always connect the protective earth first, before connecting the N and phase wiring.


Failure to follow these instructions will result in death or serious injury.

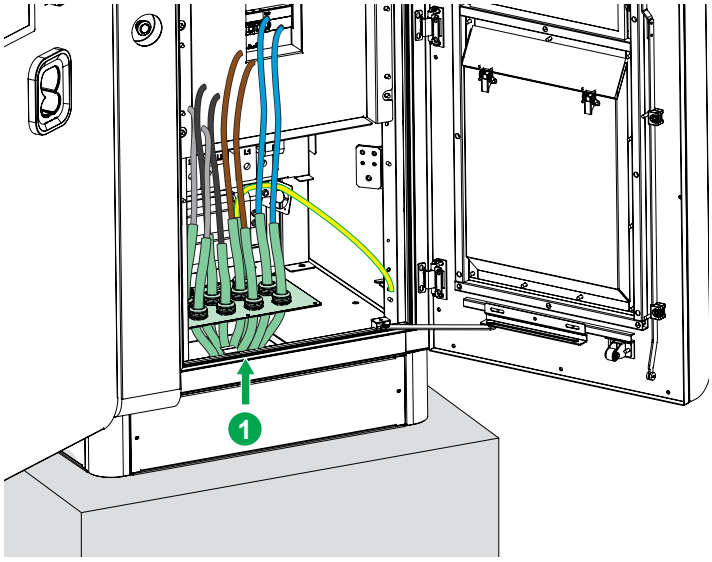

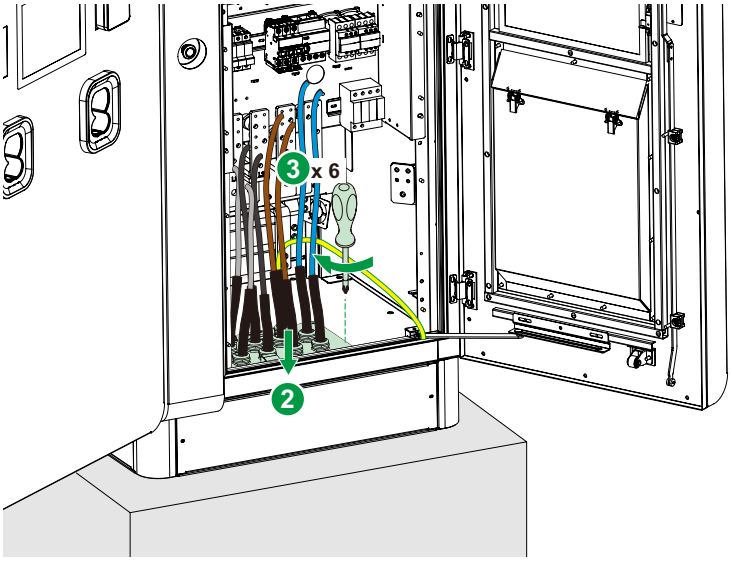

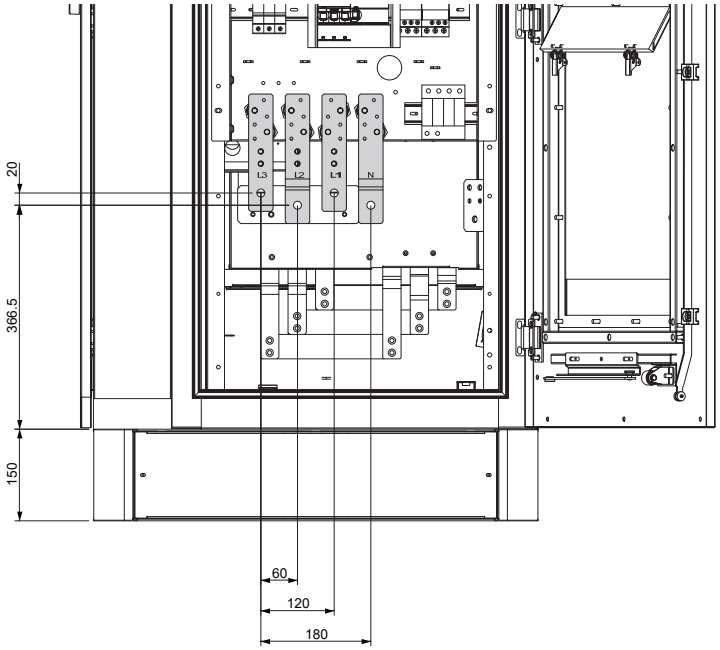

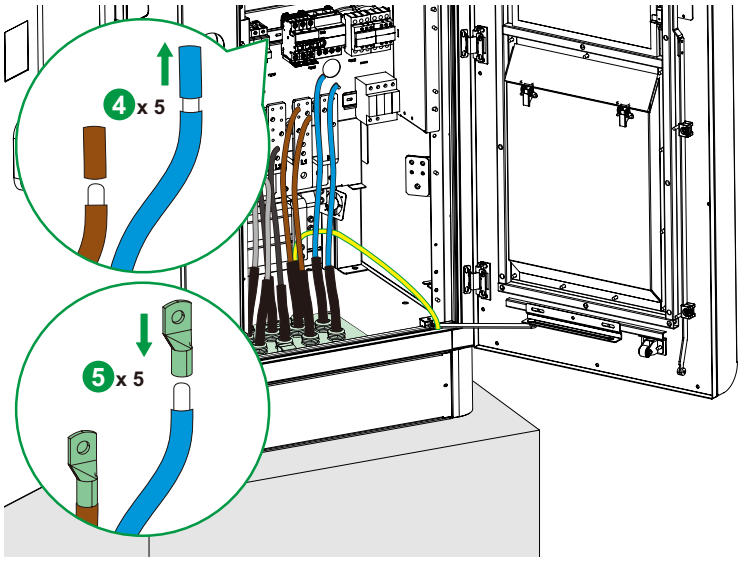

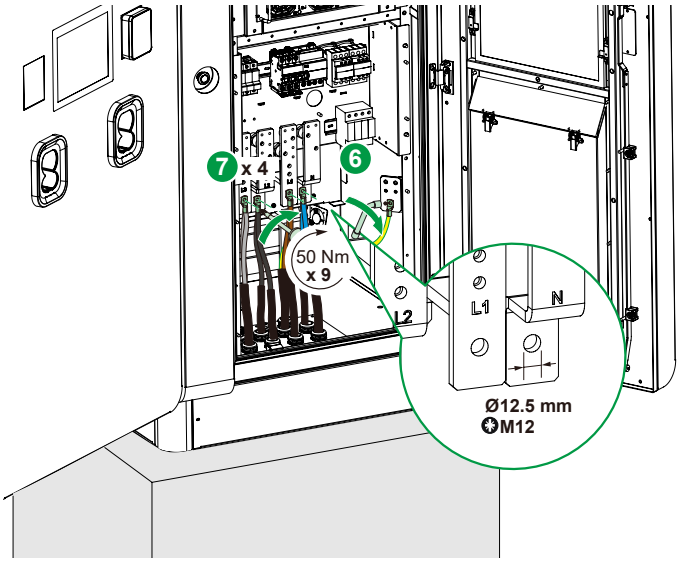


10.2 Installation of 4G SIM Card (Optional)

1. 4G SIM Card for connectivity to Ecostruxure Energy Asset Portal


Ecostruxure Energy Asset Portal is a tool permitting to Schneider Electric to monitor remotely the Charging Station in order to be able to troubleshoot and if possible repair from remote the Charging Station in case of issue.
You can contact Schneider service team to know more on how you can benefit from this service and get the necessary SIM Card to have the service activated.

NOTE:

- If the Connectivity to Ecostruxure Energy Asset Portal is needed, 4G SIM Card must be installed.
- The SIM Card slot is able to receive a Mini 25 mm SIM Card only.
- The 4G SIM Card is provided by Schneider.

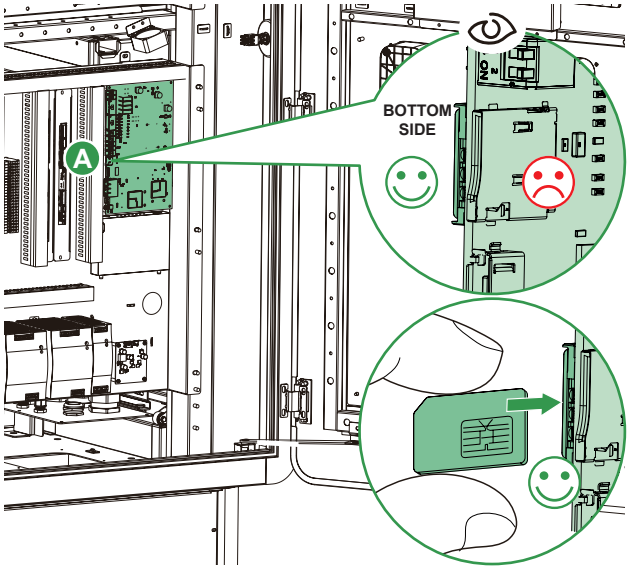

A • Locate the communication circuit board A7 board (CB01) indicated in the image below.
B • Carefully insert the SIM Card in the dedicated slot shown below.
C • To remove the SIM Card, pull out the SIM Card.

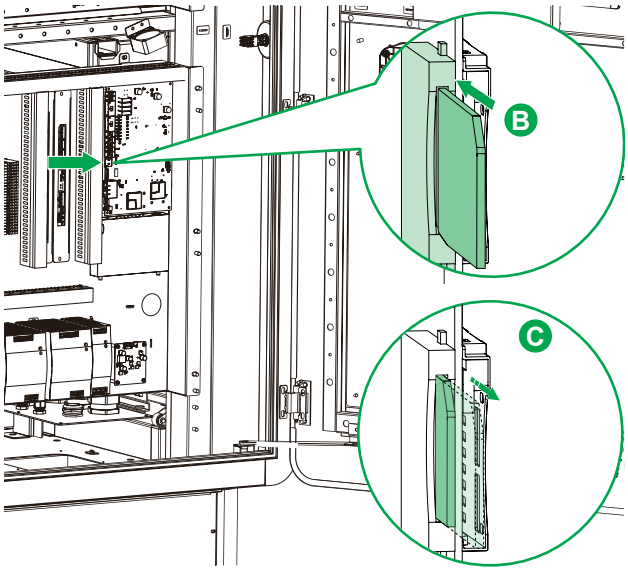



2. 4G SIM Card for CPO connectivity

NOTE:

- If the CPO connectivity is 4G, 4G SIM Card should be installed.
- The SIM Card slot is able to receive a Mini 25 mm SIM Card only.
- The 4G SIM Card is provided by customer.

A • Locate the router indicated in the image below.
B • Using a small cross screwdriver, remove the small red sheet metal on the left side of the router.
C • Carefully insert the SIM Card in the dedicated slot shown below.
D • Using a small cross screwdriver, reinstall the small red sheet metal and manually tighten the screw.

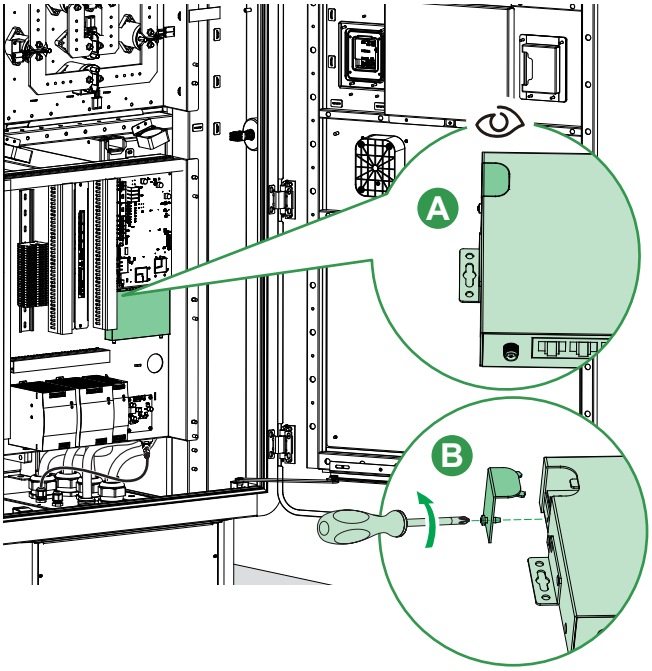

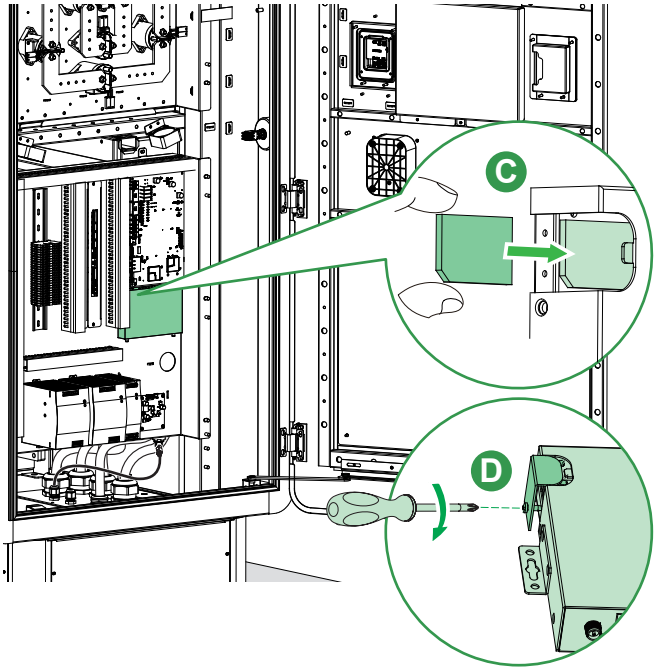

10.2 Installation of 4G SIM Card (Optional)

3. 4G SIM Card for payment terminal connectivity

NOTE:


- There are 2 brand payment terminal.
- For Payter payment, the 4G SIM Card is installed before out of factory.
- For PAX payment, the 4G SIM Card is installed by customer.
- The user shall check the payment terminal 4G signal strength after installation to ensure good 4G connection.
- The SIM Card slot is able to receive a Micro SIM Card only.

A • For PAX payment terminal, locate the payment terminal indicated in the image below.


B • Unscrew the cover on the back of IM30.


C • Take the cover out , then you can see SIM Card slot.

D • Insert a card into the card slot with the contacts facing upwards and the clipped corner of the card facing forward and to the right.

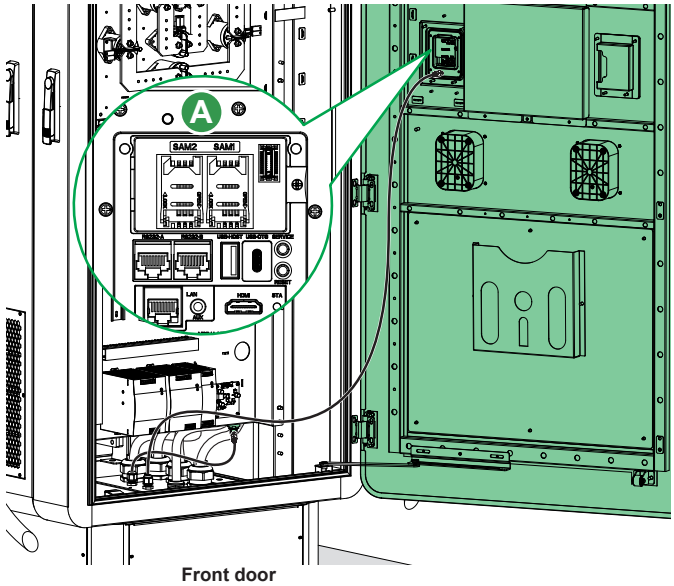


Front door

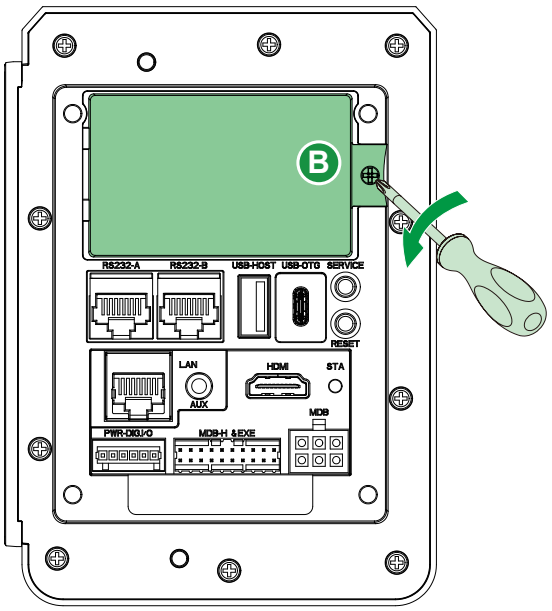

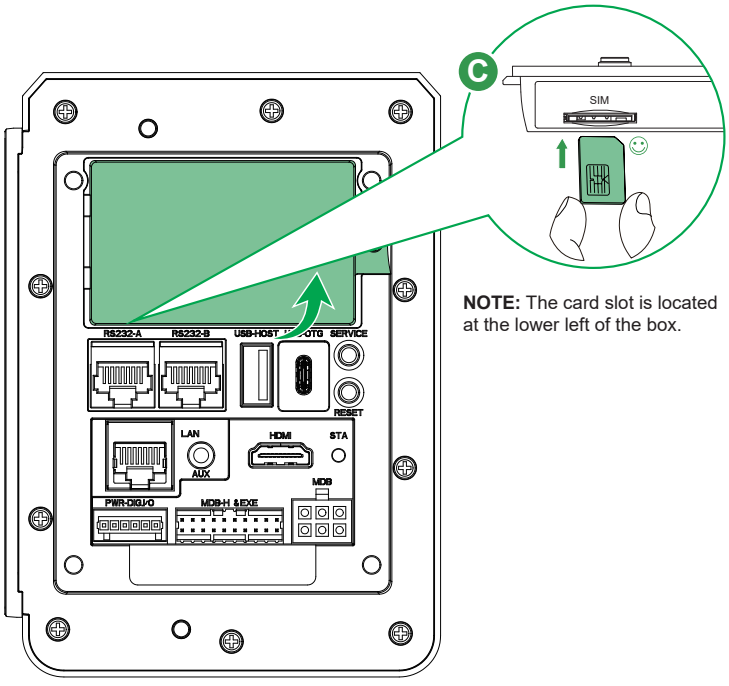


NOTE: The card slot is located at the lower left of the box.

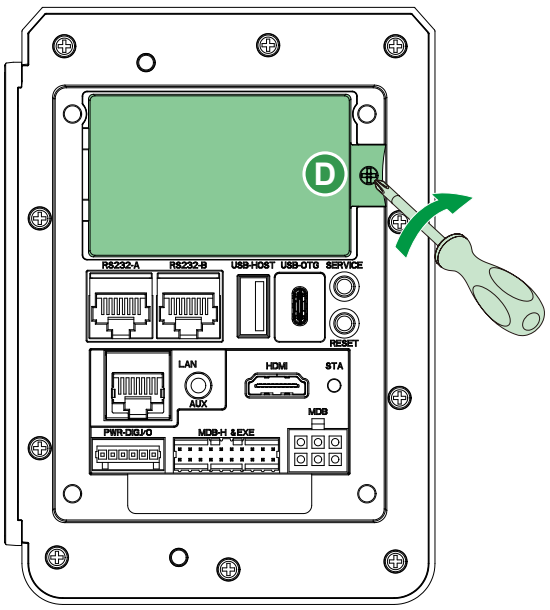


10.3 Ethernet Connection (Optional)

1. Ethernet connection selected for backend connectivity

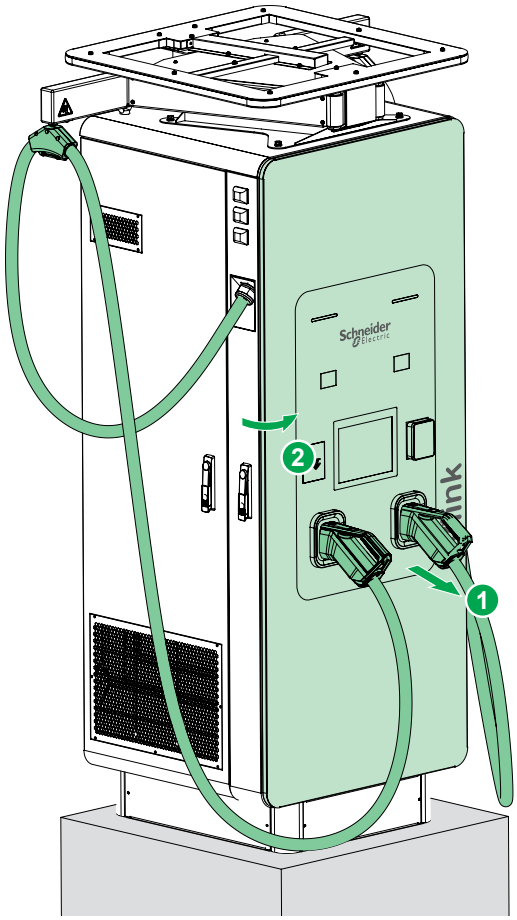


- Connect the RJ45 plug ethernet cable.
  (The RJ45 port is already connected to the router WAN port.)

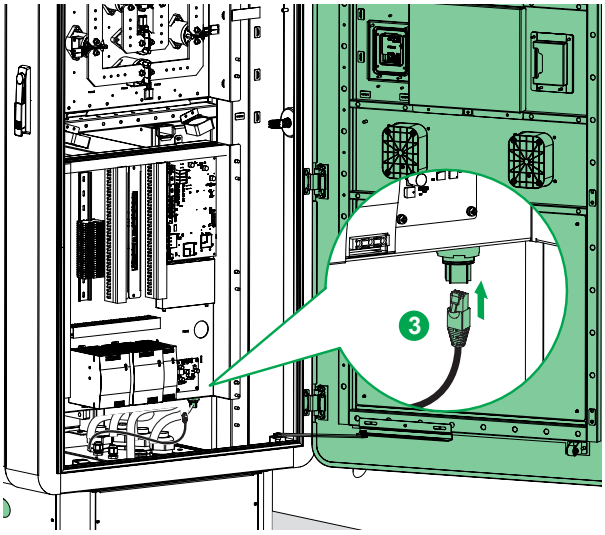


NOTE: The Ethernet port can be used with energy management system for load management through Modbus TCP.


2. Ethernet connection selected for Payment terminal connectivity

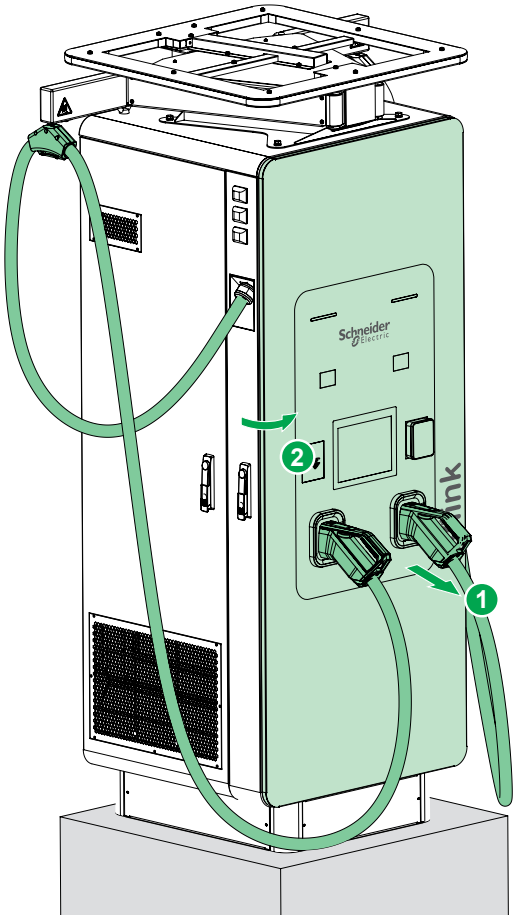

- For Payter payment terminal, connect the RJ45 Credit card payment terminal plug as below.

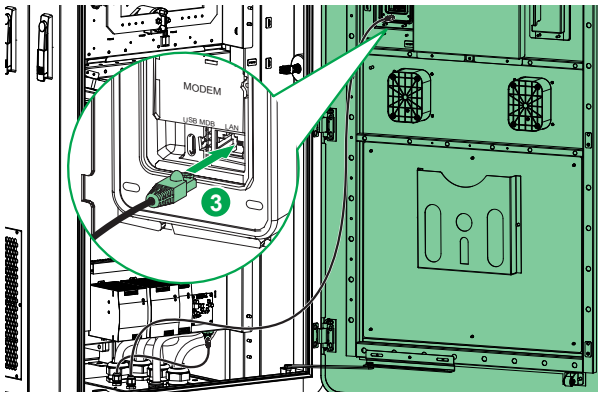


- For PAX payment terminal, connect RJ45 credit card payment terminal plug as below.

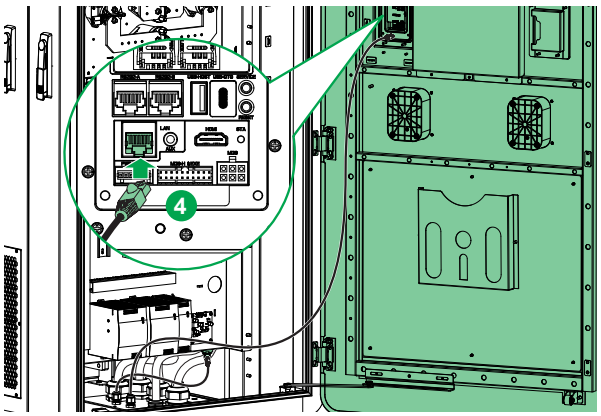


10 Connecting

10.3 Ethernet Connection (Optional)

3. Ethernet connection selected for PAX payment terminal connect to internal router

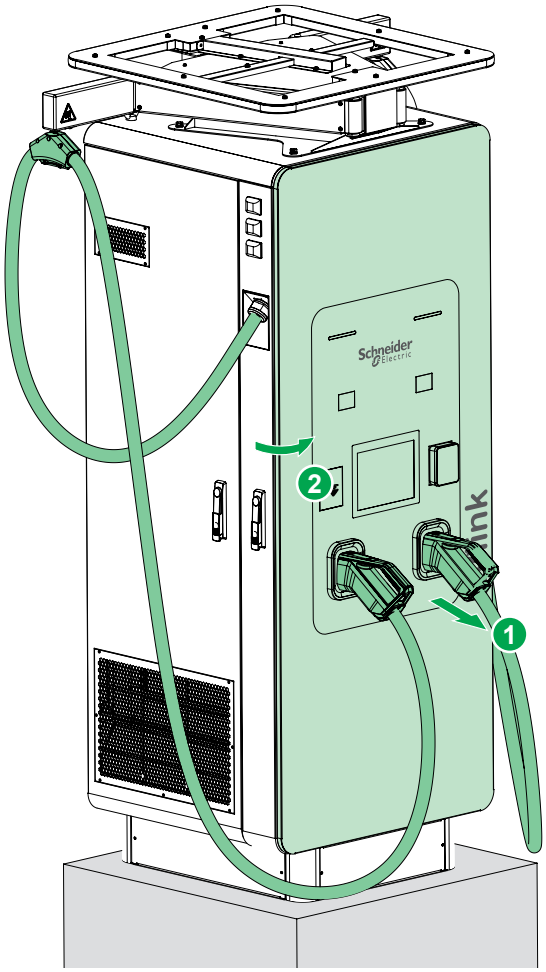


- PAX Ethernet connection option 2.
  (The RJ45 port is already connected to the internal router LAN port.)

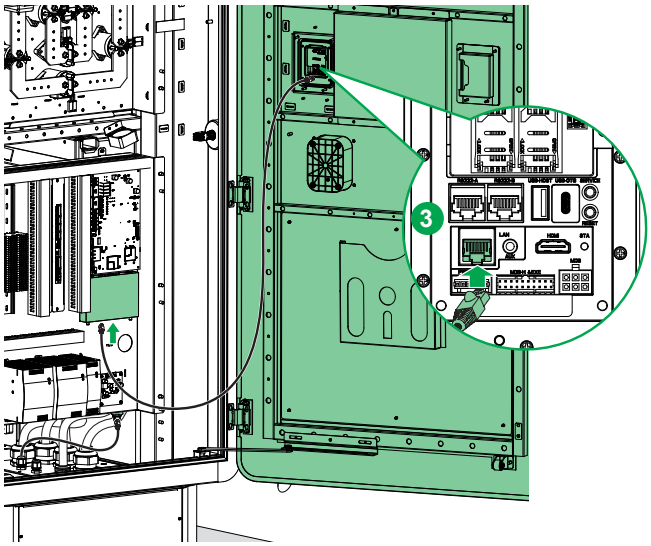


NOTE: Static IP address of PAX terminal. IP: 18.18.10.121. Gateway: 18.18.10.1.

11 Finalization

- Complete the installation checklist (Appendix 1) and ensure any open points are closed before placing it in the document holder inside the charger for verification prior to commissioning.
- Place the provided user guidance sticker on a suitable/visible location on the Charging Station. (Optional).

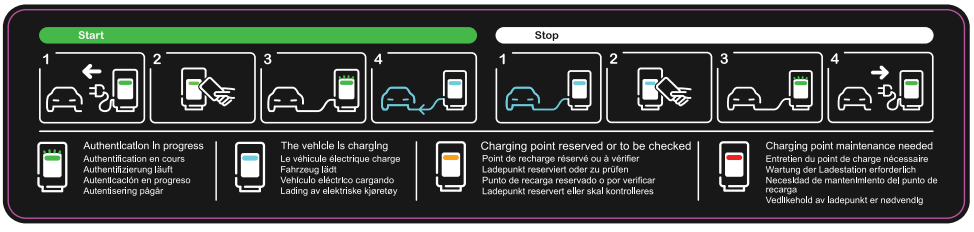


Version without cable management system

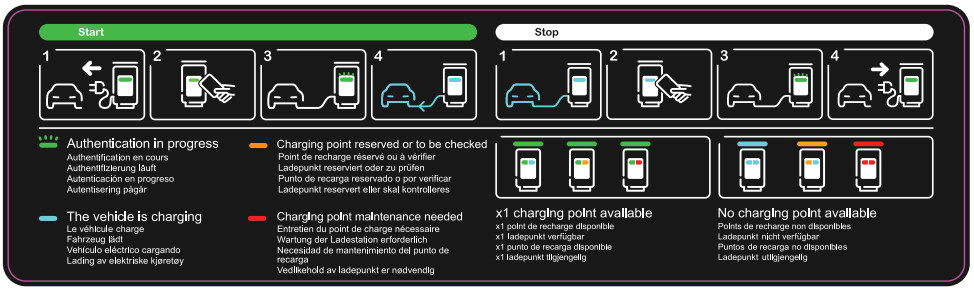

Version equipped with cable management system

11 Finalization

- Place the provided safety label in the local language on the EVlink Pro DC 320, below the exsiting English safety label.

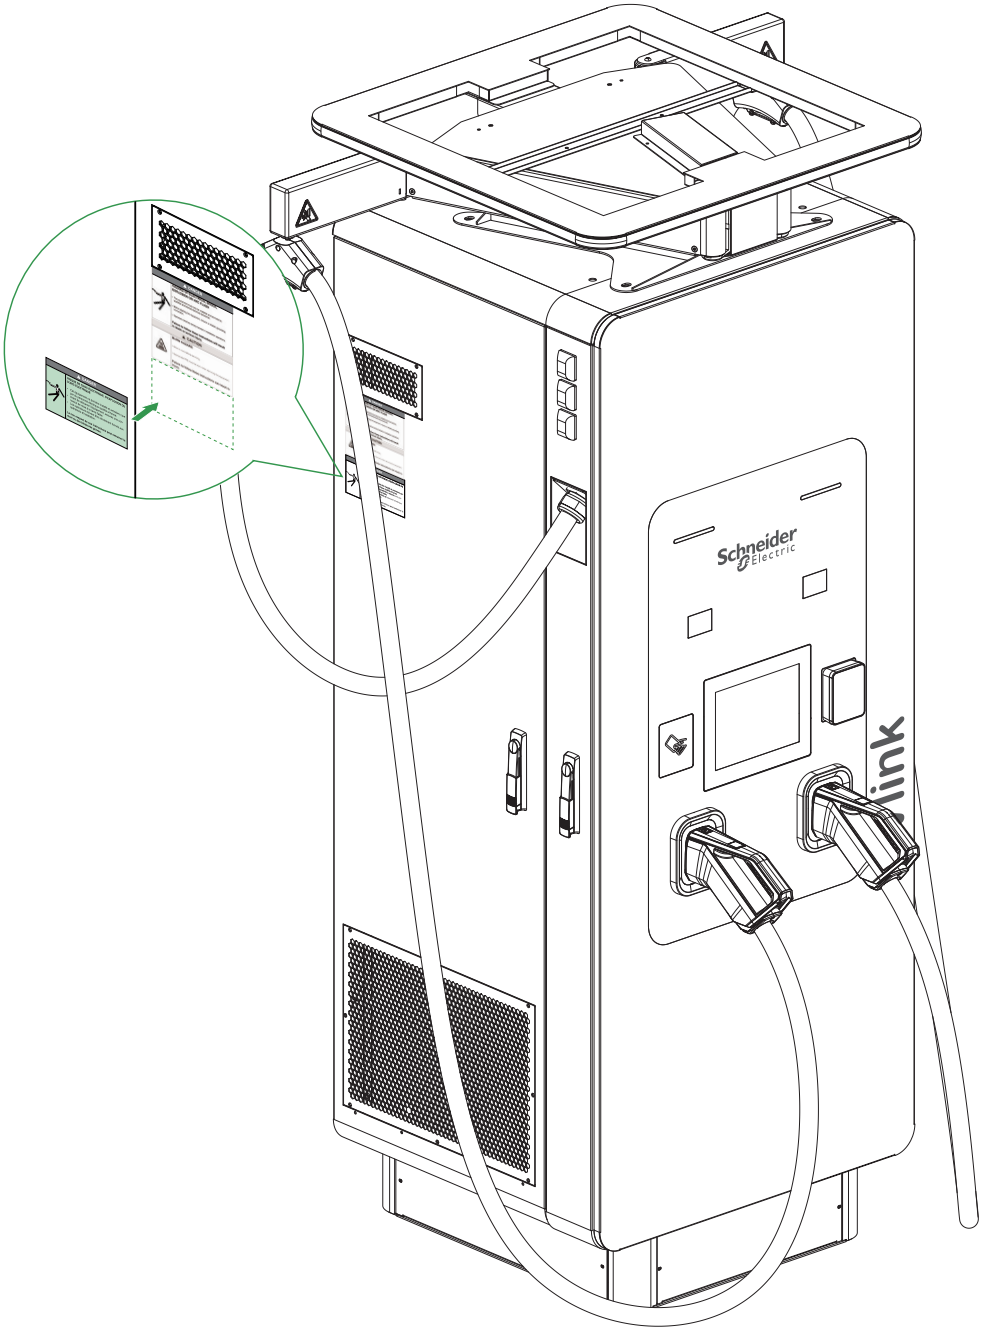

12 Startup / Shutdown

⚠⚠ DANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION OR ARC FLASH


- When the system is in an open or dangerous condition, do not allow unqualified persons to go near it. Instruct/warn people about the potential harmful high voltages.
- Make sure that the main upstream protection switch of the power supply for the product is set to the OFF position. Follow standard Lock-Out/Tag-Out procedures before proceeding.
- Always perform a voltage absence test to confirm that electrical power is disconnected from the system.

Failure to follow these instructions will result in death or serious injury.


12.1 Startup

After completing the installation inspection checklist, you can proceed to Startup the charger to test the Power system:


A • Keep the upstream circuit breaker in the open (OFF) position and proceed to close (ON) the QF1 main breaker and QF2 breaker in the Charging Station.
B • Close and secure all the Charging Station doors.
C • Proceed to close the upstream circuit breaker (ON).
D • Wait for 1 minute for the HMI and indicator lights to come online. The HMI screen will display a welcome screen. Verify that there is no error messages and that both indicator lights are stable green.
E • Switch off the charger and wait for 5 minutes before you proceed to commissioning.

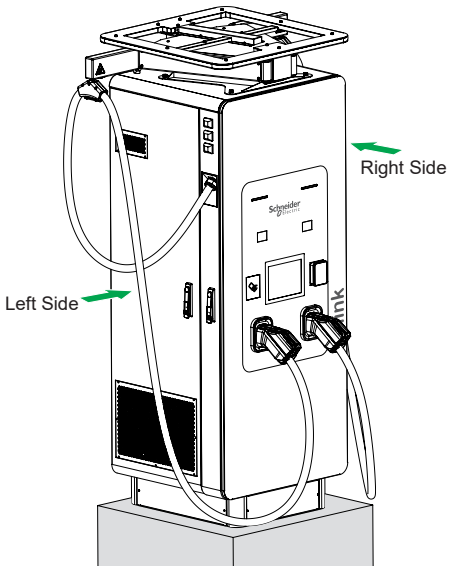

Location of QF1
Left door

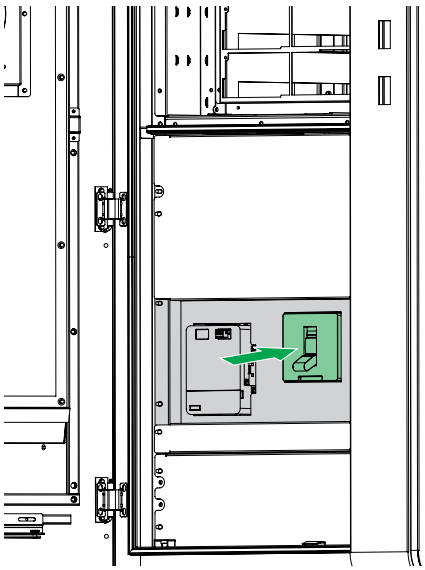

Location of QF2
Right door

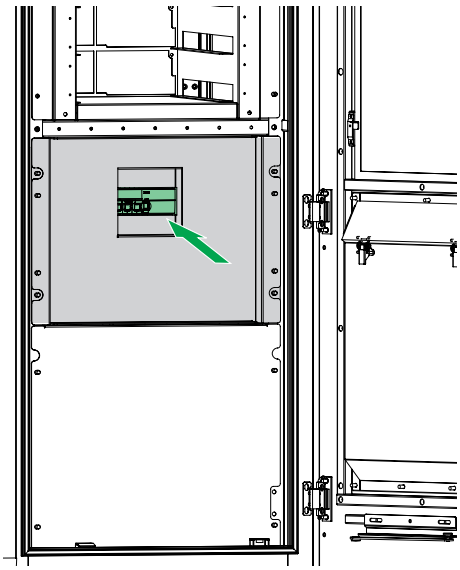

12.2 Shutdown

⚠⚠ DANGER

HAZARD OF ELECTRIC SHOCK

- It is mandatory to wait for 5 minutes after the equipment is disconnected to allow capacitors to discharge before touching any internal parts.
- Perform absence of voltage verification using a voltage absence tester (VAT) before touching any internal parts.


Failure to follow these instructions will result in death or serious injury.

To shutdown the system:

A • Switch off the Charging Station QF1 main breaker.
B • Switch off the QF2 MCB.
C • Proceed to switch off the upstream circuit breaker (ON).

13 Hide Emergency charge stop button (Optional)

If the emergency charge stop function is not required, peel off the protective film from the adhesive back of the emergency charge stop cover plate, attach it over the emergency charge stop button and its markings. Before attachment, clean the surface with alcohol or an appropriate solvent to remove any oil or dust. Press evenly during attachment to ensure a secure bond.

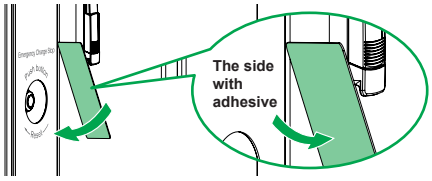

14 Recycle



Product Disposal

To comply with Directive 2012/19/EU of the European Parliament and of the Council of 4 July 2012 on waste electrical and electronic equipment (WEEE), devices marked with this symbol may not be disposed of as part of unsorted domestic waste inside the European Union.
Enquire with local authorities regarding proper disposal.
Product and packaging materials are recyclable as marked.

Please find below link and enter the product reference number for files: Product Environmental Profile and Product End of Life Instructions

checkaproduct.se.com


Appendix 1: Installation Check List

Category	Inspection or Verification	Remarks or Repairs
Structure	Check whether the Charging Station base plates and cable glands are fixed and sealed.	
	Check the Charging Station is well mounted on the concrete foundation and is leveled.	
	Check whether all doors operation and panels are intact, closed and locks are intact.	
	Check that the IP is maintained, gaskets and cable glands secured and no openings permit dust, insects or rodents.	
	Check the necessary space is available for maintenance and all construction work is complete.	
	Check whether the cable hook for the 10m output cable is properly installed and securely fixed.	
Aesthetic	Check the appearance and cleanliness.	
	Check all signs and notices are clear and intact and remove the protective film from the HMI screen and the safety notices.	
Internal components	Verify the QF1 main breaker and QF2 MCB are switched off. Position before energizing.	
	Check whether the internal components of the charger are intact (Removal of internal covers is not required).	
	Visually check for any loose component or wiring.	
	Check for any loose hardware or foreign objects in the bottom of the charger.	
	Verify all grounding cables are secured on all doors and on the bottom of the charger.	
Electrical tests	Grounding resistance is ≤4Ω, or following local regulation.	
	Check for over/under voltage.	
Power connections	The specifications of the cables used meet the power requirements of the Charging Station.	
	All power connections (N 1 2 3 and PE) are securely torqued according to the recommended values.(50 N·m).	
	Phase orientation is correct and identified on the cables.	
	Check clearance and creepage distances.	
	No leakage, damage, scratches on cable insulation and all electrical connections and wiring are correct and complete.	
	Check the Charging Cable and connectors are Intact.	
	Check the power module plug in connectors are intact (both upstream and downstream).	
Communication	Ensure that the 4G SIM Card is installed.	
	Ensure that the Ethernet cable connected to the RJ45 port.	

Verified by:


NOTE: Complete the installation checklist and ensure any open points are closed before placing it in the document holder inside the charger for verification prior to commissioning.

Appendix 2: Charging Station Mounting Template

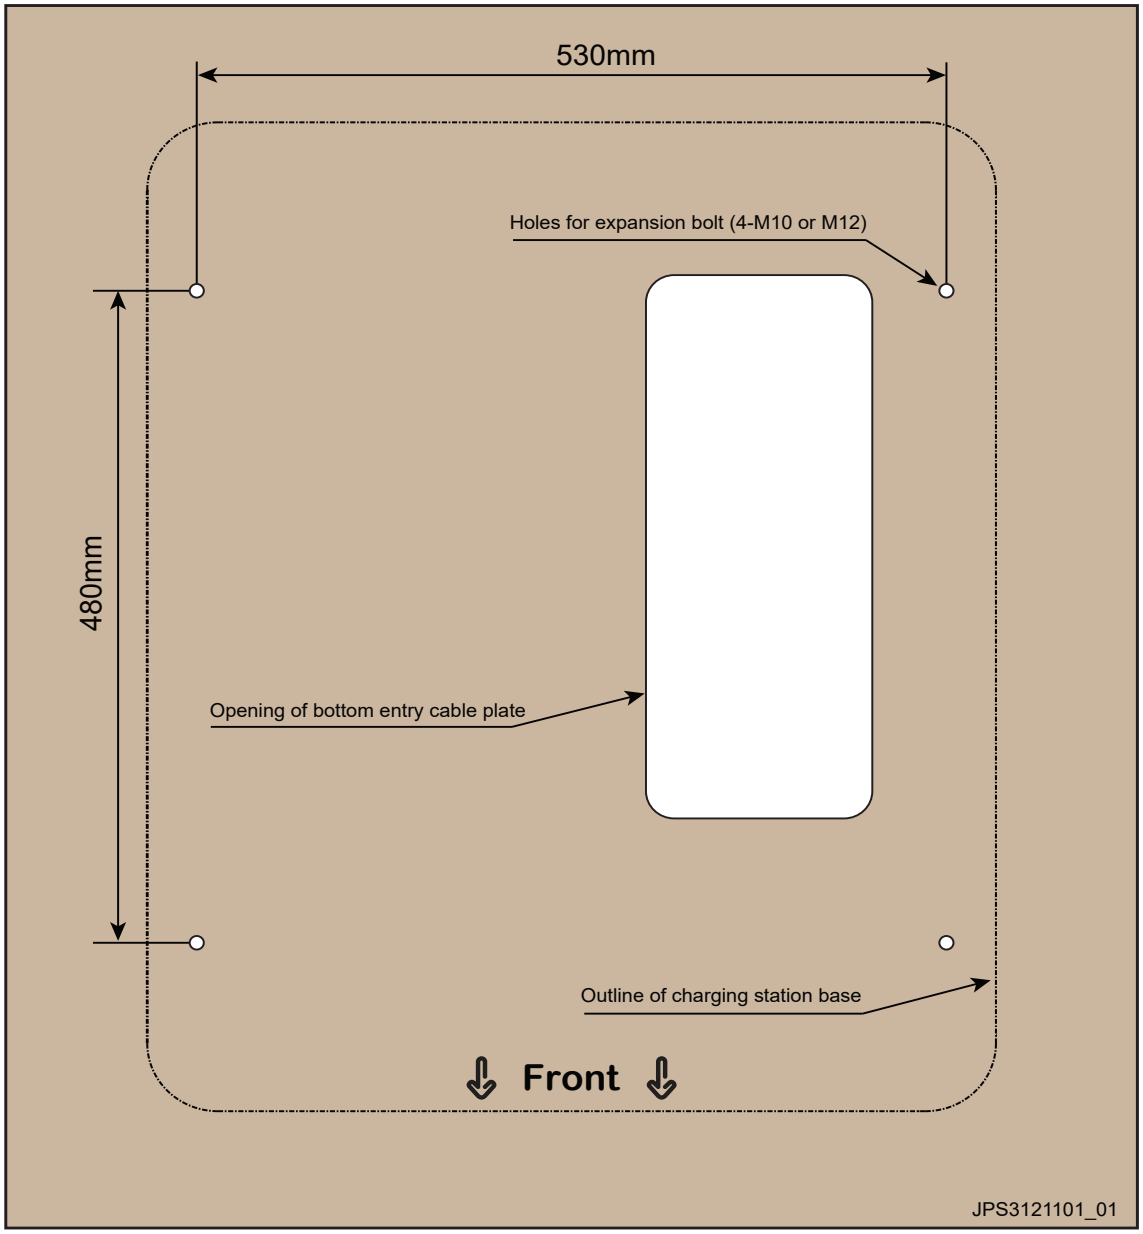

To download scaled drawing

Appendix 3: Schematic Diagram

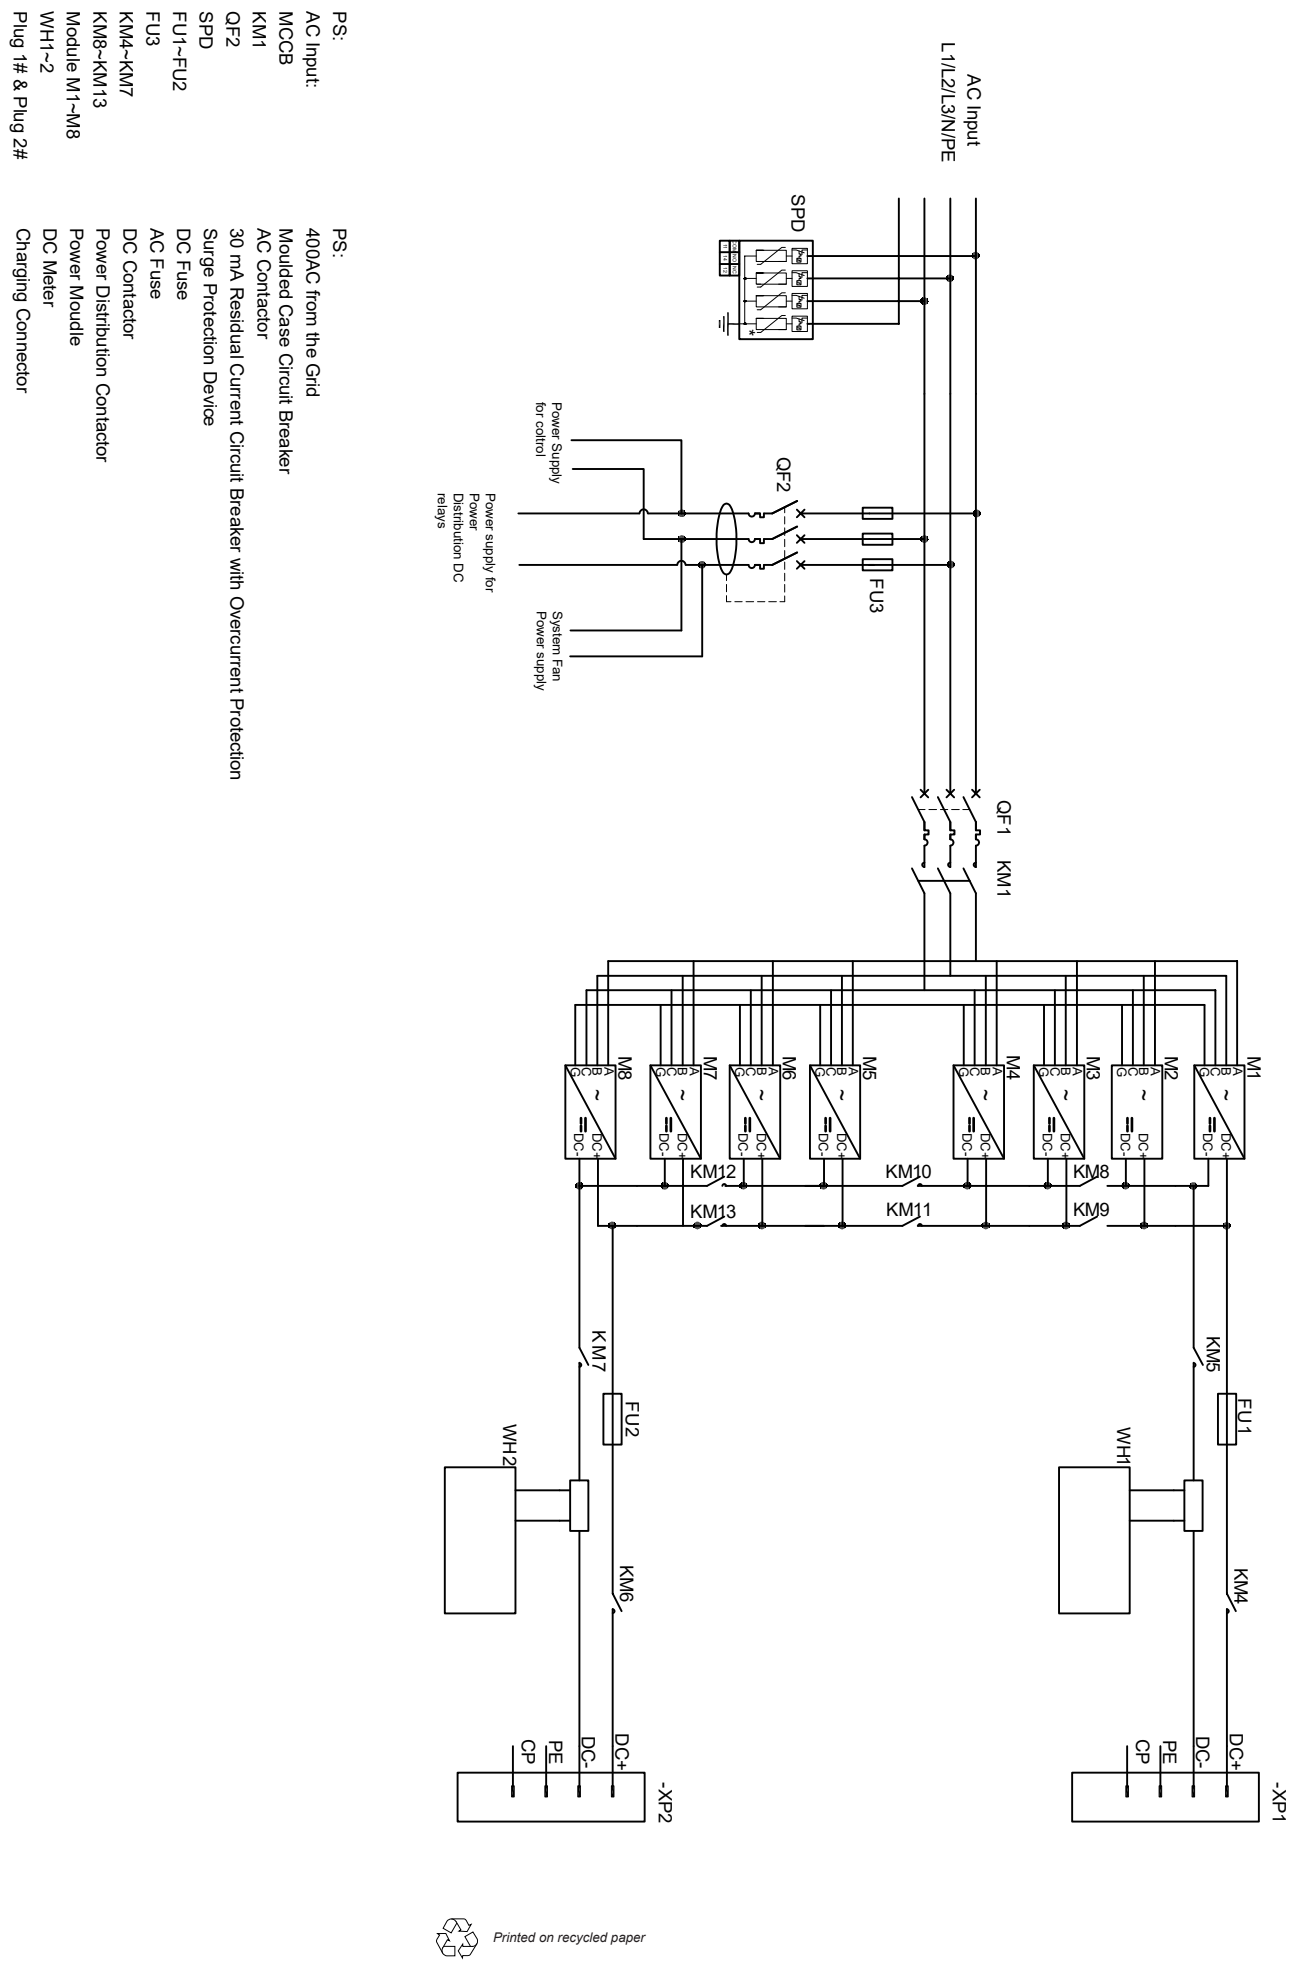

Printed on recycled paper

NOTE

Printed on recycled paper

NOTE

Printed on recycled paper

NOTE

SCHNEIDER eSTAR
1884 Boulevard de la Défense
92000 Nanterre France
www.se.com

22 PAP *Printed on recycled paper*

UK Representative
Schneider Electric Limited
Stafford Park 5
Telford TF3 3BL
United Kingdom