SpaceLogic™ Sensors
SXWS Sensor Touchscreen Covers

Adding a Power Button to the Home Screen

Procedure

F-28406-1
04/2026



Legal Information

The Schneider Electric brand and any trademarks of Schneider Electric SE and its subsidiaries referred to in this guide are the property of Schneider Electric SE or its subsidiaries. All other brands may be trademarks of their respective owners.

This guide and its content are protected under applicable copyright laws and furnished for informational use only. No part of this guide may be reproduced or transmitted in any form or by any means (electronic, mechanical, photocopying, recording, or otherwise), for any purpose, without the prior written permission of Schneider Electric.

Schneider Electric does not grant any right or license for commercial use of the guide or its content, except for a non-exclusive and personal license to consult it on an "as is" basis. Schneider Electric products and equipment should be installed, operated, serviced, and maintained only by qualified personnel.

As standards, specifications, and designs change from time to time, information contained in this guide may be subject to change without notice.

To the extent permitted by applicable law, no responsibility or liability is assumed by Schneider Electric and its subsidiaries for any errors or omissions in the informational content of this material or consequences arising out of or resulting from the use of the information contained herein.

Safety Information

Electrical equipment should be installed, operated, serviced and maintained only by qualified personnel. No responsibility is assumed by Schneider Electric for any consequences arising out of the use of this material.

A qualified person is one who has skills and knowledge related to the construction, installation, and operation of electrical equipment and has received safety training to recognize and avoid the hazards involved.

Safety Precautions

- This product is not intended for life or safety applications.
- Do not install this product in hazardous or classified locations.
- Read and understand the instructions before installing the product.
- Turn off all power supplying equipment before working on it.
- The installer is responsible for conformance to all applicable codes.

If this product is used in a manner not specified by the manufacturer, the protection provided by the product may be impaired. No responsibility is assumed by the manufacturer for any consequences arising out of the use of this material.

© 2025 Schneider Electric All Rights Reserved.


Scope

SpaceLogic SXWS Living Space Sensors do not by default include a power button icon on the display.

The power button icon is not included as an available icon in the Scene Configuration tab of EcoStruxure™ Building Operation software (EBO).

It is possible, however, for the SXWS device to support a power button icon using a workaround in EBO, as described in this document.

Figure 1. Available Icons in EBO

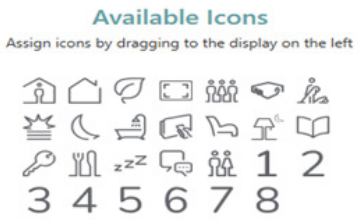

Note: This feature is only available in SXWS firmware version 1.14.xx and later.

Solution

The workaround consists of replacing the "two people" icon with a power button icon using a custom value text field and a specific feature phrase in EBO.

Figure 2. "Two People" and Power Button Icon Swap




Implementation

To complete this workaround, follow the steps below.

1. Go to the **Display > Scene Configuration** tab in EBO and select the "two people" icon as one of the available buttons and **Save**. In this example, the "two people" icon is used for Button 5. The "two people" icon will appear in the Button 5 position on the device display (under the Scene subscreen).


   Figure 3. "Two People" Icon in the Button 5 Position

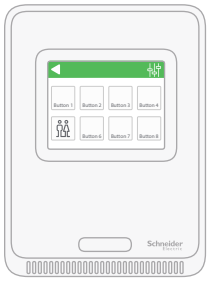

© 2025 Schneider Electric All Rights Reserved.

2. In the EBO **Display > Properties > Button and Scene Configuration** tab, select **Scene button 5** as one of the four buttons available on the Home screen.

Figure 4. Scene Button 5 ("Two People" Icon) as Button 1 Function

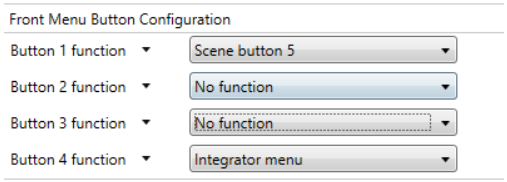


3. After applying this setting, the Home screen will appear as shown below.

Figure 5. Home Screen with "Two People" Button Before Change to Power Icon



4. On the EBO **Display > Properties >Basic** tab, enter the feature phrase **@on_off** in the **Custom value text 1** field and **Save** to activate the icon swap feature.

Figure 6. Use of the @on_off Feature Phrase for Power Icon Swap

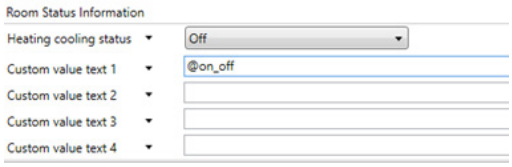

5. With this setting, the Home screen will appear as shown below. The “two people” icon is replaced with the power button icon in both the Home screen and the scene menu.

Figure 7. Home Screen with Power Button Enabled



To disable this feature, simply remove the feature phrase **@on_off** from the **Custom value text 1** field. The power button icon will disappear and the "two people" icon will be displayed in its place.

© 2025 Schneider Electric All Rights Reserved.

Schneider Electric
35 rue Joseph Monier
92500 Rueil Malmaison – France
Phone: +33 (0) 1 41 29 70 00
www.se.com

As standards, specifications, and designs change from time to time, please ask for confirmation of the information given in this publication.

© 2026 Schneider Electric. All Rights Reserved. Schneider Electric is a trademark and the property of Schneider Electric SE, its subsidiaries and affiliated companies. All other trademarks are the property of their respective owners.

F-28406-1
04/2026