Altivar Process

ATV660 Compact Drive Systems

Handbook

06/2026

NHA37111.05



www.se.com

Legal Information

The information provided in this document contains general descriptions, technical characteristics and/or recommendations related to products/solutions.

This document is not intended as a substitute for a detailed study or operational and site-specific development or schematic plan. It is not to be used for determining suitability or reliability of the products/solutions for specific user applications. It is the duty of any such user to perform or have any professional expert of its choice (integrator, specifier or the like) perform the appropriate and comprehensive risk analysis, evaluation and testing of the products/solutions with respect to the relevant specific application or use thereof.

The Schneider Electric brand and any trademarks of Schneider Electric and its subsidiaries referred to in this document are the property of Schneider Electric or its subsidiaries. All other brands may be trademarks of their respective owner.

This document and its content are protected under applicable copyright laws and provided for informative use only. No part of this document may be reproduced or transmitted in any form or by any means (electronic, mechanical, photocopying, recording, or otherwise), for any purpose, without the prior written permission of Schneider Electric.

Schneider Electric does not grant any right or license for commercial use of the document or its content, except for a non-exclusive and personal license to consult it on an "as is" basis.

Electrical equipment should be installed, operated, serviced, and maintained only by qualified personnel. No responsibility is assumed by Schneider Electric for any consequences arising out of the use of this material.

Schneider Electric reserves the right to make changes or updates with respect to or in the content of this document or the format thereof, at any time without notice.

To the extent permitted by applicable law, no responsibility or liability is assumed by Schneider Electric and its subsidiaries for any errors or omissions in the informational content of this document, as well as any non-intended use or misuse of the content thereof.

Altivar Process

ATV660 Compact Drive Systems



The customized solution for your drive

"Ready-to-use" Drive Systems:

+ Developed on highest quality level
+ Manufactured according to your needs
+ Tested at full-load operating conditions
+ Pre-set appropriate to the design




Compact dimensions

+ Low space required in the control room
+ Generous connecting area for the power cables
+ Easy accessibility of all components
+ Control panel for numerous options

The energy-saving drive solution

+ Up to 60% energy saving at standby due to the innovative "Stop & Go" operation without additional costs
+ Intelligent control of the internal fans depending on the
+ operation
+ Optimal energy efficiency over the whole life cycle
Logging and graphical presentation of the absorbed power

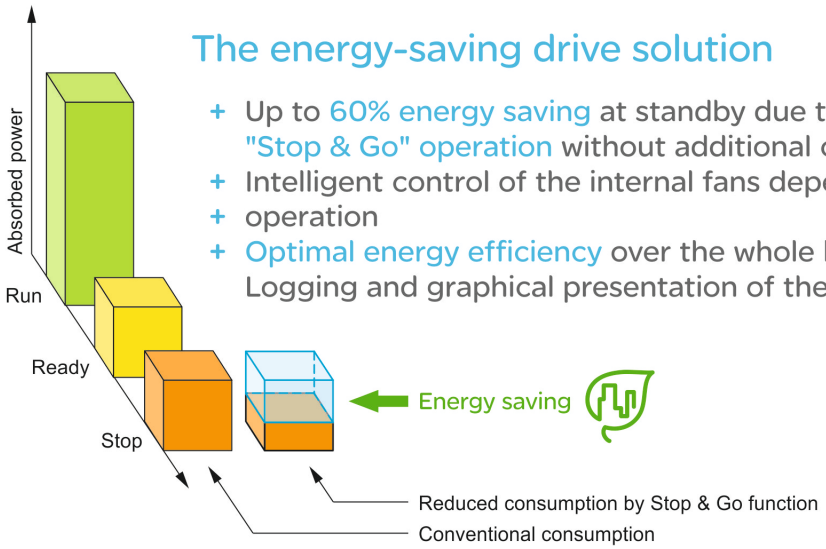



Perfect monitoring of your process


+ Integrated pump curves for process optimization
+ Monitoring of the pump efficiency
+ Notification of critical operating points without additional sensors
+ Process integration with pressure-, flow- and level-control including compensation of flow losses




Simple embedding into PLC environments

+ Easy integration thanks to standardized FDT/DTM and ODVA technology
+ Support by predefined libraries
+ Easy access via PC, tablet or smartphone
+ Secure connection via "Cyber-secured Ethernet"



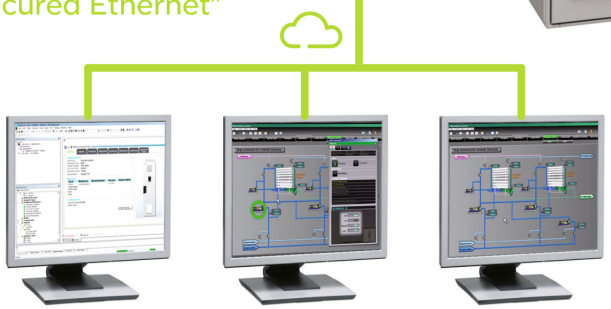

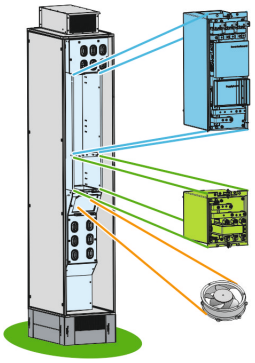

Sophisticated service concept with QR code

+ Modular design allows easy logistics of spare parts
+ Optimized costs of maintenance due to dynamic maintenance schedule with integrated monitoring of the individual components
+ Simple exchange of power modules and fans
+ Quick assistance with dynamic QR codes and Customer Care App

Table of Contents

Table of Contents 5
Safety Information 7
About the Document 9
Drive Systems 17
- Overview 18
- ATV660 - Compact Drive Systems 19
- Expandability 24

General Specification 27
- Quality 28
- Mains Conditions 33
- Preliminary Instructions 37

ATV660●●●●4X1 43
- ATV660 Compact Drive Systems for 400 V Mains 44
- General Technical Data 45
- Protection Degree 47
- Cooling concept 48
- Maximum Ambient Temperature 49
- Specification 50
- Circuit Diagram 79
- Mains Connection 80
- Motor Connection 84
- Predefined Customizations 92

Wiring of the Control Terminals 94
- Design/Position of the Individual Terminals 95
- Control Block 98
- Option "Logic and Analog I/O Card" 111
- Option "Relay Output Card" 115
- Option Terminals 117

Customizations 120
- Enclosure Options 121
- Control Options 126
- I/O Expansion Cards 128
- Communication Cards 130
- Functional Safety 133
- Display Options 135
- Motor Options 137
- Mains Supply 141
- EcoStruxure Asset Advisor 146
- Documentation / Packaging 148

Safety Information

Important Information

Read these instructions carefully, and look at the equipment to become familiar with the device before trying to install, operate, service, or maintain it. The following special messages may appear throughout this documentation or on the equipment to warn of potential hazards or to call attention to information that clarifies or simplifies a procedure.



The addition of this symbol to a “Danger” or “Warning” safety label indicates that an electrical hazard exists which will result in personal injury if the instructions are not followed.



This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

⚠ DANGER

DANGER indicates a hazardous situation which, if not avoided, **will result in** death or serious injury.

⚠ WARNING

WARNING indicates a hazardous situation which, if not avoided, **could result in** death or serious injury.

⚠ CAUTION

CAUTION indicates a hazardous situation which, if not avoided, **could result** in minor or moderate injury.

NOTICE

NOTICE is used to address practices not related to physical injury.

Please Note

Electrical equipment should be installed, operated, serviced, and maintained only by qualified personnel. No responsibility is assumed by Schneider Electric for any consequences arising out of the use of this material.

A qualified person is one who has skills and knowledge related to the construction and operation of electrical equipment and its installation, and has received safety training to recognize and avoid the hazards involved.

Qualification of Personnel

Only appropriately trained persons who are familiar with and understand the contents of this manual and all other pertinent product documentation are authorized to work on and with this product. In addition, these persons must have received safety training to recognize and avoid hazards involved. These persons must have sufficient technical training, knowledge and experience and be able to foresee and detect potential hazards that may be caused by using the product, by changing the settings and by the mechanical, electrical and electronic equipment of the entire system in which the product is used. All persons working on and with the product must be fully familiar with all applicable standards, directives, and accident prevention regulations when performing such work.

Intended Use

This product is intended for industrial use according to this manual.

The product may only be used in compliance with all applicable safety standard and local regulations and directives, the specified requirements and the technical data. The product must be installed outside the hazardous Ex zone. Prior to using the product, you must perform a risk assessment in view of the planned application. Based on the results, the appropriate safety measures must be implemented. Since the product is used as a component in an entire system, you must ensure the safety of persons by means of the design of this entire system (for example, machine design). Any use other than the use explicitly permitted is prohibited and can result in hazards.

About the Document

Document Scope

This document gives you an overview of the available Altivar Process Drive Systems. Additionally, you can choose from the detailed options to customize the Altivar Process Drive System to meet your system's specific needs.

Validity Note

Original instructions and information given in the present document have been written in English (before optional translation).

This documentation is valid for the Altivar Process Drive Systems.

The characteristics of the products described in this document are intended to match the characteristics that are available on www.se.com. As part of our corporate strategy for constant improvement, we may revise the content over time to enhance clarity and accuracy. If you see a difference between the characteristics in this document and the characteristics on www.se.com, consider www.se.com to contain the latest information.

Product Related Information

Read and understand these instructions before performing any procedure with this device.

⚠⚠DANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION OR ARC FLASH

- Only appropriately trained persons who are familiar with and fully understand the contents of the present manual and all other pertinent product documentation and who have received all necessary training to recognize and avoid hazards involved are authorized to work on and with this device system.
- Installation, adjustment, repair and maintenance must be performed by qualified personnel.
- Verify compliance with all local and national electrical code requirements as well as all other applicable regulations with respect to grounding of all equipment.
- Only use properly rated, electrically insulated tools and measuring equipment.
- Do not touch unshielded components or terminals with voltage present.
- Prior to performing any type of work on the device system, block the motor shaft to prevent rotation.
- Insulate both ends of unused conductors of the motor cable.
- Do not short across the DC bus terminals or the DC bus capacitors or the braking resistor terminals.

Failure to follow these instructions will result in death or serious injury.

⚠⚠DANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

Before performing work on the device system:

- Disconnect all power, including external control power that may be present. Take into account that the circuit breaker or main switch does not de-energize all circuits.
- Place a “Do Not Turn On” label on all power switches related to the device system.
- Lock all power switches in the open position.
- Wait 15 minutes to allow the DC bus capacitors to discharge.
- Verify the absence of hazardous voltage. (1)

Before applying voltage to the device system:

- Verify that the work has been completed and that the entire installation cannot cause hazards.
- If the mains input terminals and the motor output terminals have been grounded and short-circuited, remove the ground and the short circuits on the mains input terminals and the motor output terminals.
- Verify proper grounding of all equipment.
- Verify that all protective equipment such as covers, doors, grids is installed and/or closed.

Failure to follow these instructions will result in death or serious injury.

(1) Refer to the Verify the Absence of Voltage section in the installation manual of the product.

Damaged products or accessories may cause electric shock or unanticipated equipment operation.

⚠⚠DANGER

ELECTRIC SHOCK OR UNANTICIPATED EQUIPMENT OPERATION

Do not use damaged products or accessories.

Failure to follow these instructions will result in death or serious injury.

Contact your local Schneider Electric sales office if you detect any damage whatsoever.

This equipment has been designed to operate outside of any hazardous location. Only install this equipment in zones known to be free of a hazardous atmosphere.

⚠DANGER

POTENTIAL FOR EXPLOSION

Install and use this equipment in non-hazardous locations only.

Failure to follow these instructions will result in death or serious injury.

Your application consists of a whole range of different interrelated mechanical, electrical, and electronic components, the device being just one part of the application. The device by itself is neither intended to nor capable of providing the entire functionality to meet all safety-related requirements that apply to your application. Depending on the application and the corresponding risk assessment to be conducted by you, a whole variety of additional equipment is required such as, but not limited to, external encoders, external brakes, external monitoring devices, guards, etc.As a designer/manufacturer of machines, you must be familiar with and observe all standards that apply to your machine. You must conduct a risk assessment and determine the appropriate Performance Level (PL) and/or Safety Integrity Level (SIL) and design and build your machine in compliance with all applicable standards. In doing so, you must consider the interrelation of all components of the machine. In addition, you must provide instructions for use that enable the user of your machine to perform any type of work on and with the machine such as operation and maintenance in a safe manner.The present document assumes that you are fully aware of all normative standards and requirements that apply to your application. Since the device cannot provide all safety-related functionality for your entire application, you must ensure that the required Performance Level and/or Safety Integrity Level is reached by installing all necessary additional equipment.

⚠WARNING

INSUFFICIENT PERFORMANCE LEVEL/SAFETY INTEGRITY LEVEL AND/ OR UNINTENDED EQUIPMENT OPERATION

- Conduct a risk assessment according to EN ISO 12100 and all other standards that apply to your application.
- Use redundant components and/or control paths for all critical control functions identified in your risk assessment.
- Verify that the service life of all individual components used in your application is sufficient for the intended service life of your overall application.
- Perform extensive commissioning tests for all potential error situations to verify the effectiveness of the safety-related functions and monitoring functions implemented, for example, but not limited to, speed monitoring by means of encoders, short circuit monitoring for all connected equipment, correct operation of brakes and guards.
- Perform extensive commissioning tests for all potential error situations to verify that the load can be brought to a safe stop under all conditions.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

Product may perform unexpected movements because of incorrect wiring, incorrect settings, incorrect data or other errors.

⚠WARNING

UNANTICIPATED EQUIPMENT OPERATION

- Carefully install the wiring in accordance with the EMC requirements.
- Do not operate the product with unknown or unsuitable settings or data.
- Perform a comprehensive commissioning test.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

⚠WARNING

LOSS OF CONTROL

- The designer of any control scheme must consider the potential failure modes of control paths and, for critical control functions, provide a means to achieve a safe state during and after a path failure. Examples of critical control functions are emergency stop, overtravel stop, power outage and restart.
- Separate or redundant control paths must be provided for critical control functions.
- System control paths may include communication links. Consideration must be given to the implications of unanticipated transmission delays or failures of the link.
- Observe all accident prevention regulations and local safety guidelines (1).
- Each implementation of the product must be individually and thoroughly tested for proper operation before being placed into service.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

(1) For USA: Additional information, refer to NEMA ICS 1.1 (latest edition), Safety Guidelines for the Application, Installation, and Maintenance of Solid State Control and to NEMA ICS 7.1 (latest edition), Safety Standards for Construction and Guide for Selection, Installation and Operation of Adjustable-Speed Drive Systems.

The temperature of the products described in this manual may exceed 80°C (176°F) during operation.

⚠WARNING

HOT SURFACES

- Ensure that any contact with hot surfaces is avoided.
- Do not allow flammable or heat-sensitive parts in the immediate vicinity of hot surfaces.
- Verify that the product has sufficiently cooled down before handling it.
- Verify that the heat dissipation is sufficient by performing a test run under maximum load conditions.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

NOTICE

DESTRUCTION DUE TO INCORRECT MAINS VOLTAGE

Before switching on and configuring the product, verify that it is approved for the mains voltage.

Failure to follow these instructions can result in equipment damage.

Environmental Data

Environmental Data Program



Next-level transparency for better-informed product choices

The **Environmental Data Program** is a framework for how we measure, categorize, and compare the environmental attributes and footprint of our products.

Using a rigorous, fact-based methodology, the program provides environmental data from across the product lifecycle.

With this transparent, verified data, customers and partners are empowered to make conscious environmental choices and accurately evaluate and report on sustainability performance.

All our hardware offers have an associated environmental data available on se.com product pages.

Carbon footprint (kg CO2 eq) 91745

One methodology is used to calculate the carbon footprint of all our products to enable simple comparison.



Learn more about the Environmental Data Program

Use Better: How sustainable a product is, including environmental footprint, materials and substances, packaging, and energy efficiency.

Recycled Cardboard Packaging	**Yes**
REACH and RoHS compliant	**Yes**

Use Longer: How a product's life time can be effectively extended in terms of repairability and updatability.

Firmware updatable	**Yes**
Repairability Index	**Rating "A"**

Use Again: How a product can be reused, from dismantling and remanufacturing to recyclability and manufacturer take back.

Recyclable potential	**77%**
Take-back	**Yes**

Related Documents

Use your tablet or your PC to quickly access detailed and comprehensive information on all our products on www.se.com.
You can download these technical publications and other technical information from our website at www.se.com.
The internet site provides the information you need for products and solutions:

- The whole catalog for detailed characteristics and selection guides,
- The CAD files to help design your installation, available in over 20 different file formats,
- All software and firmware to maintain your installation up to date,
- A large quantity of White Papers, Environment documents, Application solutions, Specifications... to gain a better understanding of our electrical systems and equipment or automation,
- And finally all the User Guides related to your drive, listed below:

Title of Documentation	Reference Number
Leaflet: Altivar Process customized drive solutions	998-19696726 (English)
Catalog: Altivar Process ATV600 variable speed drives	DIA2ED2140502EN (English), DIA2ED2140502FR (French)
ATV660 Handbook	NHA37110 (German), NHA37111 (English)
ATV680 Handbook	NHA37112 (German), NHA37113 (English)
Drive Systems – Installation manual	NHA37118 (German), NHA37119 (English), NHA37121 (French), NHA37122 (Spanish), NHA37123 (Italian), NHA37124 (Dutch), NHA37126 (Polish), NHA37127 (Portuguese), NHA37129 (Turkish), NHA37130 (Chinese)
ATV6●● Programming manual	EAV64318 (English), EAV64320 (French), EAV64321 (German), EAV64318PT (Portuguese), EAV64318RU (Russian), EAV64322 (Spanish), EAV64323 (Italian), EAV64324 (Chinese)
ATV6●● Modbus serial link manual (embedded)	EAV64325 (English)
ATV6●● Ethernet manual (embedded)	EAV64327 (English)
ATV6●● Ethernet IP - Modbus TCP manual (VW3A3720, 721)	EAV64328 (English)
ATV6●● BACnet MS/TP manual (VW3A3725)	QGH66984 (English)
ATV6●● PROFIBUS DP Manual (VW3A3607)	EAV64329 (English)
ATV6●● DeviceNet manual (VW3A3609)	EAV64330 (English)
ATV6●● PROFINET manual (VW3A3627)	EAV64331 (English)
ATV6●● CANopen manual (VW3A3608, 618, 628)	EAV64333 (English)
ATV6●● POWERLINK Manual (VW3A3619)	PHA99690 (English)
ATV6●● Communication parameters	EAV64332 (English)
ATV6●● Embedded safety function manual	EAV64334 (English)
ATV6●● & ATV9●● ATEX manual	NVE42416 (English)
SoMove: FDT	SoMove_FDT (English, French, German, Spanish, Italian, Chinese)
Altivar Process ATV6●● DTM	ATV6xx_DTM_Library_EN (English), ATV6xx_DTM_Library_FR (French), ATV6xx_DTM_Library_DE (German), ATV6xx_DTM_Library_SP (Spanish), ATV6xx_DTM_Library_IT (Italian), ATV6xx_DTM_Library_CN (Chinese),
Application note: ATV600 Multi-drives booster control optimized	QGH36060 (English)
Application note: ATV600 Multi-masters booster control pressure feedback with cervice continuity	QGH36061 (English)
Application Note: ATV600 Multi-Drives Standard Level Control	QGH36059 (English)
Application note: ATV600 Multi-masters with optimized level control	EAV64367 (English)
Recommended Cybersecurity Best Practices	CS-Best-Practices-2019-340 (English)

Information on Non-Inclusive or Insensitive Terminology

As a responsible, inclusive company, Schneider Electric is constantly updating its communications and products that contain non-inclusive or insensitive terminology. However, despite these efforts, our content may still contain terms that are deemed inappropriate by some customers.

Terminology used in this document

The technical terms, terminology, and the corresponding descriptions in this manual normally use the terms or definitions in the relevant standards.

Among others, these standards include:

- EN 954-1 Safety of machinery - safety-related parts of control systems
- EN 61439 series: Low-voltage switchgear and controlgear assemblies
- ISO 13849: The Foundation of Functional Safety in the Machinery
- IEC 60204-1: Safety of machinery - Electrical equipment of machines – Part 1: General requirements.
- IEC 61158 series: Industrial communication networks - Fieldbus specifications
- IEC 61508 Ed.2 series: Functional safety of electrical/electronic/ programmable electronic safety-related.
- IEC 61784 series: Industrial communication networks - Profiles.
- IEC 61800 series: Adjustable speed electrical power drive systems.
- IEC 62443: Security for industrial automation and control systems.

In the area of drive systems this includes, but is not limited to, terms such as **error, error message, failure, fault, fault reset, protection, safe state, safety function, warning, warning message**, and so on.

In addition, the term **zone of operation** is used in conjunction with the description of specific hazards, and is defined as it is for a **hazard zone** or **danger zone** in the EC Machinery Directive (2006/42/EC) and in ISO 12100-1.

Contact us

Select your country on www.se.com/contact.

Schneider Electric

1884 Boulevard de la Défense

92000 Nanterre

France

Drive Systems

What’s in This Part


Overview 18
ATV660 - Compact Drive Systems 19
Expandability 24

Overview

Market Segment	**Water and waste water** **Oil & gas** **Mining, minerals & metals** **Food & beverage**





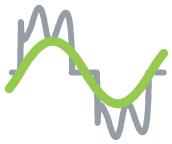

Drive Systems	Frequency inverter as enclosure unit for speed control of asynchronous and synchronous motors.	
Brief description	Enclosure unit, alternatively in the standard design, with additional adaptations or as a customized solution	Low Harmonic, alternatively in the standard design, with additional adaptations or as a customized solution
Special features	Compact Drive Systems with integrated line reactor to reduce the current harmonics THDi 32...48 %	Low Harmonic Drive Systems with active mains rectifier to reduce the current harmonics THDi < 5 %
Protection degree	IP23 standard design of the enclosure IP54 optional design of the enclosure	
Power range	110 / 90 up to 800 / 630 kW	
Voltage ranges	• 3 AC 380 V -10 % ... 415 V +6 % • 3 AC 400 V -10 % ... 415 V +10 %	• 3 AC 440 V ±10 % • 3 AC 480 V ±10 %
Mains frequency	50/60 Hz +/- 5 %	
Output frequency	0.1…500 Hz	
Control method	Asynchronous motor: Variable load torque, constant load torque, energy saving Synchronous motor: PM (permanent magnet) motor	
Interfaces	Operating panel in the enclosure door, control terminals inside the enclosure, control terminals can be extended, fieldbus connection via Ethernet or Modbus, saving the parameters via USB interface at the keypad	
References	**ATV660●●●●●X1**	**ATV680●●●●●X1**
Configuration tool	Fully configurable with Altivar Process Drive Systems Configurator: Altivar Process Drive Systems Configurator Tool.	
Further reading	You will find detailed information in this document.	You can find detailed information in the "Altivar Process ATV680 Handbook" and on www.se.com.

ATV660 - Compact Drive Systems

What's in This Chapter

General Information ATV660 20
Enclosure Design 400 V 22

General Information ATV660



Frequency inverter as enclosure unit for speed control of asynchronous and synchronous motors.

Concept

The concept of the ATV660 Compact Drive Systems offers standard enclosures ready to connect. The modular construction makes it possible to adapt the enclosure unit to the individual requests. This economic enclosure variant makes the planning easy and supports a quick installation and commissioning of the drive.

Power versus overload

For optimum adaptation to the application you can select between two overload models when dimensioning the Altivar Process Drive System.


- Normal duty
  High continuous power with an overload capability of 10 % (typically pumps and fans)
- Heavy duty
  Reduced continuous power but increased overload capability of 50 % for drives with enhanced requirements regarding overload capability, starting torque, load impacts and control performance (typically compressors, mixers, rotary blowers).

Basic equipment

The basic equipment contains frequency inverter modules, semiconductor fuses, a main switch, a line reactor to reduce the harmonics, a dv/dt filter choke (from 200 kW) for protection of the motor and spacious mains and motor bars for connection of the power cables. The design is based on the standard enclosure system PanelSeT SFN with an graphical operating panel integrated into the enclosure door.

The control is located on a spacious control panel. It provides compact dimensions, nevertheless it is enough space for additional extensions and accessibility in case of maintenance.

Altivar Process Drive Systems Configurator

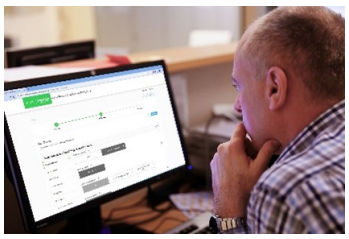


All-in-one tool to configure individual Drive Systems. It allows quick customization of Configured Drive Systems (CTO) to meet your specific requirements. Thanks to pre-defined options, the CTO variant allows a significant reduction of the production time for individually adapted drives, ready to connect.

- 4 ranges ATV660, ATV680, ATV960, ATV980
- 90 ... 800 kW @400 V
- 110 ... 900 kW @480V
- Tested, validated, documented, and pre-set parameters

Click here to start the Altivar Process Drive Systems Configurator Tool.

Device features

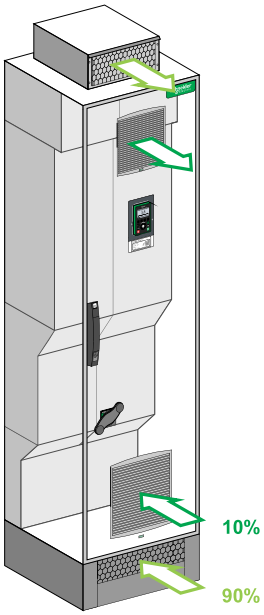

Enclosure system

The enclosure system PanelSeT SFN with additional internal reinforcement elements and clearly specified cooling air channel provides optimal cooling of the built-in frequency inverter modules and maximum compactness at the same time.

Cooling concept

The power part components are cooled in a separate cooling air channel. Via this channel about 90 % of the heat losses are exhausted. The interior of the enclosure is cooled via fans in the enclosure door.

At enclosure design IP54 the separated air supply for the power part takes place through the enclosure plinth.

Connection

The power cables are connected on the mains side and motor side to spaciously dimensioned bars. The strain relief of the cables is realized via an own bar with solid metal clamps. Each device is equipped with an EMC screen bar for correct shield connection. At the standard design, the cables are to be connected at the bottom.

Enclosure Design 400 V

ATV660 - General technical data	
Mains voltage	• 3 AC 380 V -10 % ... 415 V +6 % • 3 AC 400 V -10 % ... 415 V +10 % • 3 AC 440 V ±10 % • 3 AC 480 V ±10 % 50/60 Hz ±5 % for TT, TN-C or TN-S Other voltages and mains topologies on request.
Maximum current	Normal duty (ND): 110 % for 60 s per 10 minutes Heavy duty (HD): 150 % for 60 s per 10 minutes
Ambient temperature	-10...+50 °C (below 0 °C with additional enclosure heating, above +40 °C with derating) You will find further information at chapter Maximum Ambient Temperature, page 49.
Standard equipment	Enclosure system PanelSeT SFN in RAL 7035, protection degree IP23, graphical operating panel in the enclosure door, frequency inverter including main switch, line reactor (32...48 % THDi), mains and motor terminals, cable entry from bottom
Interfaces	Pluggable control terminals, fieldbus connection via Ethernet or Modbus
Possible customizations	• Increased protection degree IP54 • Enclosure plinth for basic device • Connection enclosure cable from top/bottom • Enclosure lighting • Enclosure heating • Key switch "local/remote" • Ethernet port on front door • Digital and analog I/O card • Relay output card • Communication cards for various fieldbus systems • STO - SIL 3 Stop category 0 or 1 • Front display module (FDM) • Modified wiring colors • Remote monitoring • Seaworthy packaging • Differing mains voltages • Multipulse supply (12-pulse) • Design without main switch • Increased short-circuit strength (100 kA) • Indicator lamps on front door • Motor temperature monitoring • Bearing temperature monitoring • dv/dt filter choke • Motor heating • Circuit breaker • Undervoltage coil for circuit breaker 230 V • Motor for circuit breaker 230 V • Automated mains disconnect • Safety labels in local language • Air intake from back • Differing enclosure colors • Customized documentation • Customized labeling • Design for IT mains • Motor contactor • ...
Standards	CE, EAC, RCM, ATEX, RFI filter for second "industrial environment" C3 integrated

Type	Size	Motor rating (ND / HD)	Output current (ND / HD)	Dimensions		
				Width	Depth (1)	Height
ATV660C11●4X1	1p	110 kW / 90 kW	211 A / 173 A	400 mm	600 mm	2150 mm
ATV660C13●4X1		132 kW / 110 kW	250 A / 211 A	400 mm	600 mm	2150 mm
ATV660C16●4X1		160 kW / 132 kW	302 A / 250 A	400 mm	600 mm	2150 mm
ATV660C20●4X1	2p	200 kW / 160 kW	370 A / 302 A	600 mm	600 mm	2150 mm
ATV660C25●4X1		250 kW / 200 kW	477 A / 370 A	600 mm	600 mm	2150 mm
ATV660C31●4X1		315 kW / 250 kW	590 A / 477 A	600 mm	600 mm	2150 mm
ATV660C35●4X1	3p	355 kW / 280 kW	660 A / 520 A	800 mm	600 mm	2150 mm
ATV660C40●4X1		400 kW / 315 kW	730 A / 590 A	800 mm	600 mm	2150 mm
ATV660C45●4X1		450 kW / 355 kW	830 A / 660 A	800 mm	600 mm	2150 mm
ATV660C50●4X1		500 kW / 400 kW	900 A / 730 A	800 mm	600 mm	2150 mm
ATV660C56●4X1	4p	560 kW / 450 kW	1020 A / 830 A	1200 mm	600 mm	2150 mm
ATV660C63●4X1		630 kW / 500 kW	1140 A / 900 A	1200 mm	600 mm	2150 mm
ATV660C71●4X1	5p	710 kW / 560 kW	1260 A / 1020 A	1400 mm	600 mm	2150 mm
ATV660C80●4X1		800 kW / 630 kW	1420 A / 1140 A	1400 mm	600 mm	2150 mm

(1) Total depth including door handle and switch handle: 664 mm

Expandability

What's in This Chapter

Introduction 25
Predefined Customizations 25
Individual Customizations 25
Type designation 26

Introduction

The Altivar Process Drive Systems are the result of our many years of experience in the field of electronic drives. Moreover we provide especially designed expansion options for a various range of applications. Our worldwide, certified manufacturing sites and the local engineering teams allow a global offer.

Predefined Customizations



Due to the predefined customizations the Altivar Process Drive System can be adapted easily and quick to the customer requirements. Besides, this allows minimal delivery time for an individually adapted enclosure ready to connect.

Certainly the Altivar Process Drive Systems can be ordered also in the basic design, which is already extensive equipped, without any customization.

Predefined customizations are:

- Increased protection degree IP54
- Enclosure plinth for basic device
- Connection enclosure cable from top/ bottom
- Enclosure lighting
- Enclosure heating
- Key switch "local/remote"
- Ethernet port on front door
- Digital and analog I/O card
- Relay output card
- Communication cards for various fieldbus systems
- STO - SIL 3 Stop category 0 or 1
- Front display module (FDM)
- Indicator lamps on front door
- Motor temperature monitoring
- Bearing temperature monitoring
- dv/dt filter choke
- Motor heating
- Circuit breaker
- Undervoltage coil for circuit breaker
- Motor for circuit breaker
- Automated mains disconnect
- Safety labels in local language
- Modified wiring colors
- Remote monitoring
- Seaworthy packaging
- Differing mains voltages
- Multipulse supply (12-pulse)
- Design without main switch
- Increased short-circuit strength (100 kA)
- Air intake from back
- Differing enclosure colors
- Customized documentation
- Customized labeling
- Design for IT mains
- Motor contactor
- Integrated control functions
- ...

Individual Customizations



Due to our substantial know-how and the high flexibility in performing projects, it is possible to realize unique system solutions. They are individually adapted to the customers demands.

Typical customizations:

- Multi drives (several frequency inverters in an enclosure composition)
- Differing cooling system
- Different enclosure system
- Differing dimensions
- ...

Type designation

The type designation of the Altivar Process Drive Systems consists of several points of signs (characters and figures). The meaning of each point is illustrated in the following example.

	ATV	660	C16	Q4	X1

Product	Description
ATV	Altivar

Segments	
660	Compact Drive Systems

Drive power	
C11...C80	110 / 90 kW ... 800 / 630 kW

Mains voltage	
Q4	3 AC 380 V -10 %...415 V +6 % (+10 %)
R4	3 AC 440 V ±10 %
T4	3 AC 480 V ±10 %

Design variant	
X1	Europe CE
X3	China CCC

General Specification

What’s in This Part

Quality 28
Mains Conditions 33
Preliminary Instructions 37

Quality

What's in This Chapter

Overview 29
System concept ATV660 29
CE Marking 30
Installation Regulations 30
Safety of Machinery 31
EMC Product Standard for Power Device Systems EN 61800-3 31
Use In Industrial Environment 32

Overview


Altivar frequency inverters use modern components and solutions for the control of asynchronous three-phase motors and synchronous three-phase motors. This enables an extremely compact design and user-friendly device features.

Our high degree of quality awareness ranges from the basic requests in the product specification over the development of the cooling system, of the mechanical design, of the electrical circuit diagram and the individual functions up to the production of the device. This process quality level is also long-term guaranteed by means of the corresponding quality assurance systems in the individual business processes and is certified every year by independent authorities according to DIN EN ISO 9001.

The Altivar Process Drive Systems fulfil the relevant international standards and regulations.

System concept ATV660

Altivar Process Drive Systems are manufactured according to the selected design (basic device and options) and are delivered as a drive unit ready to connect. They include the functionally necessary components.

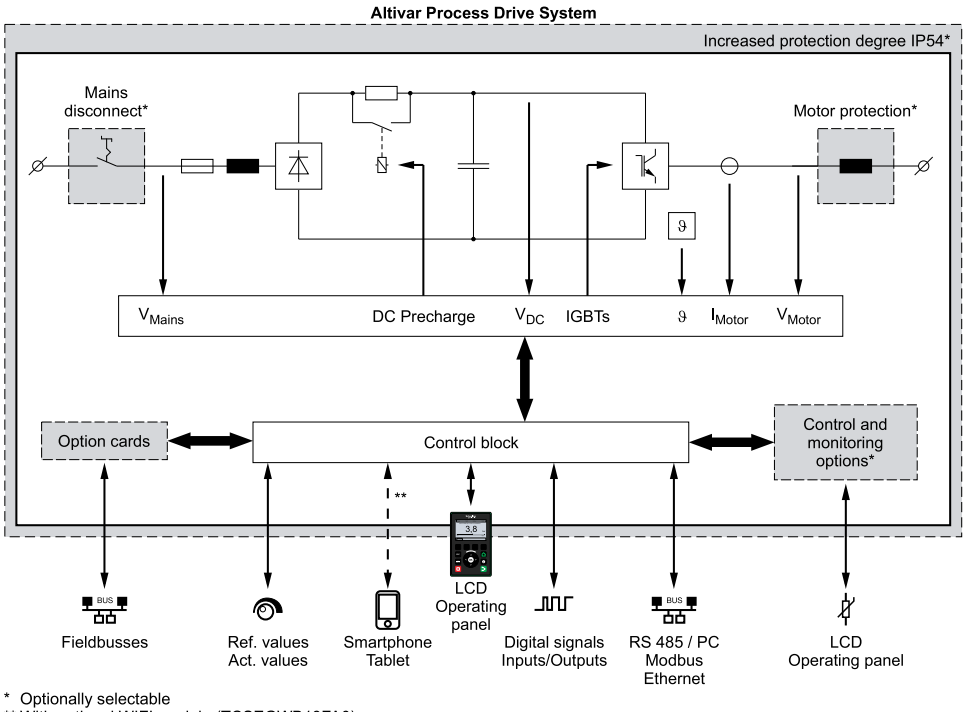

* Optionally selectable
** With optional WIFI module (TCSEGWB13FA0)

Depending on the local conditions and the requests on the drive the basic design can be supplemented by options. Options for the power path, options for control and operation as well as mechanical options are available. They are all integrated into the enclosure unit but they may cause a change of dimensions.

CE Marking

The frequency inverters have a CE marking on the rating plate. However, to achieve the corresponding limits it is necessary to observe the installation regulations, superior and regional standards and directives as well as the directives listed below.

All devices and drives of the electric drive engineering may cause electromagnetic interferences and otherwise they may be influenced by such interferences. Therefore, they are subject to the **EMC directive 2014/30/EC**.

The frequency inverters have an operating voltage which is clearly in the range of 50...1000 V AC or 75...1500 V DC. Therefore, they are also subject to the **Low Voltage Directive 2014/35/EC**.

Because of the EMC filters which are built into the frequency inverters they are in conformity with **EN 61800-3** and **EN 61800-5-1**.

Frequency inverters are not considered as stand-alone machines according to the Machinery Directive 2006/42/EC. They have to be accounted as component of the closed functional safety system.

Limit values

This product meets the EMC requirements according to the standard IEC 61800-3 if the measures described in this manual are implemented during installation.

If the selected composition (product itself, mains filter, other accessories and measures) does not meet the requirements of category C1, the following information applies as it appears in IEC 61800-3:

⚠WARNING

RADIO INTERFERENCE

In a domestic environment this product may cause radio interference in which case supplementary mitigation measures may be required.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

Installation Regulations

- The frequency inverters have a RFI filter for grounded mains built-in.
- Take care of good HF connection between motor cable screen and filter.
- Use of shielded motor cables, proper connection of the motor cables on both ends or proper laying in a metallic, closed and interconnected cable conduit.
- In case of high motor cable lengths a corresponding dv/dt filter choke is required.
- Use shielded control cables and connect them correctly.
- Ground the frequency inverter for human protection.
- Consider the protective separation (PELV) when preparing signal wires and coupling relays.
- Lay the motor cables separate from other cables, especially from the signal wires.

NOTE: Further information is given in the installation manual.

Safety of Machinery

For the functional safety and stop categories the function "Safe Torque Off (STO)" has been integrated. So an optimal adaptation of the drive to the required safety category for the machine is possible.

NOTE: You will find further information about this function in chapter Safe Torque Off (STO), page 134.

For all selectable safety options the implementation of external safety-relevant contacts is provided. So the Altivar Process does not act as a closed functional safety system in terms of the Machine directive and safety standards EN/IEC 61508, ISO 13849-1 and NF EN 62061. It has to be accounted as component in any case.


EMC Product Standard for Power Device Systems EN 61800-3

For frequency inverter devices the product standard EN/IEC 61800-3 edition 1 and 2 appeared. It has first priority over the existing general standards (generic standards). If a device is installed into another device for which a separate EMC product standard exists, then this standard applies.

The aim of the **EMC directive 2014/30/EEC** is the ability of electric and electronic installations to operate satisfactorily in their electromagnetic environment without influencing the environment or other loads therein.

Therefore, the PDS (Power Device Systems) product standard contains both limits for admissible interferences and requirements for the necessary interference resistance.

The power device standard EN 61800-3 covers the complete device from the mains supply to the motor shaft.

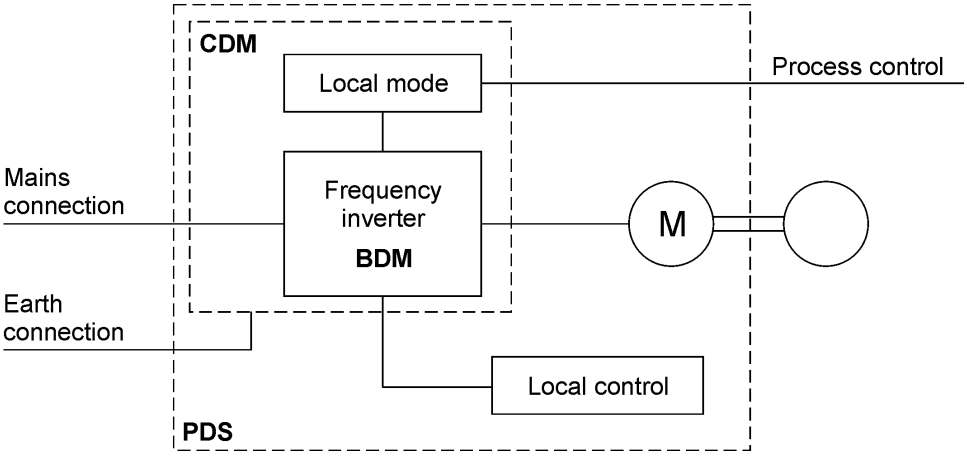

BDM: Base-Device-Module	Basic device consisting of the power part and the control electronics (e.g. frequency inverter - built-in unit)
CDM: Complete-Device-Module	Device modules consisting of BDM (basic device) and extensions, if existing (e.g. enclosure including main switch, circuit breaker, line contactor, filter components, power terminals, ...)
PDS: Power-Device-System	Device system consisting of CDM (device module) and motor, motor cable, local control, power transformer, ... (e.g. the complete electric device of a machine)

The differentiation in respect of the sales method and the range of use is essential for the handling of frequency inverters.

Use In Industrial Environment

The standard refers to these application areas as "second environment". These are areas which are separated from the public mains by means of an own transformer.

The user has to take care that the suppression components recommended by the manufacturer are used and that the introductions of the manufacturer are observed. Moreover, the user has to take care that strong interferences do not couple into neighboring low-voltage mains.





If the neighboring mains is a public mains with residential areas, the limits 66-56/56/60 dB(µV) quasi-peak apply. In case of industrial mains the higher limits 79/73/73 dB(µV) quasi-peak can be used.

Furthermore, it is necessary to enhance the suppression of interferences if other devices are influenced. The operator of the plant is responsible for this improvement.

The limits for immunity are much stricter because they are based on a generally higher level of interferences.

Category C3

Use in industrial environments

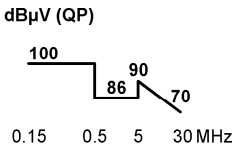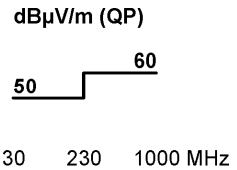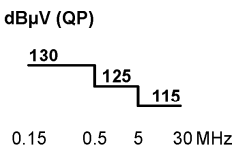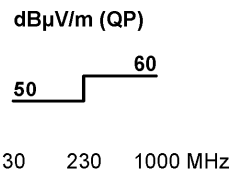Limits for interferences	Line-conducted interferences	Radiation
For devices with a size ≤ 100 A the admissible limits for interferences are 100/86/90-70 dB(µV) quasi-peak and 50/60 dB(µV/m) at a distance of 10 m (class A group 2).		
For devices with a size > 100 A the admissible limits for interferences are 130/125/115 dB(µV) quasi-peak and 50/60 dB(µV/m) at a distance of 10 m (class A group 2).		

Category C4

Use in industrial environments for devices > 1000 V or > 400 A

For these devices are no limits defined. An EMC concept has to be compiled within project planning.

IT mains

In case of non-grounded mains it is usually not possible to keep the limits. Filter capacitors make detection of insulation faults difficult and thus they interfere with the concept of a floating power supply. However, filters that are developed especially for IT mains can be used because they also cause a high reduction of the conducted interferences in non-grounded mains.

NOTE: The basic requirements for compliance with the relevant limits are the observance and compliance of the installation requirements and a correct customization of the Device System.

Mains Conditions

What's in This Chapter

Mains Voltage 34
Non-grounded Mains 34
Radio Interferences 35
Mains Impedance / Short-circuit Current 35
Reactive Current Compensation Systems 35
12-/24-pulse Supply 36
Switching Rate 36

Mains Voltage

The Altivar Process Drive Systems are designed for standard industrial mains TT and TN with following mains voltage:

- 3 AC 380 V -10 % ... 415 V +6 %
- 3 AC 400 V -10 % ... 415 V +10 %
- 3 AC 440 V ±10 %
- 3 AC 480 V ±10 %

NOTE: Other voltages and the use in IT mains or "Corner grounded networks" are available on request.

The mains voltage must comply with the requirements according to IEC 60038 and EN 50160:

- Unbalance between phases: < 2 %
- Total harmonic factor THD(v): < 10 %
- Maximum single harmonic: < 5 %

NOTICE
DESTRUCTION DUE TO INCORRECT MAINS VOLTAGE Before switching on and configuring the product, verify that it is approved for the mains voltage. **Failure to follow these instructions can result in equipment damage.**

Undervoltage behavior

In case of short-time mains voltage drops outside the specified tolerance, operation is still possible.

If the mains voltage does not return within the specified time, an undervoltage shut-down occurs.

Mains undervoltage	Restriction
-10 % of nominal voltage	Starting the drive and continuous operation possible (1)
-15 % of nominal voltage	Starting the drive and operation (1) for 10 s per 100 s possible
-20 % of nominal voltage	Operation (1) for less than 1 s possible
-30 % of nominal voltage	Operation (1) for less than 0.5 s possible
(1) With nominal current	

Non-grounded Mains

The Altivar Process Drive Systems can be prepared for the use in non-grounded mains (IT mains or "Corner grounded networks").

Radio Interferences

The Altivar Process Drive Systems include a radio frequency interference filter as standard. This filter fulfils the requirements for category "C3 – industrial environments" according to EN/IEC 61800-3 (in the past: EN 55011 class A group 2).

Limit values

This product meets the EMC requirements according to the standard IEC 61800-3 if the measures described in this manual are implemented during installation.

If the selected composition (product itself, mains filter, other accessories and measures) does not meet the requirements of category C1, the following information applies as it appears in IEC 61800-3:

⚠WARNING

RADIO INTERFERENCE

In a domestic environment this product may cause radio interference in which case supplementary mitigation measures may be required.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

Mains Impedance / Short-circuit Current

The Altivar Process Drive Systems are designed considering a maximal and minimal permitted mains short-circuit current of the supply (values see "Technical data" of the respective frequency inverter).

These frequency inverters can be designed for higher mains short-circuit currents on request. You will find information about the short-circuit protection at chapter Mains Connection, page 80.

Reactive Current Compensation Systems

Frequency inverters cause harmonics in the supplying mains (see chapter Mains Current Harmonics / Mains Voltage Distortion, page 83). If a reactive current compensation system is used upstream of the drive, the harmonics can cause overload of the capacitors of the reactive current compensation system.

Switched reactive current compensation systems can cause overvoltage in the mains supply. Such overvoltage can adversely affect the frequency inverter.

NOTICE

MAINS OVERVOLTAGE AND OVERLOAD OF THE REACTIVE CURRENT COMPENSATION SYSTEM

Install properly rated chokes upstream of the reactive current compensation system.

Failure to follow these instructions can result in equipment damage.

12-/24-pulse Supply

All Altivar Process Drive Systems can be designed with 12-pulse supply. For some types also the design with 24-pulse supply is possible.

NOTE: You will find information about the design variations at the chapter 12-pulse Supply, page 144.

Switching Rate

Altivar Process Drive Systems are equipped with a main switch for disconnecting the applied mains voltage.

In case of frequent start/stop requests it is recommended to realize them by means of the digital control inputs (or via a serial bus) directly to the electronics of the inverter.

Optionally the mains separation can be realized by a circuit breaker with motor.

NOTE: By means of the certificated control inputs $\overline{\text{STOA}}$ and $\overline{\text{STOB}}$ a "Safe Torque Off" of the drive is considering the safety category according to ISO 13849-1 (and IEC/EN 61800-5-2). Disconnecting the mains supply or the motor is therefore not required.

Inverter control	Switching rate ATV660
Mains voltage switched external	Max. 60 switching operations per hour
Mains voltage switched internal: • Main switch (standard) • Circuit breaker (option) • Circuit breaker with motor (option)	Max. 10 switching operations per hour Max. 10,000 switching operations total
Start / Stop requests via digital inputs with active energy saving function "Stop and Go" (1)	Max. 60 switching operations per hour
Start / Stop requests via digital inputs without energy saving function "Stop and Go" (1)	Arbitrary
Release / Lock via STO inputs with active energy saving function "Stop and Go" (1)	Max. 60 switching operations per hour
Release / Lock via STO inputs without energy saving function "Stop and Go" (1)	Arbitrary
Mains voltage switched external via contactor (on request)	Max. 60 switching operations per hour
(1) The energy saving function "Stop and Go" is activated by default.	

NOTE: The device fans are automatically controlled depending on the start/stop request.

If the power stage is disabled unintentionally, for example as a result of power outage, errors or functions, there is a possibility that the motor is no longer decelerated in a controlled way.

⚠WARNING

UNANTICIPATED EQUIPMENT OPERATION

Verify that movements without braking effect does not result in unsafe conditions.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

Preliminary Instructions

What's in This Chapter

Responsibility 38
Installation Site 38
Increased Motor Speed 38
Overvoltage Protective Circuit 39
Residual Current Circuit Breaker 39
Automatic Restarting 40
Locking of the Frequency Inverter 40
Stop and Go Function 41
Connecting and Disconnecting the Motor 41
Multi-motor Operation 41
Operation of ATEX Motors 42


Responsibility

All stated connection recommendations and planning remarks are to be taken merely as suggestions which must be adapted to the local conditions and regulations concerning installation and usage.

This applies especially to the functional safety regulations for machines, the EMC regulations and the general regulations for human protection.

Installation Site

The drives are qualified for vertical installation in electrical operating rooms as well as in the area of production facilities.

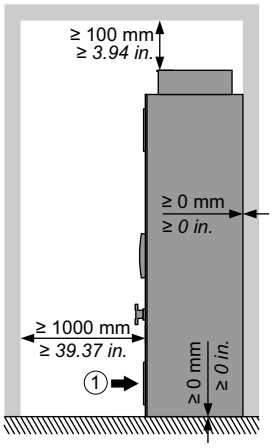

- Observe the specified minimum distances. Mounting the Drive Systems side by side or back to back is allowed.
- Install the drive vertically on a non-combustible, solid and vibration-free ground.
- Take care of compliance with the ambient conditions.
- Take care that the air exchange is sufficient for dissipation of the lost heat during operation.

① Air inflow temperature: -10...+50 °C (14...122 °F) (below 0 °C (32 °F) with additional enclosure heating, above +40 °C (104 °F) with derating)

NOTE: At enclosure design IP54 the ATV660 frequency inverter is qualified for pollution degree 3 according to EN 61800-5-1.

NOTE: Further information is given in the installation manual.

This equipment has been designed to operate outside of any hazardous location. Only install this equipment in zones known to be free of a hazardous atmosphere.

⚠DANGER

POTENTIAL FOR EXPLOSION

Install and use this equipment in non-hazardous locations only.

Failure to follow these instructions will result in death or serious injury.

Increased Motor Speed

With the Altivar Process Drive Systems it is possible to control the rotational speed of motors from 0.1…500 Hz.

Overvoltage Protective Circuit

The AC and DC control circuits must be protected against overvoltage. Use flyback diodes for DC control circuits.

For AC control circuits, RC circuits are advisable because they can reduce the peak overvoltage and the rise time while varistors only reduce the peak voltage.

NOTICE
INOPERATIVE CONTROL CIRCUITS Verify that all inductances such as relays, contactors, external brakes, etc. are equipped with appropriate overvoltage protection circuits. **Failure to follow these instructions can result in equipment damage.**

Residual Current Circuit Breaker

Frequency inverters, especially those with additional EMC filters and shielded motor cables, lead an increased leakage current against ground.

The leakage current depends on:

- The length of the motor cable
- The type of laying and whether the motor cable is shielded or not
- The set pulse frequency
- The use of an additional radio frequency interference filter
- The grounding of the motor at its installation place (grounded or non-grounded)

Depending on the conditions, the leakage current of plants with high cable lengths can be absolutely higher than 100 mA !

The built-in residual current detection has no current-limiting effect. It only helps to protect the drive and is no human protection.

Particularly because of the capacitors of the radio frequency interference filter, an unintentional triggering of a residual current circuit breaker may occur at the moment of switching on. As well, the ground capacitances may cause an incorrect triggering during operation. On the other hand, it is possible that the triggering is blocked by means of DC components which are caused by the mains rectification at the input of the inverter.

Direct current can be introduced in the protective ground conductor of this device. If a residual current device (RCD / GFCI) or a residual current monitor (RCM) is used for additional protection against direct or indirect contact, the following specific types must be used:

⚠WARNING

DIRECT CURRENT CAN BE INTRODUCED INTO THE PROTECTIVE GROUND CONDUCTOR

Use a Type B Residual Current Device (RCD / GFCI) or a Residual Current Monitor (RCM) that has approval for use with frequency inverters and is sensitive to all types of current.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

Further conditions for use of a residual current device:

- The device has an increased leakage current at the moment power is applied. Use a residual current device (RCD / GFCI) or a residual current monitor (RCM) with a response delay.
- High-frequency currents must be filtered.

NOTE: Protect the other loads by means of a separate residual current circuit breaker.

Automatic Restarting

This function increases the availability, especially for drives that are not integrated into the plant control via a fieldbus system. Depending on the parameterization, the frequency inverter can automatically start-up again after each mains switch-on or mains recurrence.

Locking of the Frequency Inverter

Altivar Process Drive Systems include the standard protective function "Safe Torque Off (STO)", which helps to prevent any unintended start-up of the motor. This function fulfills, when correctly wired, the machine standard ISO 13849-1 Performance level PL e, the IEC/EN 61508 Safety integrity level SIL 3 standard for functional safety and the power drive system standard IEC/EN 61800-5-2.

NOTE: You will find further information in the Safety Function Manual (EAV64334).

The safety function STO (Safe Torque Off) does not remove power from the DC bus. The safety function STO only removes power to the motor. The DC bus voltage and the mains voltage to the drive are still present.

⚠⚠DANGER

HAZARD OF ELECTRIC SHOCK

- Do not use the safety function STO for any other purposes than its intended function.
- Use an appropriate switch, that is not part of the circuit of the safety function STO, to disconnect the product from the mains power.

Failure to follow these instructions will result in death or serious injury.

When the safety function STO is triggered, the power stage is immediately disabled. In the case of vertical applications or external forces acting on the motor shaft, you may have to take additional measures to bring the motor to a standstill and to keep it at a standstill when the safety function STO is used, for example, by using a service brake.

⚠WARNING

INSUFFICIENT DECELERATION OR UNINTENDED EQUIPMENT OPERATION

- Verify that using the safety function STO does not result in unsafe conditions.
- If standstill is required in your application, ensure that the motor comes to a secure standstill when the safety function STO is used.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

Stop and Go Function



All Altivar Process Drive Systems include the energy saving function "Stop and Go".
When the frequency inverter gets a stop or lock request, the own consumption is clearly decreased by reducing the DC link voltage. With the next start request the DC link is charged and the motor can start-up again.

NOTE: For applications where a start delay of 1...2 s is undesired, this energy saving function can be also deactivated.

Connecting and Disconnecting the Motor

Alternatively to the use of the control terminal STO "Safe Torque Off" a safety switch or a motor contactor can be installed to connect and disconnect the motor – Design on request.

After connection the motor restarts by means of the function "Catch on the fly".

Multi-motor Operation

With Altivar Process Drive Systems it is possible to operate several motors at one output.

For pumps (centrifugal pumps) and fan applications, however, observe the following:

- The sum of the nominal currents has to be less than the nominal current of the inverter.
- A different speed control is not possible.
- The total motor cable length has to be taken into consideration.
- No high starting torque is available.
- The inverter does not provide individual motor overload protection.
- Autotuning is not possible (but also not necessary).
- Activation of individual motors is only permitted when the starting current remains less than the maximum inverter current.

Operation of ATEX Motors

If you want to operate an explosion-protected motor (ATEX) with this drive system, you must use the option "Motor monitoring PTC with ATEX certificate".

NOTE: You will find further information about the operation of ATEX motors in the ATEX manual (NVE42416).

This equipment has been designed to operate outside of any hazardous location. Only install this equipment in zones known to be free of a hazardous atmosphere.

⚠DANGER

POTENTIAL FOR EXPLOSION

Install and use this equipment in non-hazardous locations only.


Failure to follow these instructions will result in death or serious injury.

ATV660●●●●4X1

What’s in This Part

ATV660 Compact Drive Systems for 400 V Mains....44
General Technical Data....45
Protection Degree....47
Cooling concept....48
Maximum Ambient Temperature....49
Specification....50
Circuit Diagram....79
Mains Connection....80
Motor Connection....84
Predefined Customizations....92

ATV660 Compact Drive Systems for 400 V Mains

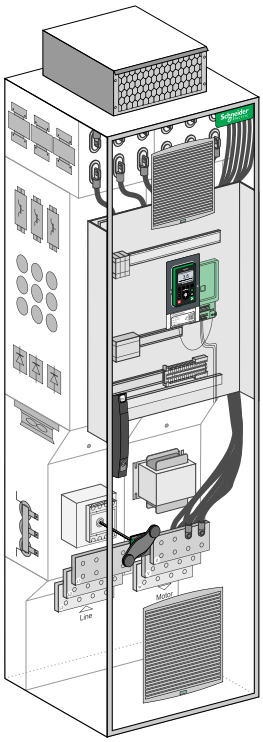

Power components:

- Mains connection terminals
- Main switch
- Semiconductor fuses
- EMC filter
- Line reactor(s)
- Rectifier module(s)
- Inverter module(s)
- dv/dt filter choke(s) (optional at size 1p)
- Terminals for motor connection

Design:

- Floor-standing enclosure
- Integrated control panel
- Protection degree IP23
- Forced cooling
- -10...+50 °C (below 0 °C with additional enclosure heating, above +40 °C with derating)
- Graphical operating panel in the enclosure door

Scope of delivery:

- ATV660 Compact Drive System
- Multilingual instructions
- Enclosure layout plans consisting of circuit diagram, terminal connection table, list of materials and design drawing
- Transport packaging

Sophisticated service concept with QR code



- Modular design allows easy logistics of spare parts.
- Optimized costs for maintenance due to the dynamic maintenance schedule with integrated monitoring of the individual components.
- Simple exchange of power modules and fans.
- Quick assistance with dynamic QR codes and Customer Care App.

Documentation → **Asset Life Cycle Documents**: Access to the **Asset Lifecycle Manager** for all product-specific documentation.

General Technical Data

Input	
Rated voltage U_n	for TT, TN-C or TN-S: • 3 AC 380 V -10 % ... 415 V +6 % • 3 AC 400 V -10 % ... 415 V +10 % • 3 AC 440 V ±10 % • 3 AC 480 V ±10 % Other voltages and mains topologies on request
Rated frequency f_n	50 / 60 Hz ±5 %
Overvoltage category	Category III according to EN 50178

Output		
Control method	Asynchronous motor:	Variable load torque, constant load torque, energy saving
	Synchronous motor:	PM (permanent magnet) motor
Voltage	3 AC 0...100 % mains voltage	
Overload	Normal Duty (ND): 110 % for 60 s per 10 minutes Heavy Duty (HD): 150 % for 60 s per 10 minutes	
Pulse frequency	2.5 kHz, adjustable from 2...8 kHz	
Frequency	0.1…500 Hz	
Short-circuit protection	Short-circuits and ground faults are handled by overcurrent function and switch-off the output.	
Speed accuracy	V/f mode:	slip frequency
	VC without feedback:	0.3 x slip frequency

Mechanical strenght	
Mechanical vibrations	According to IEC/EN 60068-2-6 1.5 mm at 3...10 Hz, 0.6 g at 10...200 Hz (3M3 according to IEC/EN 60721-3-3)
Mechanical shock	According to IEC/EN 60068-2-27 4 g for 11 ms (3M2 according to IEC/EN 60721-3-3)

Ambient conditions	
Ambient temperature	-10...+50 °C (below 0 °C with additional enclosure heating, above +40 °C with derating) 3K3 according to IEC/EN 60721-3-3
Storage / Transport temperature	-25...+70 °C
Protection degree	Door closed: IP23 (optionally enclosure design IP54) Door open: IP2x
Environmental class / Humidity	Class 3K3 in accordance with IEC/EN 60721-3-3 / no condensation inside the enclosure, max. 95 % relative humidity
Altitude	Up to 1000 m no derating necessary 1000...2000 m derating of 1 % / 100 m (for all types of mains) 2000...3800 m derating of 1 % / 100 m (only TT/TN, IT) 3800...4800 m derating of 1 % / 100 m (only TT/TN)
Allowed pollution	Pollution degree IP23: 2 according to EN 61800-5-1 Pollution degree IP54 (optional): 3 according to EN 61800-5-1 Chemical / mechanical classification: 3C3 and 3S3 according to EN 60721-3-3
Protection class	Class 1 according to EN 61800-5-1


Functional safety	
Functional safety of the drive	The function "Safe Torque Off" (STO) allows a controlled shut-down and switch-off of the power supply to the motor. It also helps to prevent any unintended start of the motor according to ISO 13849-1, performance level PL e, according to IEC/EN 61508 safety integrity level SIL 3 and IEC/EN 61800-5-2.
Response time	≤ 100 ms at STO (Safe Torque Off)

Standards	
Basic standard	The devices are designed, built and tested on the basis of EN 61800-2, EN 61800-3, EN 61800-5-1 and EN 60204-1.
EMC immunity	According to EN 61800-3, second environment (EN 61000-4-2; EN 61000-4-3; EN 61000-4-4; EN 61000-4-5; EN 61000-4-6)
EMC emission	In accordance with product standard EN 61800-3, second environment, category C3
Insulation	Galvanic insulation of the control circuit in accordance with EN 61800-5-1 PELV (Protective Extra Low Voltage)
Standards	CE, EAC, RCM, ATEX, EN 61800, RFI filter for second "industrial environment" C3 integrated

Protection Degree

The standard design of the Altivar Process Drive Systems complies with protection degree IP23. It provides optimal cooling of the built-in frequency inverter modules and all power components as well as maximum compactness at the same time.

Standard enclosure design IP23

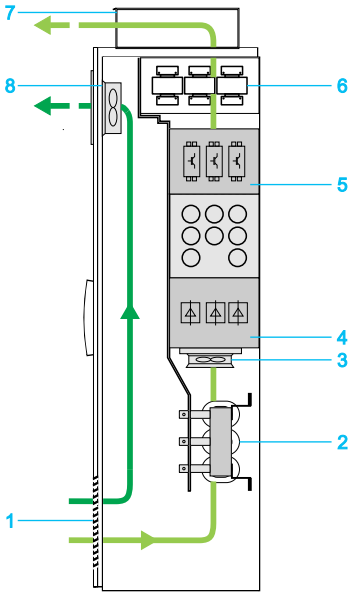

For optimized cooling of the Altivar Process Drive System, all power part components are arranged in the main cooling air channel.

The input of the cooling air takes place by a grid in the lower area of the enclosure door. The internal fan, which is in a separated air channel, provides the cooling of the power part. The air outlet takes place through the top of the enclosure. The heat losses of the control part are exhausted by a fan in the enclosure door.

1 Air inflow grid (without filter mat) for control part and power part

2 Line reactor

3 Fans for power part

4 Rectifier module

5 Inverter module

6 dv/dt filter choke (from 200 kW built-in as standard)

7 Air outlet through metal grid with splash water protection

8 Air outlet (without filter mat) with fans for control part

Air inflow temperature: -10...+50 °C (below 0 °C with additional enclosure heating, above +40 °C with derating)

NOTE: For details about the increased protection degree IP54 see chapter Increased Protection Degree IP54, page 122.

Cooling concept

Control/monitoring of fans

The power part fans as well as the fans in the enclosure door are controlled energy optimized depending on the operation. Switching the fans on and off is derived from the start/stop request.

The fans in the power part are equipped with speed monitoring and the fans in the enclosure doors include a temperature monitoring and that helps to protect the Altivar Process Drive Systems. If one of these monitoring units triggers, a warning message is generated.

Furthermore, the operating hours of all fans can be monitored and a warning message can be triggered when the set limit is exceeded.



Overtemperature protection

The temperature of the power part is monitored all the time. In case of overtemperature the pulse frequency or the power is automatically reduced.
The temperature of the control part is monitored with a thermostat. When the set temperature is exceeded, a warning message is generated. Only in case of insufficient cooling the drive is necessarily shut down.

Maximum Ambient Temperature

Depending on the chosen pulse frequency, the maximum ambient temperature and the desired output frequency a derating is necessary. This can be determined by means of the following diagrams.

Power reduction depending on the ambient temperature, the pulse frequency and the output frequency

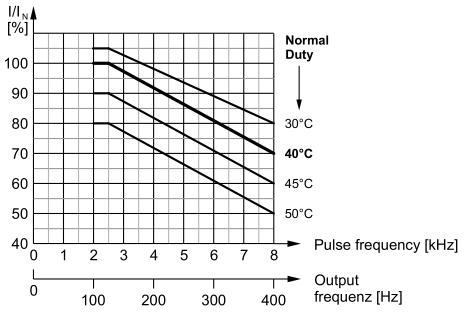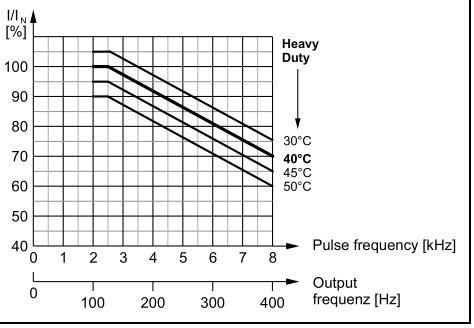Normal Duty ND	Heavy Duty HD
	

Observe the following guidelines:

- In case of output frequencies higher than 125 Hz the pulse frequency is increased automatically. So the pulse frequency is increased to 4 kHz at 200 Hz output frequency, for example. Consequently, a derating of 8 % at max. 40°C has to be considered.
- Due to the reduction of the output current also the overload capability of the Altivar Process Drive System is reduced.
- At higher pulse frequencies the allowed motor cable length is reduced (see Length of Motor Cables, page 87).
- For full shaft power the motor size should not be more than one power rating bigger than the drive.

NOTE: If the ambient temperature is too high, the pulse frequency is automatically reduced which helps to prevent an overload of the inverter (except in case of operation with sinus-motor-filter).

Specification

What's in This Chapter

Technical Data ATV660C11●4X1 51
Dimensions IP23 for Size 1p 52
Interior View IP23 for Size 1p 52
Technical Data ATV660C13●4X1 53
Dimensions IP23 for Size 1p 54
Interior View IP23 for Size 1p 54
Technical Data ATV660C16●4X1 55
Dimensions IP23 for Size 1p 56
Interior View IP23 for Size 1p 56
Technical Data ATV660C20●4X1 57
Dimensions IP23 for Size 2p 58
Interior View IP23 for Size 2p 58
Technical Data ATV660C25●4X1 59
Dimensions IP23 for Size 2p 60
Interior View IP23 for Size 2p 60
Technical Data ATV660C31●4X1 61
Dimensions IP23 for Size 2p 62
Interior View IP23 for Size 2p 62
Technical Data ATV660C35●4X1 63
Dimensions IP23 for Size 3p 64
Interior View IP23 for Size 3p 64
Technical Data ATV660C40●4X1 65
Dimensions IP23 for Size 3p 66
Interior View IP23 for Size 3p 66
Technical Data ATV660C45●4X1 67
Dimensions IP23 for Size 3p 68
Interior View IP23 for Size 3p 68
Technical Data ATV660C50●4X1 69
Dimensions IP23 for Size 3p 70
Interior View IP23 for Size 3p 70
Technical Data ATV660C56●4X1 71
Dimensions IP23 for Size 4p 72
Interior View IP23 for Size 4p 72
Technical Data ATV660C63●4X1 73
Dimensions IP23 for Size 4p 74
Interior View IP23 for Size 4p 74
Technical Data ATV660C71●4X1 75
Dimensions IP23 for Size 5p 76
Interior View IP23 for Size 5p 76
Technical Data ATV660C80●4X1 77
Dimensions IP23 for Size 5p 78
Interior View IP23 for Size 5p 78

Technical Data ATV660C11●4X1

Type			ATV660C11●4X1	
Nominal data			**Normal Duty ND**	**Heavy Duty HD (1)**
Typical motor rating P_n		U_n = 400 V	110 kW	90 kW
		U_n = 440 V	110 kW	90 kW
		U_n = 480 V	132 kW	110 kW
Rated output current I_n			211 A	173 A
Maximum current I_{MAX}	for 60 s per 10 minutes		232 A	260 A
Input				
Rated input current I_{in}		U_n = 400 V	195 A	164 A
(at I_{scc} = 22 kA)		U_n = 440 V	179 A	151 A
		U_n = 480 V	196 A	168 A
Rated apparent power S_n		U_n = 400 V	135 kVA	113 kVA
		U_n = 440 V	136 kVA	115 kVA
		U_n = 480 V	163 kVA	139 kVA
Current harmonic THDi (2)			< 48 %	
Protection for upstream cables				
Pre-fuse	U_n = 400, 440, 480 V		250 A gG	250 A gG
Circuit breaker I_{therm} / I_{magn}			230 A / 2 kA	200 A / 2 kA
Internal short-circuit protection				
Fuse	U_n = 400, 440, 480 V		250 A aR	
Characteristics				
Efficiency at I_n			0.98	
Heat losses at I_n		Total losses	2530 W	2010 W
		Control part only	380 W	300 W
Weight		Net	300 kg	
		Gross	340 kg	
Ambient conditions				
Air flow		Power part	580 m³/h	
		Control part	140 m³/h	
Sound pressure level			69 dB(A)	
Rated short-circuit current I_{scc}		Minimum (3)	3 kA	
		Maximum (4)	50 kA (100 ms)	
Mains and motor connection (5)				
Typical cable			1x (3x 120 mm²) or 2x (3x 50 mm²)	1x (3x 95 mm²)
Max. Cable cross section (6)		Cable	2x (3x 120 mm²) or 1x (3x 240 mm²)	
		Cable entry (7)	max. 180 mm	
Terminals per phase			2x M12	

(1) For Heavy Duty HD operation parameter [Dual Rating] *drt* has to be set to [High rating] *HiGH* (see programming manual EAV64318).

(2) For details see table under chapter Mains Current Harmonics / Mains Voltage Distortion, page 83.

(3) Minimum mains short-circuit current


(4) Permitted short-circuit current when the specified pre-fuse or circuit breaker is installed

(5) You will find further information at chapter Mains Connection, page 80 and at chapter Motor Connection, page 84.


(6) Greater connection cross sections are possible with the separate connection enclosure.

(7) Maximum possible width of cables connected next to each other in the enclosure

Dimensions IP23 for Size 1p

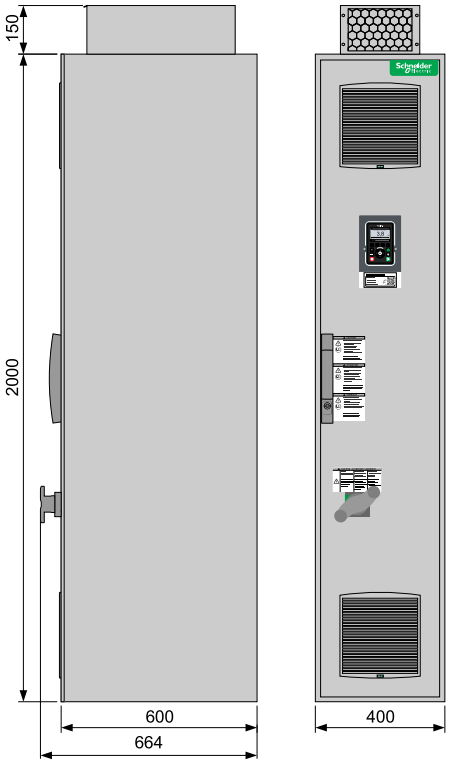

Interior View IP23 for Size 1p

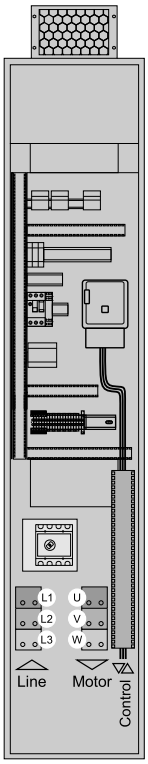

NOTE: Following customizations affect the total dimensions:

- Increased protection degree IP54
- Enclosure plinth for basic device
- Connection enclosure cable from top/ bottom
- 12-pulse supply

Technical Data ATV660C13●4X1

Type			ATV660C13●4X1	
Nominal data			**Normal Duty ND**	**Heavy Duty HD (1)**
Typical motor rating P_n		U_n = 400 V	132 kW	110 kW
		U_n = 440 V	132 kW	110 kW
		U_n = 480 V	160 kW	132 kW
Rated output current I_n			250 A	211 A
Maximum current I_{MAX}	for 60 s per 10 minutes		275 A	317 A
Input				
Rated input current I_{in}		U_n = 400 V	232 A	197 A
(at I_{scc} = 35 kA)		U_n = 440 V	213 A	181 A
		U_n = 480 V	233 A	198 A
Rated apparent power S_n		U_n = 400 V	161 kVA	136 kVA
		U_n = 440 V	162 kVA	138 kVA
		U_n = 480 V	194 kVA	164 kVA
Current harmonic THDi (2)			< 48 %	
Protection for upstream cables				
Pre-fuse	U_n = 400, 440, 480 V		300 A gG	300 A gG
Circuit breaker I_{therm} / I_{magn}			280 A / 3 kA	240 A / 3 kA
Internal short-circuit protection				
Fuse	U_n = 400, 440, 480 V		315 A aR	
Characteristics				
Efficiency at I_n			0.98	
Heat losses at I_n		Total losses	3150 W	2520 W
		Control part only	450 W	360 W
Weight		Net	300 kg	
		Gross	340 kg	
Ambient conditions				
Air flow		Power part	580 m³/h	
		Control part	140 m³/h	
Sound pressure level			69 dB(A)	
Rated short-circuit current I_{scc}		Minimum (3)	3.5 kA	
		Maximum (4)	50 kA (100 ms)	
Mains and motor connection (5)				
Typical cable			1x (3x 150 mm²) or 2x (3x 70 mm²)	1x (3x 120 mm²) or 2x (3x 50 mm²)
Max. Cable cross section (6)		Cable	2x (3x 120 mm²) or 1x (3x 240 mm²)	
		Cable entry (7)	max. 180 mm	
Terminals per phase			2x M12	

(1) For Heavy Duty HD operation parameter [Dual Rating] *drt* has to be set to [High rating] *HiGH* (see programming manual EAV64318).

(2) For details see table under chapter Mains Current Harmonics / Mains Voltage Distortion, page 83.

(3) Minimum mains short-circuit current


(4) Permitted short-circuit current when the specified pre-fuse or circuit breaker is installed

(5) You will find further information at chapter Mains Connection, page 80 and at chapter Motor Connection, page 84.


(6) Greater connection cross sections are possible with the separate connection enclosure.

(7) Maximum possible width of cables connected next to each other in the enclosure

Dimensions IP23 for Size 1p

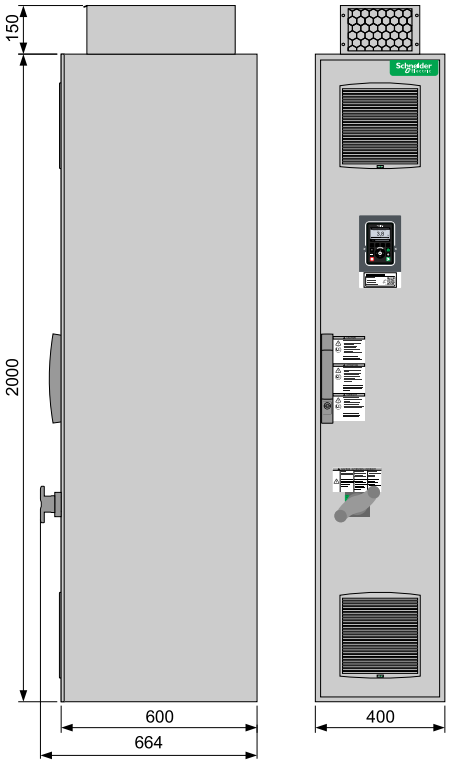

Interior View IP23 for Size 1p

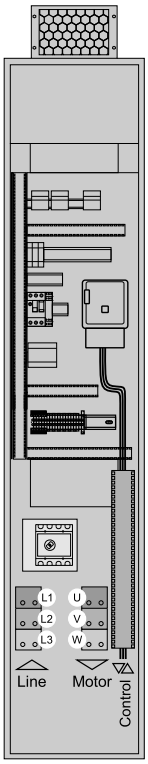

NOTE: Following customizations affect the total dimensions:

- Increased protection degree IP54
- Enclosure plinth for basic device
- Connection enclosure cable from top/ bottom
- 12-pulse supply

Technical Data ATV660C16●4X1

Type			ATV660C16●4X1	
Nominal data			**Normal Duty ND**	**Heavy Duty HD (1)**
Typical motor rating P_n		U_n = 400 V	160 kW	132 kW
		U_n = 440 V	160 kW	132 kW
		U_n = 480 V	180 kW	160 kW
Rated output current I_n			302 A	250 A
Maximum current I_{MAX}	for 60 s per 10 minutes		332 A	375 A
Input				
Rated input current I_{in}		U_n = 400 V	277 A	232 A
(at I_{scc} = 35 kA)		U_n = 440 V	254 A	213 A
		U_n = 480 V	258 A	233 A
Rated apparent power S_n		U_n = 400 V	192 kVA	161 kVA
		U_n = 440 V	193 kVA	162 kVA
		U_n = 480 V	194 kVA	215 kVA
Current harmonic THDi (2)			< 48 %	
Protection for upstream cables				
Pre-fuse	U_n = 400, 440, 480 V		315 A gG	300 A gG
Circuit breaker I_{therm} / I_{magn}			315 A / 3 kA	280 A / 3 kA
Internal short-circuit protection				
Fuse	U_n = 400, 440, 480 V		400 A aR	
Characteristics				
Efficiency at I_n			0.98	
Heat losses at I_n		Total losses	4030 W	3120 W
		Control part only	560 W	420 W
Weight		Net	300 kg	
		Gross	340 kg	
Ambient conditions				
Air flow		Power part	580 m³/h	
		Control part	140 m³/h	
Sound pressure level			69 dB(A)	
Rated short-circuit current I_{scc}		Minimum (3)	4 kA	
		Maximum (4)	50 kA (100 ms)	
Mains and motor connection (5)				
Typical cable			1x (3x 185 mm²) or 2x (3x 95 mm²)	1x (3x 150 mm²) or 2x (3x 70 mm²)
Max. Cable cross section (6)		Cable	2x (3x 120 mm²) or 1x (3x 240 mm²)	
		Cable entry (7)	max. 180 mm	
Terminals per phase			2x M12	

(1) For Heavy Duty HD operation parameter [Dual Rating] *drt* has to be set to [High rating] *HiGH* (see programming manual EAV64318).

(2) For details see table under chapter Mains Current Harmonics / Mains Voltage Distortion, page 83.

(3) Minimum mains short-circuit current


(4) Permitted short-circuit current when the specified pre-fuse or circuit breaker is installed

(5) You will find further information at chapter Mains Connection, page 80 and at chapter Motor Connection, page 84.


(6) Greater connection cross sections are possible with the separate connection enclosure.

(7) Maximum possible width of cables connected next to each other in the enclosure

Dimensions IP23 for Size 1p

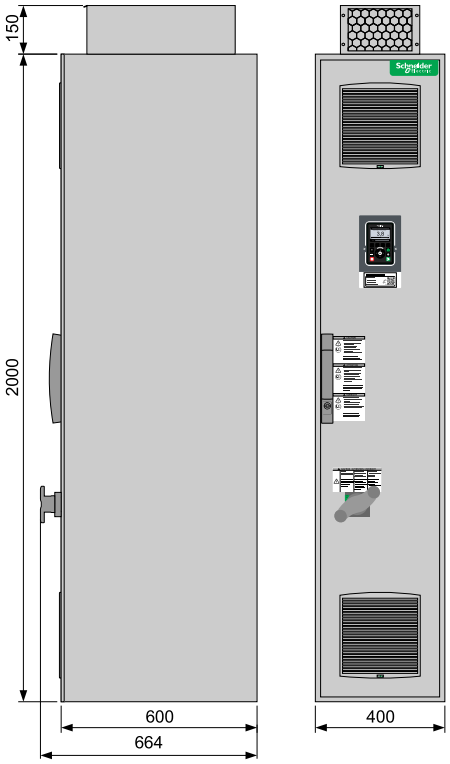

Interior View IP23 for Size 1p

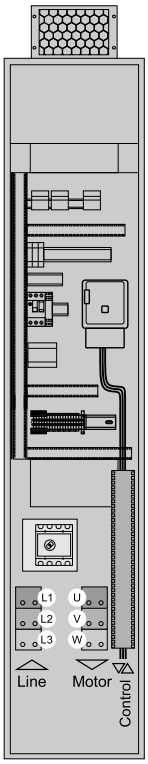

NOTE: Following customizations affect the total dimensions:

- Increased protection degree IP54
- Enclosure plinth for basic device
- Connection enclosure cable from top/ bottom
- 12-pulse supply

Technical Data ATV660C20●4X1

Type			ATV660C20●4X1	
Nominal data			**Normal Duty ND**	**Heavy Duty HD (1)**
Typical motor rating P_n		U_n = 400 V	200 kW	160 kW
		U_n = 440 V	200 kW	160 kW
		U_n = 480 V	220 kW	180 kW
Rated output current I_n			370 A	302 A
Maximum current I_{MAX}	for 60 s per 10 minutes		407 A	453 A
Input				
Rated input current I_{in}		U_n = 400 V	349 A	286 A
(at I_{scc} = 35 kA)		U_n = 440 V	321 A	264 A
		U_n = 480 V	320 A	267 A
Rated apparent power S_n		U_n = 400 V	242 kVA	198 kVA
		U_n = 440 V	245 kVA	201 kVA
		U_n = 480 V	266 kVA	222 kVA
Current harmonic THDi (2)			< 48 %	
Protection for upstream cables				
Pre-fuse	U_n = 400, 440, 480 V		400 A gG	355 A gG
Circuit breaker I_{therm} / I_{magn}			400 A / 4 kA	330 A / 4 kA
Internal short-circuit protection				
Fuse	U_n = 400, 440, 480 V		2x 250 A aR	
Characteristics				
Efficiency at I_n			0.98	
Heat losses at I_n		Total losses	4380 W	3380 W
		Control part only	580 W	430 W
Weight		Net	400 kg	
		Gross	445 kg	
Ambient conditions				
Air flow		Power part	1160 m³/h	
		Control part	140 m³/h	
Sound pressure level			70 dB(A)	
Rated short-circuit current I_{scc}		Minimum (3)	5.5 kA	
		Maximum (4)	50 kA (100 ms)	
Mains and motor connection (5)				
Typical cable			2x (3x 120 mm²) or 3x (3x 70 mm²)	1x (3x 185 mm²) or 2x (3x 95 mm²)
Max. Cable cross section (6)		Cable	4x (3x 95 mm²) or 3x (3x 120 mm²) or 2x (3x 240 mm²)	
		Cable entry (7)	max. 360 mm	
Terminals per phase			4x M12	

(1) For Heavy Duty HD operation parameter [Dual Rating] *drt* has to be set to [High rating] *HiGH* (see programming manual EAV64318).

(2) For details see table under chapter Mains Current Harmonics / Mains Voltage Distortion, page 83.

(3) Minimum mains short-circuit current


(4) Permitted short-circuit current when the specified pre-fuse or circuit breaker is installed

(5) You will find further information at chapter Mains Connection, page 80 and at chapter Motor Connection, page 84.


(6) Greater connection cross sections are possible with the separate connection enclosure.

(7) Maximum possible width of cables connected next to each other in the enclosure

Dimensions IP23 for Size 2p

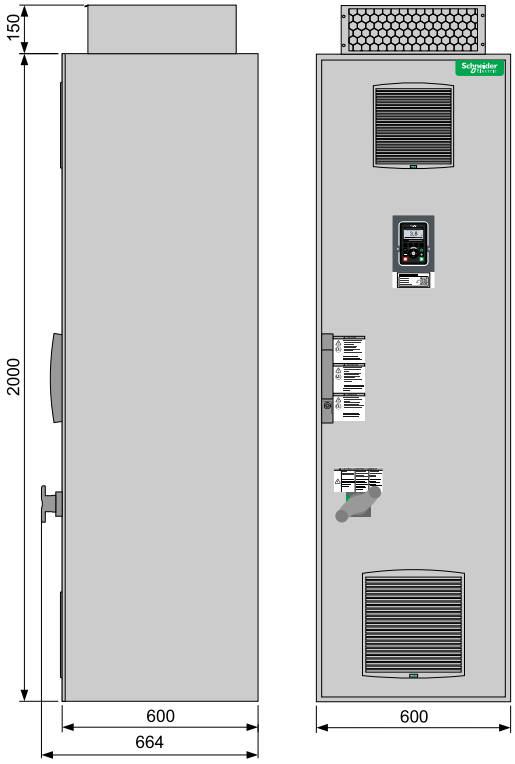

Interior View IP23 for Size 2p

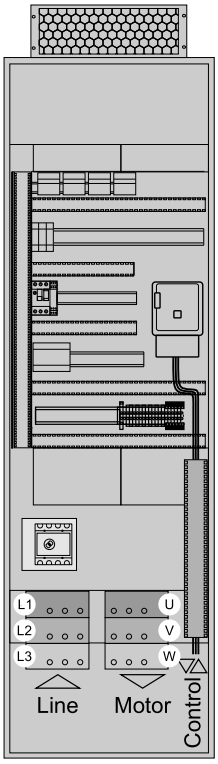

NOTE: Following customizations affect the total dimensions:

- Increased protection degree IP54
- Enclosure plinth for basic device
- Connection enclosure cable from top/ bottom
- 12-pulse supply

Technical Data ATV660C25●4X1

Type			ATV660C25●4X1	
Nominal data			**Normal Duty ND**	**Heavy Duty HD (1)**
Typical motor rating P_n		U_n = 400 V	250 kW	200 kW
		U_n = 440 V	250 kW	200 kW
		U_n = 480 V	280 kW	220 kW
Rated output current I_n			477 A	370 A
Maximum current I_{MAX}		for 60 s per 10 minutes	525 A	555 A
Input				
Rated input current I_{in}		U_n = 400 V	432 A	353 A
(at I_{scc} = 50 kA)		U_n = 440 V	396 A	325 A
		U_n = 480 V	400 A	323 A
Rated apparent power S_n		U_n = 400 V	299 kVA	244 kVA
		U_n = 440 V	302 kVA	248 kVA
		U_n = 480 V	333 kVA	268 kVA
Current harmonic THDi (2)			< 47 %	
Protection for upstream cables				
Pre-fuse		U_n = 400, 440, 480 V	500 A gG	400 A gG
Circuit breaker I_{therm} / I_{magn}			500 A / 5 kA	400 A / 5 kA
Internal short-circuit protection				
Fuse		U_n = 400, 440, 480 V	2x 315 A aR	
Characteristics				
Efficiency at I_n			0.98	
Heat losses at I_n		Total losses	5750 W	4340 W
		Control part only	730 W	520 W
Weight		Net	400 kg	
		Gross	445 kg	
Ambient conditions				
Air flow		Power part	1160 m³/h	
		Control part	140 m³/h	
Sound pressure level			70 dB(A)	
Rated short-circuit current I_{scc}		Minimum (3)	7 kA	
		Maximum (4)	50 kA (100 ms)	
Mains and motor connection (5)				
Typical cable			2x (3x 150 mm²) or 3x (3x 95 mm²)	2x (3x 120 mm²) or 3x (3x 70 mm²)
Max. Cable cross section (6)		Cable	4x (3x 95 mm²) or 3x (3x 120 mm²) or 2x (3x 240 mm²)	
		Cable entry (7)	max. 360 mm	
Terminals per phase			4x M12	

(1) For Heavy Duty HD operation parameter [Dual Rating] *drt* has to be set to [High rating] *HiGH* (see programming manual EAV64318).

(2) For details see table under chapter Mains Current Harmonics / Mains Voltage Distortion, page 83.

(3) Minimum mains short-circuit current


(4) Permitted short-circuit current when the specified pre-fuse or circuit breaker is installed

(5) You will find further information at chapter Mains Connection, page 80 and at chapter Motor Connection, page 84.


(6) Greater connection cross sections are possible with the separate connection enclosure.

(7) Maximum possible width of cables connected next to each other in the enclosure

Dimensions IP23 for Size 2p

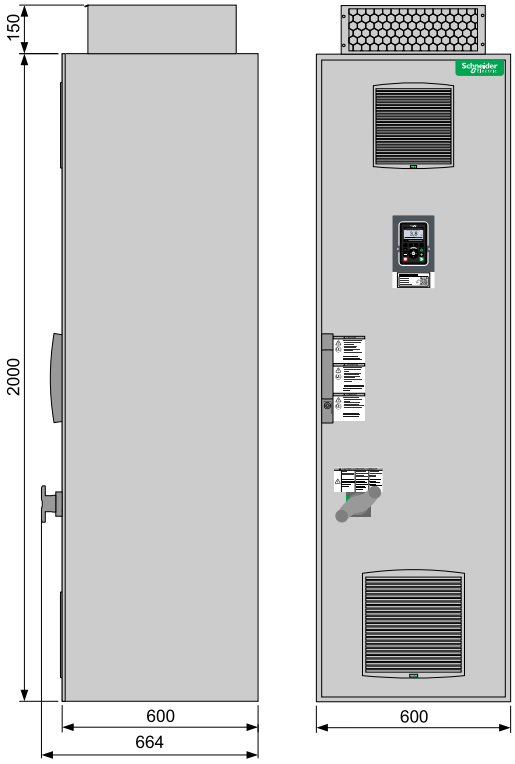

Interior View IP23 for Size 2p

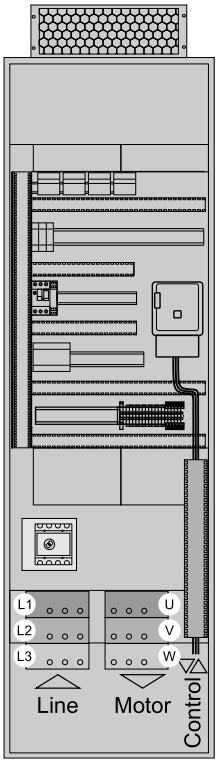

NOTE: Following customizations affect the total dimensions:

- Increased protection degree IP54
- Enclosure plinth for basic device
- Connection enclosure cable from top/ bottom
- 12-pulse supply

Technical Data ATV660C31●4X1

Type			ATV660C31●4X1	
Nominal data			**Normal Duty ND**	**Heavy Duty HD (1)**
Typical motor rating P_n		U_n = 400 V	315 kW	250 kW
		U_n = 440 V	315 kW	250 kW
		U_n = 480 V	355 kW	280 kW
Rated output current I_n			590 A	477 A
Maximum current I_{MAX}		for 60 s per 10 minutes	649 A	716 A
Input				
Rated input current I_{in}		U_n = 400 V	538 A	432 A
(at I_{scc} = 50 kA)		U_n = 440 V	493 A	396 A
		U_n = 480 V	503 A	400 A
Rated apparent power S_n		U_n = 400 V	373 kVA	299 kVA
		U_n = 440 V	375 kVA	302 kVA
		U_n = 480 V	418 kVA	333 kVA
Current harmonic THDi (2)			< 42 %	
Protection for upstream cables				
Pre-fuse		U_n = 400, 440, 480 V	630 A gG	500 A gG
Circuit breaker I_{therm} / I_{magn}			630 A / 6 kA	500 A / 6 kA
Internal short-circuit protection				
Fuse		U_n = 400, 440, 480 V	2x 400 A aR	
Characteristics				
Efficiency at I_n			0.98	
Heat losses at I_n		Total losses	7810 W	5700 W
		Control part only	990 W	680 W
Weight		Net	400 kg	
		Gross	445 kg	
Ambient conditions				
Air flow		Power part	1160 m³/h	
		Control part	140 m³/h	
Sound pressure level			70 dB(A)	
Rated short-circuit current I_{scc}		Minimum (3)	8 kA	
		Maximum (4)	50 kA (100 ms)	
Mains and motor connection (5)				
Typical cable			2x (3x 185 mm²) or 3x (3x 120 mm²)	2x (3x 150 mm²) or 3x (3x 120 mm²)
Max. Cable cross section (6)		Cable	4x (3x 95 mm²) or 3x (120 mm²) or 2x (3x 240 mm²)	
		Cable entry (7)	max. 360 mm	
Terminals per phase			4x M12	

(1) For Heavy Duty HD operation parameter [Dual Rating] *drt* has to be set to [High rating] *HiGH* (see programming manual EAV64318).

(2) For details see table under chapter Mains Current Harmonics / Mains Voltage Distortion, page 83.

(3) Minimum mains short-circuit current


(4) Permitted short-circuit current when the specified pre-fuse or circuit breaker is installed

(5) You will find further information at chapter Mains Connection, page 80 and at chapter Motor Connection, page 84.


(6) Greater connection cross sections are possible with the separate connection enclosure.

(7) Maximum possible width of cables connected next to each other in the enclosure

Dimensions IP23 for Size 2p

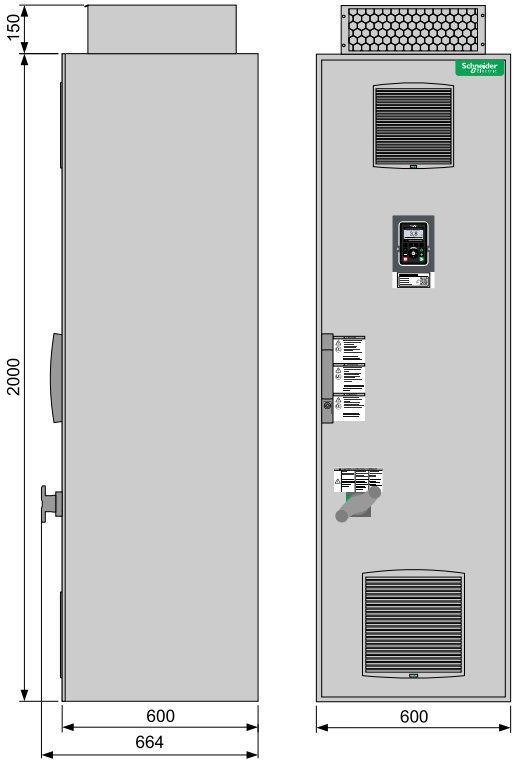

Interior View IP23 for Size 2p

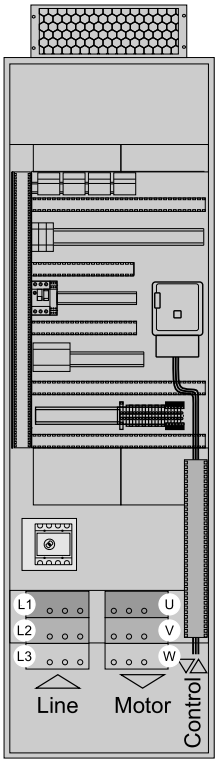

NOTE: Following customizations affect the total dimensions:

- Increased protection degree IP54
- Enclosure plinth for basic device
- Connection enclosure cable from top/ bottom
- 12-pulse supply

Technical Data ATV660C35●4X1

Type		ATV660C35●4X1	
Nominal data		**Normal Duty ND**	**Heavy Duty HD (1)**
Typical motor rating P_n	U_n = 400 V	355 kW	280 kW
	U_n = 440 V	355 kW	280 kW
	U_n = 480 V	400 kW	315 kW
Rated output current I_n		660 A	520 A
Maximum current I_{MAX}	for 60 s per 10 minutes	726 A	780 A
Input			
Rated input current I_{in}	U_n = 400 V	611 A	489 A
(at I_{scc} = 50 kA)	U_n = 440 V	559 A	450 A
	U_n = 480 V	572 A	456 A
Rated apparent power S_n	U_n = 400 V	423 kVA	339 kVA
	U_n = 440 V	426 kVA	343 kVA
	U_n = 480 V	475 kVA	379 kVA
Current harmonic THDi (2)		< 46 %	
Protection for upstream cables			
Pre-fuse	U_n = 400, 440, 480 V	800 A gG	630 A gG
Circuit breaker I_{therm} / I_{magn}		700 A / 7 kA	580 A / 7 kA
Internal short-circuit protection			
Fuse	U_n = 400, 440, 480 V	3x 315 A aR	
Characteristics			
Efficiency at I_n		0.98	
Heat losses at I_n	Total losses	8530 W	6410 W
	Control part only	930 W	650 W
Weight	Net	650 kg	
	Gross	700 kg	
Ambient conditions			
Air flow	Power part	1740 m³/h	
	Control part	280 m³/h	
Sound pressure level		71 dB(A)	
Rated short-circuit current I_{scc}	Minimum (3)	11 kA	
	Maximum (4)	50 kA (100 ms)	
Mains and motor connection (5)			
Typical cable		3x (3x 150 mm²) or 4x (3x 95 mm²)	2x (3x 185 mm²) or 3x (3x 120 mm²)
Max. Cable cross section (6)	Cable	5x (3x 120 mm²) or 4x (3x 185 mm²) or 3x (3x 240 mm²)	
	Cable entry (7)	max. 560 mm	
Terminals per phase		5x M12	

(1) For Heavy Duty HD operation parameter [Dual Rating] *drt* has to be set to [High rating] *HiGH* (see programming manual EAV64318).

(2) For details see table under chapter Mains Current Harmonics / Mains Voltage Distortion, page 83.

(3) Minimum mains short-circuit current


(4) Permitted short-circuit current when the specified pre-fuse or circuit breaker is installed

(5) You will find further information at chapter Mains Connection, page 80 and at chapter Motor Connection, page 84.


(6) Greater connection cross sections are possible with the separate connection enclosure.

(7) Maximum possible width of cables connected next to each other in the enclosure

Dimensions IP23 for Size 3p

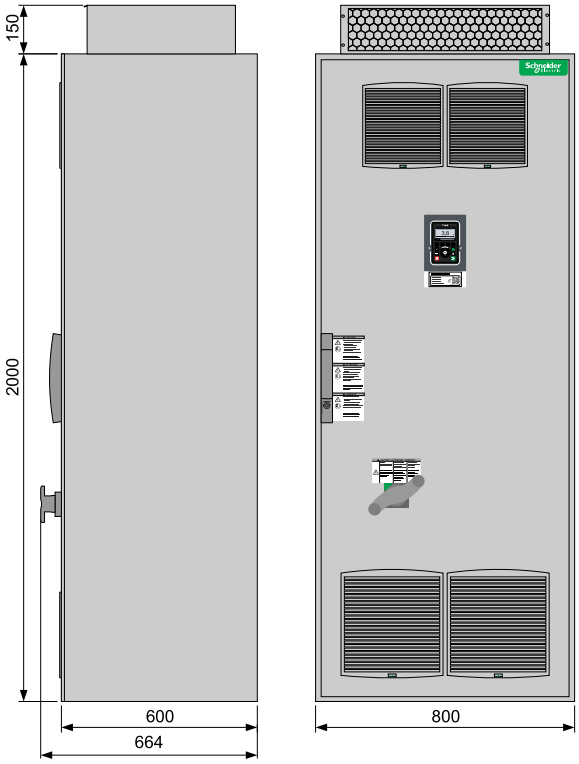

Interior View IP23 for Size 3p

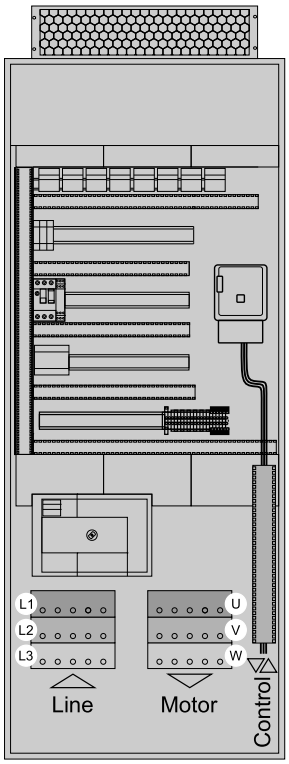

NOTE: Following customizations affect the total dimensions:

- Increased protection degree IP54
- Enclosure plinth for basic device
- Connection enclosure cable from top/ bottom
- 12-pulse supply

Technical Data ATV660C40●4X1

Type			ATV660C40●4X1	
Nominal data			**Normal Duty ND**	**Heavy Duty HD (1)**
Typical motor rating P_n		U_n = 400 V	400 kW	315 kW
		U_n = 440 V	400 kW	315 kW
		U_n = 480 V	450 kW	355 kW
Rated output current I_n			730 A	590 A
Maximum current I_{MAX}	for 60 s per 10 minutes		803 A	885 A
Input				
Rated input current I_{in}		U_n = 400 V	681 A	545 A
(at I_{scc} = 50 kA)		U_n = 440 V	623 A	501 A
		U_n = 480 V	637 A	510 A
Rated apparent power S_n		U_n = 400 V	472 kVA	378 kVA
		U_n = 440 V	475 kVA	382 kVA
		U_n = 480 V	530 kVA	424 kVA
Current harmonic THDi (2)			< 43 %	
Protection for upstream cables				
Pre-fuse	U_n = 400, 440, 480 V		800 A gG	630 A gG
Circuit breaker I_{therm} / I_{magn}			780 A / 8 kA	630 A / 8 kA
Internal short-circuit protection				
Fuse	U_n = 400, 440, 480 V		3x 315 A aR	
Characteristics				
Efficiency at I_n			0.98	
Heat losses at I_n		Total losses	9900 W	7370 W
		Control part only	1120 W	770 W
Weight		Net	650 kg	
		Gross	700 kg	
Ambient conditions				
Air flow		Power part	1740 m³/h	
		Control part	280 m³/h	
Sound pressure level			71 dB(A)	
Rated short-circuit current I_{scc}		Minimum (3)	11 kA	
		Maximum (4)	50 kA (100 ms)	
Mains and motor connection (5)				
Typical cable			3x (3x 185 mm²) or 4x (3x 120 mm²)	3x (3x 120 mm²) or 4x (3x 95 mm²)
Max. Cable cross section (6)		Cable	5x (3x 120 mm²) or 4x (3x 185 mm²) or 3x (3x 240 mm²)	
		Cable entry (7)	max. 560 mm	
Terminals per phase			5x M12	

(1) For Heavy Duty HD operation parameter [Dual Rating] *drt* has to be set to [High rating] *HiGH* (see programming manual EAV64318).

(2) For details see table under chapter Mains Current Harmonics / Mains Voltage Distortion, page 83.

(3) Minimum mains short-circuit current


(4) Permitted short-circuit current when the specified pre-fuse or circuit breaker is installed

(5) You will find further information at chapter Mains Connection, page 80 and at chapter Motor Connection, page 84.


(6) Greater connection cross sections are possible with the separate connection enclosure.

(7) Maximum possible width of cables connected next to each other in the enclosure

Dimensions IP23 for Size 3p

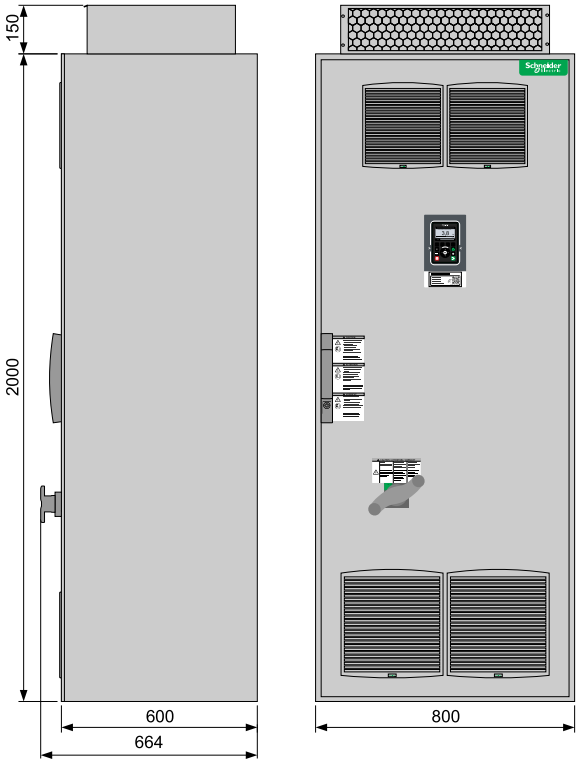

Interior View IP23 for Size 3p

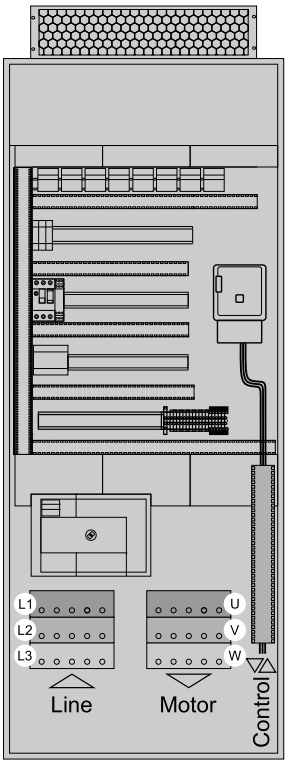

NOTE: Following customizations affect the total dimensions:

- Increased protection degree IP54
- Enclosure plinth for basic device
- Connection enclosure cable from top/ bottom
- 12-pulse supply

Technical Data ATV660C45●4X1

Type		ATV660C45●4X1	
Nominal data		**Normal Duty ND**	**Heavy Duty HD (1)**
Typical motor rating P_n	U_n = 400 V	450 kW	355 kW
	U_n = 440 V	450 kW	355 kW
	U_n = 480 V	500 kW	400 kW
Rated output current I_n		830 A	660 A
Maximum current I_{MAX}	for 60 s per 10 minutes	913 A	990 A
Input			
Rated input current I_{in}	U_n = 400 V	764 A	611 A
(at I_{scc} = 50 kA)	U_n = 440 V	697 A	559 A
	U_n = 480 V	706 A	572 A
Rated apparent power S_n	U_n = 400 V	529 kVA	423 kVA
	U_n = 440 V	531 kVA	426 kVA
	U_n = 480 V	587 kVA	475 kVA
Current harmonic THDi (2)		< 41 %	
Protection for upstream cables			
Pre-fuse	U_n = 400, 440, 480 V	1000 A gG	800 A gG
Circuit breaker I_{therm} / I_{magn}		900 A / 9 kA	720 A / 9 kA
Internal short-circuit protection			
Fuse	U_n = 400, 440, 480 V	3x 400 A aR	
Characteristics			
Efficiency at I_n		0.98	
Heat losses at I_n	Total losses	11520 W	8460 W
	Control part only	1270 W	860 W
Weight	Net	650 kg	
	Gross	700 kg	
Ambient conditions			
Air flow	Power part	1740 m³/h	
	Control part	280 m³/h	
Sound pressure level		71 dB(A)	
Rated short-circuit current I_{scc}	Minimum (3)	13 kA	
	Maximum (4)	50 kA (100 ms)	
Mains and motor connection (5)			
Typical cable		4x (3x 150 mm²) or 5x (3x 120 mm²)	3x (3x 150 mm²) or 4x (3x 95 mm²)
Max. Cable cross section (6)	Cable	5x (3x 120 mm²) or 4x (3x 185 mm²) or 3x (3x 240 mm²)	
	Cable entry (7)	max. 560 mm	
Terminals per phase		5x M12	

(1) For Heavy Duty HD operation parameter [Dual Rating] *drt* has to be set to [High rating] *HiGH* (see programming manual EAV64318).

(2) For details see table under chapter Mains Current Harmonics / Mains Voltage Distortion, page 83.

(3) Minimum mains short-circuit current


(4) Permitted short-circuit current when the specified pre-fuse or circuit breaker is installed

(5) You will find further information at chapter Mains Connection, page 80 and at chapter Motor Connection, page 84.


(6) Greater connection cross sections are possible with the separate connection enclosure.

(7) Maximum possible width of cables connected next to each other in the enclosure

Dimensions IP23 for Size 3p

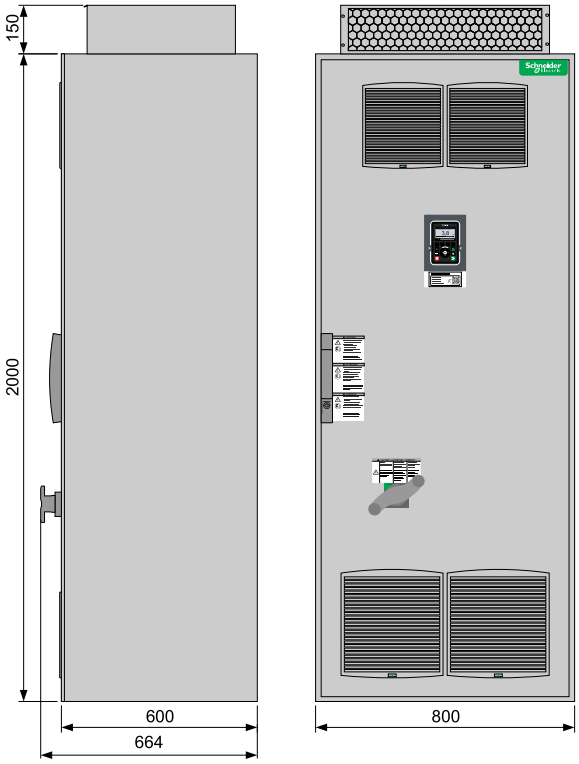

Interior View IP23 for Size 3p

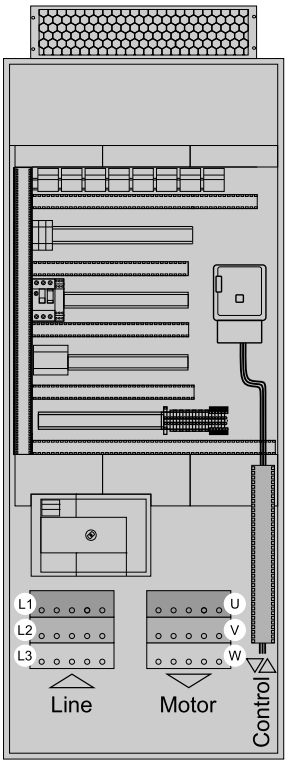

NOTE: Following customizations affect the total dimensions:

- Increased protection degree IP54
- Enclosure plinth for basic device
- Connection enclosure cable from top/ bottom
- 12-pulse supply

Technical Data ATV660C50●4X1

Type		ATV660C50●4X1	
Nominal data		**Normal Duty ND**	**Heavy Duty HD (1)**
Typical motor rating P_n	U_n = 400 V	500 kW	400 kW
	U_n = 440 V	500 kW	400 kW
	U_n = 480 V	560 kW	450 kW
Rated output current I_n		900 A	730 A
Maximum current I_{MAX}	for 60 s per 10 minutes	990 A	1095 A
Input			
Rated input current I_{in}	U_n = 400 V	846 A	681 A
(at I_{scc} = 50 kA)	U_n = 440 V	771 A	623 A
	U_n = 480 V	789 A	637 A
Rated apparent power S_n	U_n = 400 V	586 kVA	472 kVA
	U_n = 440 V	588 kVA	475 kVA
	U_n = 480 V	656 kVA	530 kVA
Current harmonic THDi (2)		< 39 %	
Protection for upstream cables			
Pre-fuse	U_n = 400, 440, 480 V	1000 A gG	800 A gG
Circuit breaker I_{therm} / I_{magn}		1000 A / 10 kA	800 A / 10 kA
Internal short-circuit protection			
Fuse	U_n = 400, 440, 480 V	3x 400 A aR	
Characteristics			
Efficiency at I_n		0.98	
Heat losses at I_n	Total losses	13330 W	9800 W
	Control part only	1530 W	1020 W
Weight	Net	650 kg	
	Gross	700 kg	
Ambient conditions			
Air flow	Power part	1740 m³/h	
	Control part	280 m³/h	
Sound pressure level		71 dB(A)	
Rated short-circuit current I_{scc}	Minimum (3)	13 kA	
	Maximum (4)	50 kA (100 ms)	
Mains and motor connection (5)			
Typical cable		4x (3x 185 mm²) or 5x (3x 120 mm²)	3x (3x 185 mm²) or 4x (3x 120 mm²)
Max. Cable cross section (6)	Cable	5x (3x 120 mm²) or 4x (3x 185 mm²) or 3x (3x 240 mm²)	
	Cable entry (7)	max. 560 mm	
Terminals per phase		5x M12	

(1) For Heavy Duty HD operation parameter [Dual Rating] *drt* has to be set to [High rating] *HiGH* (see programming manual EAV64318).

(2) For details see table under chapter Mains Current Harmonics / Mains Voltage Distortion, page 83.

(3) Minimum mains short-circuit current


(4) Permitted short-circuit current when the specified pre-fuse or circuit breaker is installed

(5) You will find further information at chapter Mains Connection, page 80 and at chapter Motor Connection, page 84.


(6) Greater connection cross sections are possible with the separate connection enclosure.

(7) Maximum possible width of cables connected next to each other in the enclosure

Dimensions IP23 for Size 3p

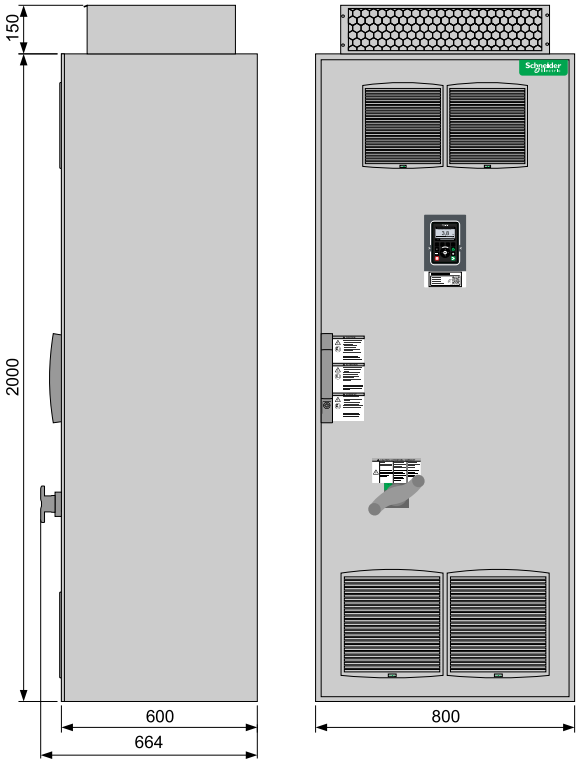

Interior View IP23 for Size 3p

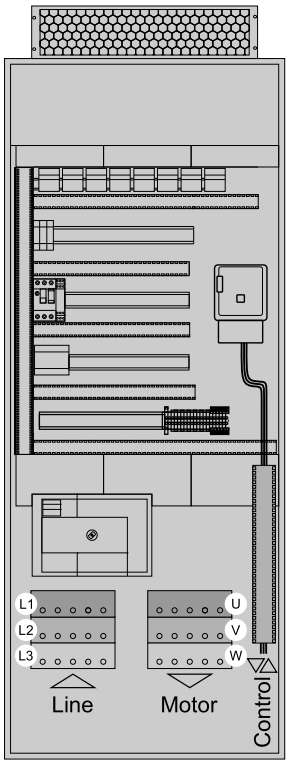

NOTE: Following customizations affect the total dimensions:

- Increased protection degree IP54
- Enclosure plinth for basic device
- Connection enclosure cable from top/ bottom
- 12-pulse supply

Technical Data ATV660C56●4X1

Type			ATV660C56●4X1	
Nominal data			**Normal Duty ND**	**Heavy Duty HD (1)**
Typical motor rating P_n		U_n = 400 V	560 kW	450 kW
		U_n = 440 V	560 kW	450 kW
		U_n = 480 V	630 kW	500 kW
Rated output current I_n			1020 A	830 A
Maximum current I_{MAX}	for 60 s per 10 minutes		1122 A	1245 A
Input				
Rated input current I_{in}		U_n = 400 V	948 A	767 A
(at I_{scc} = 50 kA)		U_n = 440 V	865 A	703 A
		U_n = 480 V	888 A	711 A
Rated apparent power S_n		U_n = 400 V	656 kVA	531 kVA
		U_n = 440 V	660 kVA	536 kVA
		U_n = 480 V	739 kVA	591 kVA
Current harmonic THDi (2)			< 40 %	
Protection for upstream cables				
Pre-fuse	U_n = 400, 440, 480 V		1250 A gG	1000 A gG
Circuit breaker I_{therm} / I_{magn}			1100 A / 11 kA	900 A / 11 kA
Internal short-circuit protection				
Fuse	U_n = 400, 440, 480 V		4x 400 A aR	
Characteristics				
Efficiency at I_n			0.98	
Heat losses at I_n		Total losses	13950 W	10500 W
		Control part only	1500 W	1050 W
Weight		Net	850 kg	
		Gross	910 kg	
Ambient conditions				
Air flow		Power part	2320 m³/h	
		Control part	280 m³/h	
Sound pressure level			73 dB(A)	
Rated short-circuit current I_{scc}		Minimum (3)	15 kA	
		Maximum (4)	50 kA (100 ms)	
Mains and motor connection (5)				
Typical cable			4x (3x 185 mm²) or 5x (3x 150 mm²)	4x (3x 150 mm²) or 5x (3x 120 mm²)
Max. Cable cross section (6)		Cable	6x (3x 185 mm²) or 5x (3x 240 mm²)	
		Cable entry mains (7)	max. 360 mm	
		Cable entry motor (7)	max. 360 mm	
Terminals per phase			6x M12	

(1) For Heavy Duty HD operation parameter [Dual Rating] *drt* has to be set to [High rating] *HiGH* (see programming manual EAV64318).

(2) For details see table under chapter Mains Current Harmonics / Mains Voltage Distortion, page 83.

(3) Minimum mains short-circuit current


(4) Permitted short-circuit current when the specified pre-fuse or circuit breaker is installed

(5) You will find further information at chapter Mains Connection, page 80 and at chapter Motor Connection, page 84.


(6) Greater connection cross sections are possible with the separate connection enclosure.

(7) Maximum possible width of cables connected next to each other in the enclosure

Dimensions IP23 for Size 4p

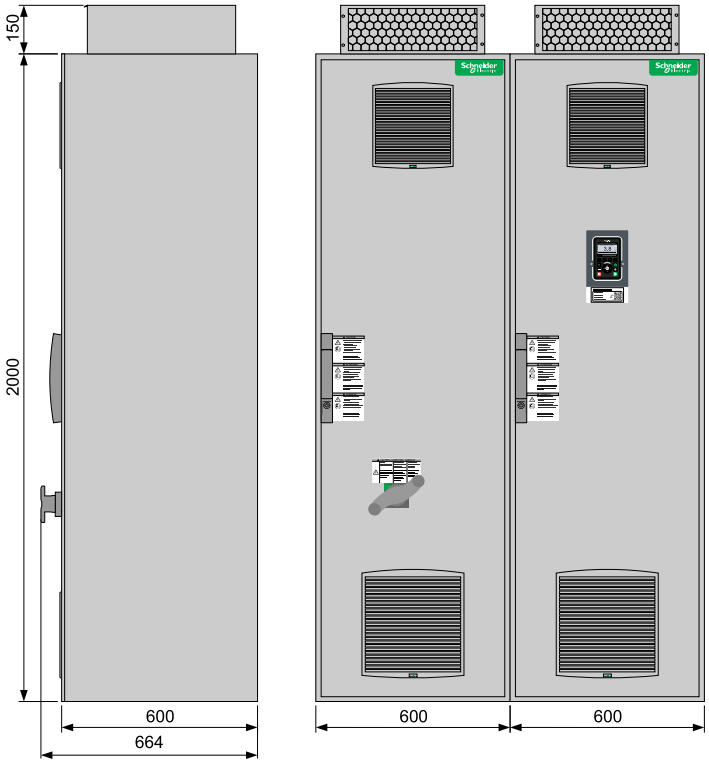

Interior View IP23 for Size 4p

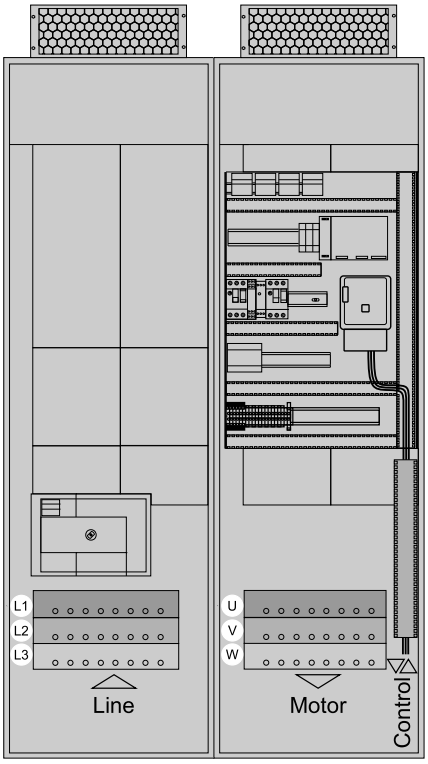

NOTE: Following customizations affect the total dimensions:

- Increased protection degree IP54
- Enclosure plinth for basic device
- Connection enclosure cable from top/ bottom
- 12-pulse supply

Technical Data ATV660C63●4X1

Type			ATV660C63●4X1	
Nominal data			**Normal Duty ND**	**Heavy Duty HD (1)**
Typical motor rating P_n		U_n = 400 V	630 kW	500 kW
		U_n = 440 V	630 kW	500 kW
		U_n = 480 V	710 kW	560 kW
Rated output current I_n			1140 A	900 A
Maximum current I_{MAX}	for 60 s per 10 minutes		1254 A	1350 A
Input				
Rated input current I_{in}		U_n = 400 V	1058 A	849 A
(at I_{scc} = 50 kA)		U_n = 440 V	965 A	776 A
		U_n = 480 V	993 A	794 A
Rated apparent power S_n		U_n = 400 V	733 kVA	588 kVA
		U_n = 440 V	735 kVA	592 kVA
		U_n = 480 V	826 kVA	660 kVA
Current harmonic THDi (2)			< 38 %	
Protection for upstream cables				
Pre-fuse	U_n = 400, 440, 480 V		1250 A gG	1000 A gG
Circuit breaker I_{therm} / I_{magn}			1250 A / 12 kA	1000 A / 12 kA
Internal short-circuit protection				
Fuse	U_n = 400, 440, 480 V		4x 400 A aR	
Characteristics				
Efficiency at I_n			0.98	
Heat losses at I_n		Total losses	16250 W	12000 W
		Control part only	1800 W	1250 W
Weight		Net	850 kg	
		Gross	910 kg	
Ambient conditions				
Air flow		Power part	2320 m³/h	
		Control part	280 m³/h	
Sound pressure level			73 dB(A)	
Rated short-circuit current I_{scc}		Minimum (3)	17 kA	
		Maximum (4)	50 kA (100 ms)	
Mains and motor connection (5)				
Typical cable			4x (3x 240 mm²) or 5x (3x 185 mm²) or 6x (3x 120 mm²)	4x (3x 185 mm²) or 5x (3x 120 mm²)
Max. Cable cross section (6)		Cable	6x (3x 185 mm²) or 5x (3x 240 mm²)	
		Cable entry mains (7)	max. 360 mm	
		Cable entry motor (7)	max. 360 mm	
Terminals per phase			6x M12	

(1) For Heavy Duty HD operation parameter [Dual Rating] *drt* has to be set to [High rating] *HiGH* (see programming manual EAV64318).

(2) For details see table under chapter Mains Current Harmonics / Mains Voltage Distortion, page 83.

(3) Minimum mains short-circuit current


(4) Permitted short-circuit current when the specified pre-fuse or circuit breaker is installed

(5) You will find further information at chapter Mains Connection, page 80 and at chapter Motor Connection, page 84.


(6) Greater connection cross sections are possible with the separate connection enclosure.

(7) Maximum possible width of cables connected next to each other in the enclosure

Dimensions IP23 for Size 4p

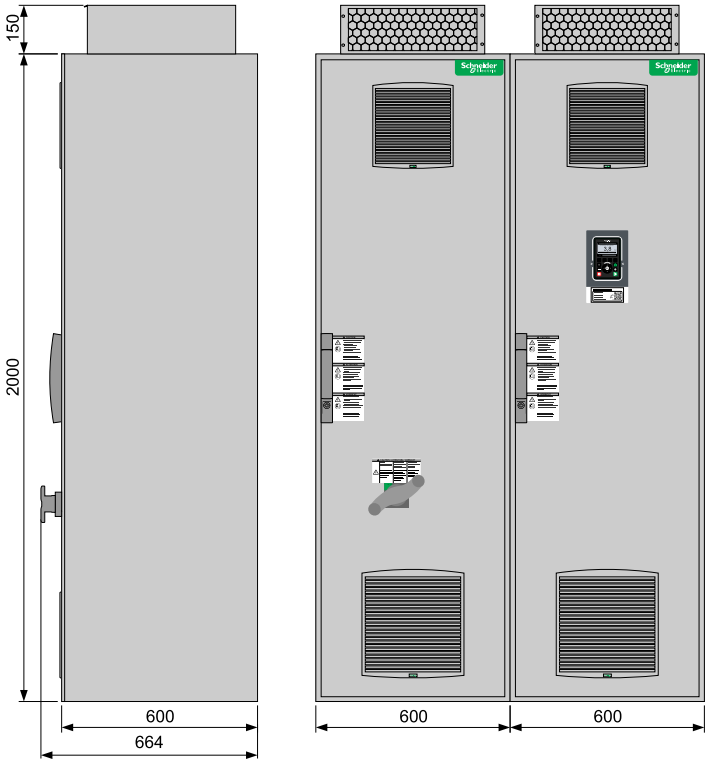

Interior View IP23 for Size 4p

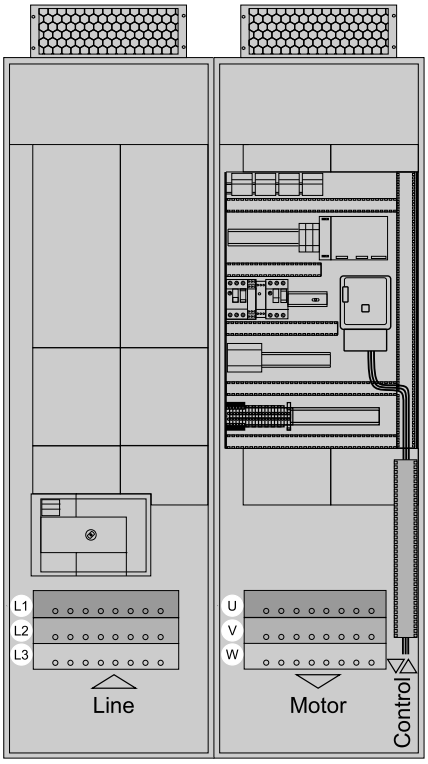

NOTE: Following customizations affect the total dimensions:

- Increased protection degree IP54
- Enclosure plinth for basic device
- Connection enclosure cable from top/ bottom
- 12-pulse supply

Technical Data ATV660C71●4X1

Type		ATV660C71●4X1	
Nominal data		**Normal Duty ND**	**Heavy Duty HD (1)**
Typical motor rating P_n	U_n = 400 V	710 kW	560 kW
	U_n = 440 V	710 kW	560 kW
	U_n = 480 V	800 kW	630 kW
Rated output current I_n		1260 A	1020 A
Maximum current I_{MAX}	for 60 s per 10 minutes	1386 A	1530 A
Input			
Rated input current I_{in}	U_n = 400 V	1192 A	951 A
(at I_{scc} = 50 kA)	U_n = 440 V	1087 A	869 A
	U_n = 480 V	1119 A	893 A
Rated apparent power S_n	U_n = 400 V	826 kVA	659 kVA
	U_n = 440 V	829 kVA	663 kVA
	U_n = 480 V	931 kVA	742 kVA
Current harmonic THDi (2)		< 38 %	
Protection for upstream cables			
Pre-fuse	U_n = 400, 440, 480 V	1600 A gG	1250 A gG
Circuit breaker I_{therm} / I_{magn}		1400 A / 14 kA	1100 A / 14 kA
Internal short-circuit protection			
Fuse	U_n = 400, 440, 480 V	5x 400 A aR	
Characteristics			
Efficiency at I_n		0.98	
Heat losses at I_n	Total losses	17600 W	13000 W
	Control part only	1900 W	1300 W
Weight	Net	1100 kg	
	Gross	1165 kg	
Ambient conditions			
Air flow	Power part	2900 m³/h	
	Control part	420 m³/h	
Sound pressure level		74 dB(A)	
Rated short-circuit current I_{scc}	Minimum (3)	18 kA	
	Maximum (4)	50 kA (100 ms)	
Mains and motor connection (5)			
Typical cable		5x (3x 185 mm²) or 6x (3x 150 mm²)	4x (3x 185 mm²) or 5x (3x 150 mm²)
Max. Cable cross section (6)	Cable	8x (3x 120 mm²) or 6x (3x 240 mm²)	
	Cable entry mains (7)	max. 560 mm	
	Cable entry motor (7)	max. 360 mm	
Terminals per phase		8x M12	

(1) For Heavy Duty HD operation parameter [Dual Rating] *drt* has to be set to [High rating] *HiGH* (see programming manual EAV64318).

(2) For details see table under chapter Mains Current Harmonics / Mains Voltage Distortion, page 83.

(3) Minimum mains short-circuit current


(4) Permitted short-circuit current when the specified pre-fuse or circuit breaker is installed

(5) You will find further information at chapter Mains Connection, page 80 and at chapter Motor Connection, page 84.


(6) Greater connection cross sections are possible with the separate connection enclosure.

(7) Maximum possible width of cables connected next to each other in the enclosure

Dimensions IP23 for Size 5p

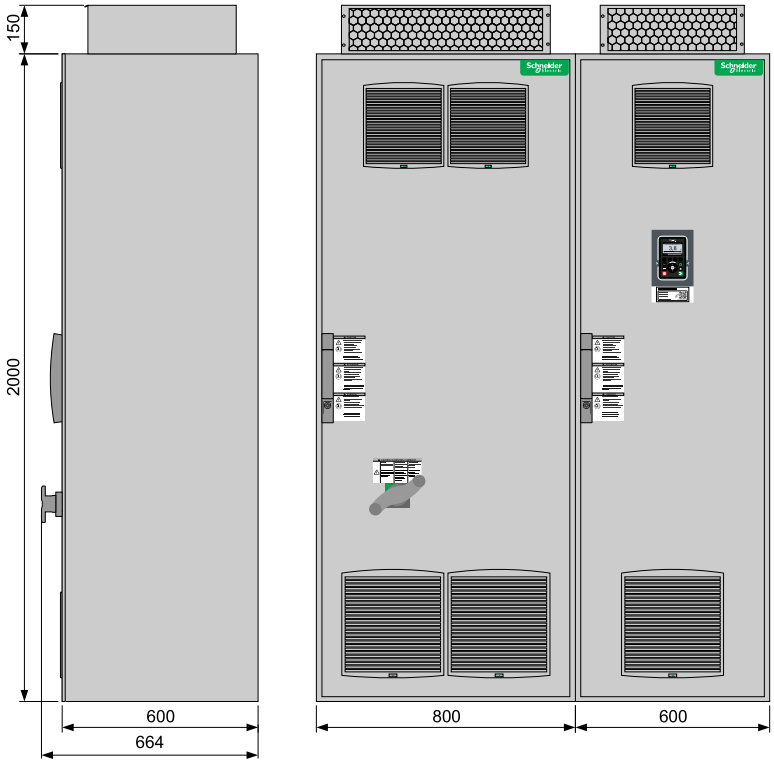

Interior View IP23 for Size 5p

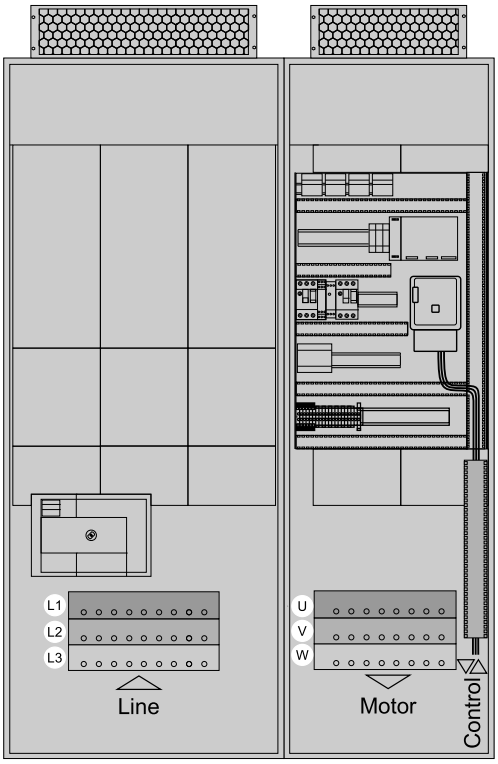

NOTE: Following customizations affect the total dimensions:

- Increased protection degree IP54
- Enclosure plinth for basic device
- Connection enclosure cable from top/ bottom
- 12-pulse supply

Technical Data ATV660C80●4X1

Type			ATV660C80●4X1	
Nominal data			**Normal Duty ND**	**Heavy Duty HD (1)**
Typical motor rating P_n		U_n = 400 V	800 kW	630 kW
		U_n = 440 V	800 kW	630 kW
		U_n = 480 V	900 kW	710 kW
Rated output current I_n			1420 A	1140 A
Maximum current I_{MAX}	for 60 s per 10 minutes		1562 A	1710 A
Input				
Rated input current I_{in}		U_n = 400 V	1335 A	1061 A
(at I_{scc} = 50 kA)		U_n = 440 V	1216 A	968 A
		U_n = 480 V	1257 A	997 A
Rated apparent power S_n		U_n = 400 V	925 kVA	735 kVA
		U_n = 440 V	927 kVA	738 kVA
		U_n = 480 V	1045 kVA	828 kVA
Current harmonic THDi (2)			< 36 %	
Protection for upstream cables				
Pre-fuse	U_n = 400, 440, 480 V		1600 A gG	1250 A gG
Circuit breaker I_{therm} / I_{magn}			1600 A / 16 kA	1250 A / 16 kA
Internal short-circuit protection				
Fuse	U_n = 400, 440, 480 V		5x 400 A aR	
Characteristics				
Efficiency at I_n			0.98	
Heat losses at I_n		Total losses	20600 W	15080 W
		Control part only	2300 W	1580 W
Weight		Net	1100 kg	
		Gross	1165 kg	
Ambient conditions				
Air flow		Power part	2900 m³/h	
		Control part	420 m³/h	
Sound pressure level			74 dB(A)	
Rated short-circuit current I_{scc}		Minimum (3)	20 kA	
		Maximum (4)	50 kA (100 ms)	
Mains and motor connection (5)				
Typical cable			5x (3x 240 mm²) or 6x (3x 185 mm²)	4x (3x 240 mm²) or 5x (3x 185 mm²) or 6x (3x 120 mm²)
Max. Cable cross section (6)		Cable	8x (3x 120 mm²) or 6x (3x 240 mm²)	
		Cable entry mains (7)	max. 560 mm	
		Cable entry motor (7)	max. 360 mm	
Terminals per phase			8x M12	

(1) For Heavy Duty HD operation parameter [Dual Rating] *drt* has to be set to [High rating] *HiGH* (see programming manual EAV64318).

(2) For details see table under chapter Mains Current Harmonics / Mains Voltage Distortion, page 83.

(3) Minimum mains short-circuit current


(4) Permitted short-circuit current when the specified pre-fuse or circuit breaker is installed

(5) You will find further information at chapter Mains Connection, page 80 and at chapter Motor Connection, page 84.


(6) Greater connection cross sections are possible with the separate connection enclosure.

(7) Maximum possible width of cables connected next to each other in the enclosure

Dimensions IP23 for Size 5p

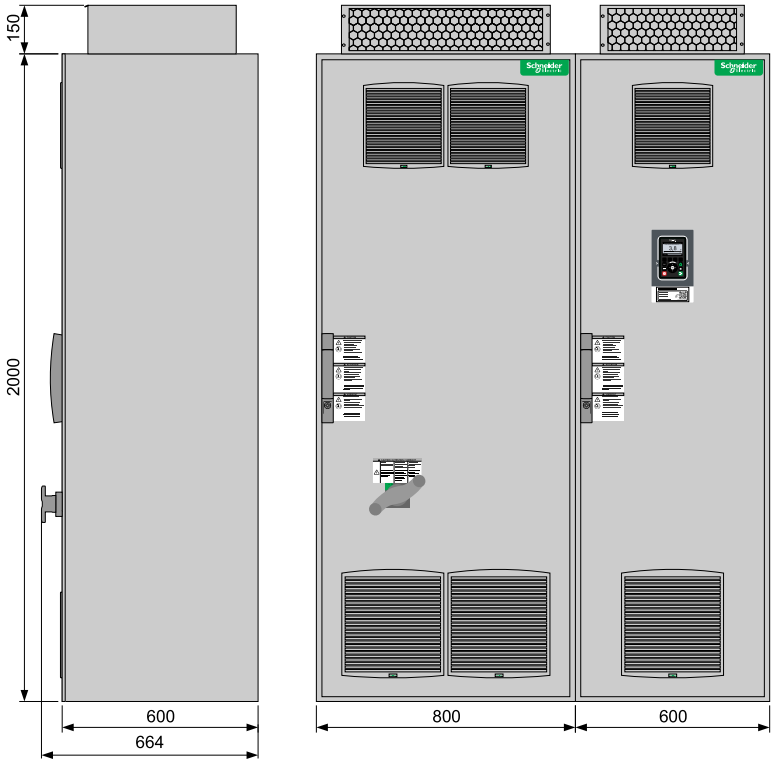

Interior View IP23 for Size 5p

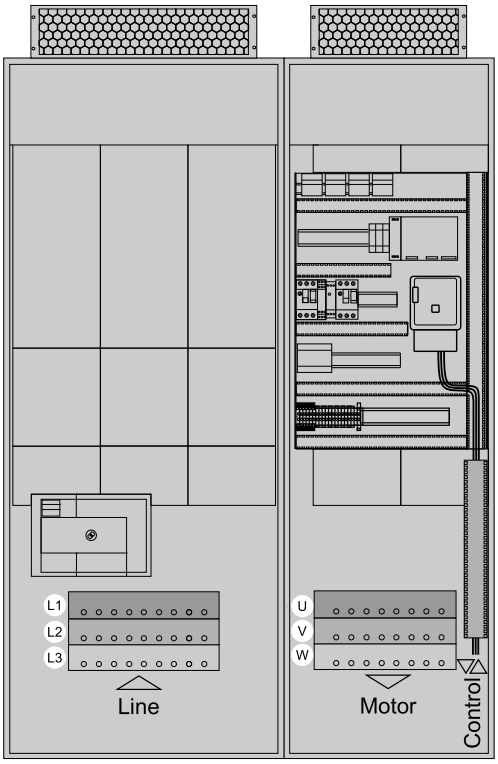


NOTE: Following customizations affect the total dimensions:

- Increased protection degree IP54
- Enclosure plinth for basic device
- Connection enclosure cable from top/ bottom
- 12-pulse supply

Circuit Diagram

The following diagram shows the typical wiring of the frequency inverter which may be required for protection of the plant or the device, depending on the use case.

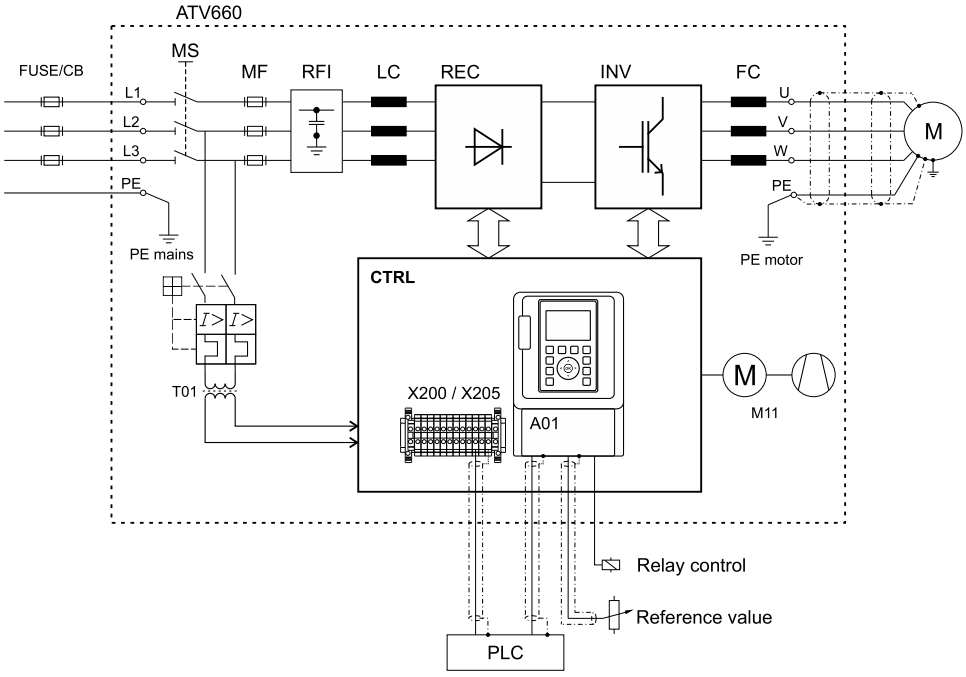

ATV660	Altivar Process Drive Systems
FUSE/CB	External pre-fuse or circuit breaker to protect the mains cable
MS	Built-in main switch, lockable in open position
T01	Control transformer 400 / 230 V AC
MF	aR fuses for short-circuit shut-down if the electronic protective devices do not work properly
RFI	Built-in RFI filter considering category C3 according to EN 61800-3 "Use in industrial environments"
LC	Line reactor to reduce the current harmonics on the mains caused by the DC link.
REC	Rectifier module(s)
INV	Inverter module(s)
FC	dv/dt filter choke to reduce the voltage load of the motor (at some types a "dv/dt filter choke" is already integrated)
CTRL	Control panel with control block and further control components
A01	Control terminals at the control block
X200 / X205	Control terminals at the control panel
M11	Fan in enclosure door

Mains Connection

What's in This Chapter

Dimensioning of the Power Cables 81
Overcurrent- and Short-circuit Protection 82
Mains Current Harmonics / Mains Voltage Distortion 83

Dimensioning of the Power Cables

The Altivar Process Drive Systems include semiconductor fuses as standard. These fuses are for the case that the electronic protective mechanisms of the inverter do not work. So they are a secondary protection of the inverter.

The Altivar Process Drive Systems help to protect themselves as well as the mains cables and the motor cables against thermal overload. The specified pre-fuses or circuit breakers (with magnetic release) must be installed upstream to protect the mains cables against short-circuit.

The recommended values for dimensioning the cable cross sections given in chapter Specification, page 50 are reference values for multi-core copper power cables laid in air at a maximum ambient temperature of 40°C (104°F). Observe different ambient conditions and local regulations.

Recommended types of mains cables

Cable Type	Description
	Three-phase cable with sector-shaped conductors and reduced protective conductor. **NOTE:** Verify that the PE conductor complies with the requirements according to IEC 61439-1.
	Three-phase cable with round conductors and reduced protective conductor. **NOTE:** Verify that the PE conductor complies with the requirements according to IEC 61439-1.

⚠WARNING


OVERLOAD DUE TO INCORRECT RATING OF MAINS SUPPLY

- Install properly rated upstream mains fuses or circuit breakers.
- When rating the upstream mains fuses and the cross sections as well as the lengths of the mains cables, take into account the available specified short circuit current.
- If the required short circuit is not available, increase the power of the transformer.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

Overcurrent- and Short-circuit Protection

The following picture illustrates the overcurrent protection and short-circuit protection at the input side.

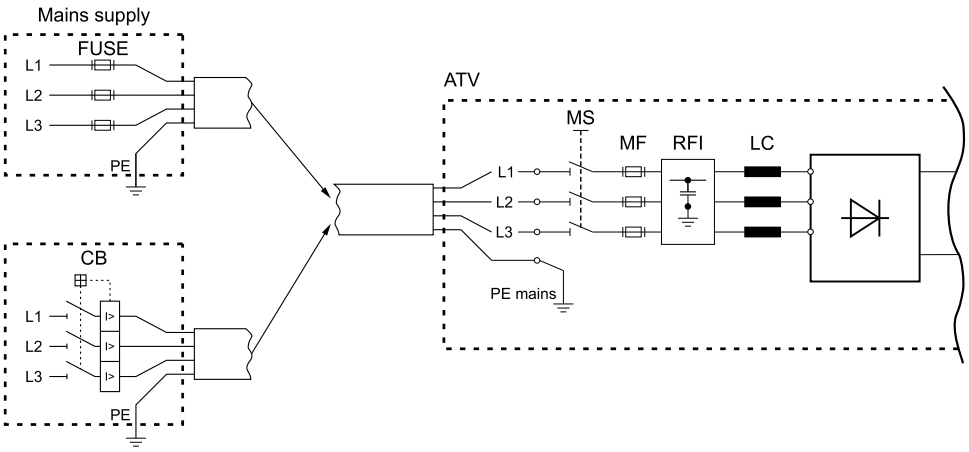

ATV	Altivar Process Drive Systems
FUSE	External pre-fuse to protect the mains cable
CB	External circuit breaker to protect the mains cable (alternatively to FUSE)
MS	Built-in main switch, lockable in open position
MF	aR mains fuses for short-circuit shut-down if the electronic protective devices do not work properly
RFI	Built-in RFI filter considering category C3 according to EN 61800-3 "Use in industrial environments"
LC	Line reactor to reduce the current harmonics on the mains caused by the DC link.
REC	Rectifier module(s)

The Altivar Process Drive System includes semiconductor fuses as standard. These fuses are for the case that the electronic protective mechanisms of the inverter do not work. So they are a secondary protection of the inverter.

The opening of the branch circuit protective device may be an indication that a fault current has been interrupted.

⚠⚠DANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION, OR ARC FLASH

Current-carrying parts and other components of the controller should be examined and replaced if damaged before switching the system on again.

Failure to follow these instructions will result in death or serious injury.

NOTE: The overcurrent protection is given at the technical data of the respective Altivar Process Drive System, page 50.

Mains Current Harmonics / Mains Voltage Distortion

Because of using a diode rectifier on the input of a conventional inverter, harmonics occur in the mains current which lead to a voltage distortion of the supplying mains.

All ATV660 Compact Drive Systems are equipped with line reactors to reduce the current harmonics. They are dimensioned in such a way that already at 80 % load a THD(i) < 48 % is kept. Details see table below.

Power [kW]	Iscc [kA]	In [A]	H1 [A]	Harmonics at nominal load [%]															
				H5	H7	H11	H13	H17	H19	H23	H25	H29	H31	H35	H37	H41	H43	H47	H49	THDi
ND:110	22	195	179	36.2	13.8	6.67	3.26	2.91	1.76	1.52	1.18	0.86	0.81	0.53	0.55	0.38	0.38	0.31	0.27	43.3
HD:90	*22*	*164*	*148*	*38.7*	*16.5*	*6.80*	*3.63*	*3.06*	*1.77*	*1.69*	*1.17*	*1.01*	*0.84*	*0.64*	*0.61*	*0.42*	*0.44*	*0.31*	*0.32*	*47.8*
ND:132	35	232	214	35.5	13.0	6.57	3.18	2.83	1.77	1.44	1.17	0.80	0.78	0.51	0.52	0.38	0.35	0.31	0.26	42.2
HD:110	*35*	*197*	*179*	*37.8*	*15.4*	*6.72*	*3.45*	*2.99*	*1.76*	*1.62*	*1.17*	*0.95*	*0.83*	*0.59*	*0.59*	*0.40*	*0.41*	*0.30*	*0.30*	*46.1*
ND:160	35	277	258	33.3	10.9	6.30	3.07	2.57	1.79	1.22	1.12	0.68	0.68	0.48	0.43	0.38	0.32	0.30	0.26	38.6
HD:132	*35*	*232*	*214*	*35.5*	*13.0*	*6.57*	*3.18*	*2.83*	*1.77*	*1.44*	*1.17*	*0.80*	*0.78*	*0.51*	*0.52*	*0.38*	*0.35*	*0.31*	*0.26*	*42.2*
ND:200	35	349	320	36.7	14.3	6.73	3.33	2.96	1.77	1.57	1.18	0.90	0.82	0.55	0.57	0.38	0.39	0.30	0.28	44.1
HD:160	*35*	*286*	*257*	*39.6*	*16.7*	*6.74*	*3.61*	*3.06*	*1.77*	*1.71*	*1.16*	*1.01*	*0.84*	*0.65*	*0.61*	*0.44*	*0.45*	*0.32*	*0.33*	*47.9*
ND:250	50	432	398	35.3	12.9	6.58	3.18	2.83	1.78	1.44	1.17	0.80	0.78	0.50	0.52	0.38	0.35	0.31	0.27	41.9
HD:200	*50*	*353*	*319*	*38.2*	*15.9*	*6.77*	*3.52*	*3.03*	*1.76*	*1.65*	*1.17*	*0.98*	*0.83*	*0.61*	*0.60*	*0.41*	*0.43*	*0.31*	*0.31*	*46.8*
ND:315	50	538	504	32.6	10.4	6.23	3.07	2.49	1.79	1.17	1.09	0.66	0.65	0.48	0.42	0.38	0.32	0.29	0.26	37.6
HD:250	*50*	*432*	*398*	*35.3*	*12.9*	*6.58*	*3.18*	*2.83*	*1.78*	*1.44*	*1.17*	*0.80*	*0.78*	*0.50*	*0.52*	*0.38*	*0.35*	*0.31*	*0.27*	*41.9*
ND:355	50	611	566	34.4	11.9	6.52	3.12	2.75	1.79	1.37	1.16	0.75	0.75	0.49	0.48	0.38	0.33	0.31	0.26	40.4
HD:280	*50*	*489*	*445*	*37.4*	*15.0*	*6.76*	*3.42*	*3.00*	*1.76*	*1.62*	*1.18*	*0.94*	*0.83*	*0.58*	*0.59*	*0.40*	*0.42*	*0.30*	*0.30*	*45.3*
ND:400	50	681	636	33.0	10.7	6.34	3.07	2.58	1.80	1.23	1.12	0.68	0.69	0.48	0.43	0.38	0.32	0.30	0.27	38.3
HD:315	*50*	*545*	*501*	*35.9*	*13.4*	*6.67*	*3.23*	*2.90*	*1.77*	*1.51*	*1.18*	*0.85*	*0.80*	*0.52*	*0.54*	*0.38*	*0.37*	*0.31*	*0.27*	*42.8*
ND:450	50	764	718	31.7	9.64	6.11	3.07	2.38	1.79	1.09	1.05	0.64	0.61	0.48	0.40	0.38	0.32	0.28	0.26	36.3
HD:355	*50*	*611*	*566*	*34.4*	*11.9*	*6.52*	*3.12*	*2.75*	*1.79*	*1.37*	*1.16*	*0.75*	*0.75*	*0.49*	*0.48*	*0.38*	*0.33*	*0.31*	*0.26*	*40.4*
ND:500	50	846	800	30.5	8.84	5.86	3.09	2.18	1.75	0.99	0.97	0.63	0.55	0.48	0.39	0.35	0.32	0.25	0.24	34.6
HD:400	*50*	*681*	*636*	*33.0*	*10.7*	*6.34*	*3.07*	*2.58*	*1.80*	*1.23*	*1.12*	*0.68*	*0.69*	*0.48*	*0.43*	*0.38*	*0.32*	*0.30*	*0.27*	*38.3*
ND:560	50	948	893	31.2	9.33	6.06	3.08	2.33	1.78	1.06	1.04	0.64	0.60	0.49	0.40	0.37	0.32	0.27	0.25	35.6
HD:450	*50*	*767*	*714*	*33.7*	*11.3*	*6.48*	*3.10*	*2.69*	*1.80*	*1.32*	*1.15*	*0.73*	*0.73*	*0.49*	*0.47*	*0.39*	*0.33*	*0.31*	*0.26*	*39.3*
ND:630	50	1058	1002	30.0	8.56	5.78	3.10	2.11	1.73	0.96	0.95	0.63	0.54	0.48	0.39	0.34	0.31	0.24	0.24	33.9
HD:500	*50*	*849*	*795*	*32.5*	*10.3*	*6.30*	*3.08*	*2.53*	*1.80*	*1.19*	*1.11*	*0.67*	*0.67*	*0.49*	*0.43*	*0.38*	*0.32*	*0.29*	*0.26*	*37.5*
ND:710	50	1192	1129	30.0	8.56	5.82	3.11	2.13	1.74	0.97	0.95	0.64	0.55	0.48	0.39	0.34	0.31	0.24	0.24	33.9
HD:560	*50*	*951*	*890*	*32.5*	*10.4*	*6.34*	*3.09*	*2.56*	*1.80*	*1.21*	*1.12*	*0.68*	*0.68*	*0.49*	*0.44*	*0.39*	*0.32*	*0.30*	*0.26*	*37.6*
ND:800	50	1335	1270	28.7	7.95	5.50	3.13	1.91	1.67	0.90	0.86	0.64	0.51	0.46	0.39	0.31	0.30	0.23	0.22	32.3
HD:630	*50*	*1061*	*999*	*31.3*	*9.39*	*6.11*	*3.09*	*2.36*	*1.79*	*1.08*	*1.05*	*0.64*	*0.61*	*0.49*	*0.40*	*0.37*	*0.32*	*0.27*	*0.26*	*35.8*

NOTE: The actual values for the respective mains situation can be calculated on request.

NOTE: Alternatively to the reduction of the current harmonics with line reactors, you can order the product range ATV680 – Low Harmonic Drive Systems. It contains an active mains supply module, reaches a THDi ≤ 5 % and so it fulfills the requirements according IEEE 519.

Motor Connection

What's in This Chapter

Assignment of the Motor 85
Dimensioning of the Motor Cables 86
Length of Motor Cables 87
Thermal Motor Monitoring 91

Assignment of the Motor

All Altivar Process Drive Systems include the function "Dual rating". It enables the use for drives with low overload "Normal duty" (typically pumps and fans) and, on the other hand, also the use with increased requirements regarding overload capability, starting torque, load impacts and control performance "Heavy duty" (e.g. compressors, mixers, rotary blowers,...).

You can select the desired power/overload capability with parameter **[Dual rating]** **DRT**. When changing this parameter all relevant parameters are adapted to the selected property. For example, the parameters for motor power and motor current are modified accordingly.


In case of setting HD – Heavy Duty **[High rating]** **HIGH** the overload capability and the maximum overload current are increased. But at the same time the nominal motor power and the continuous output current of the frequency inverter are reduced. So you have to select a higher device type for the same motor power.

Example for ATV660C13Q4X1:

Normal Duty ND:

132 kW with 250 A continuous current and 275 A overload current for 60 s

- Nominal power
- Overload 10 %
- Factory setting: **[Normal rating]** **NORMAL**

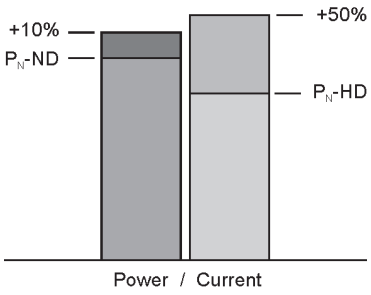

Heavy Duty HD:

110 kW with 211 A continuous current and 317 A overload current for 60 s

- Lower nominal power
- Overload 50 %
- Selectable via parameter: **[High rating]** **HIGH**

The factory setting of the parameter **[Dual rating]** **DRT** is "Normal Duty". When the product is reset to the factory settings, this parameter is also reset to "Normal Duty".

Dimensioning of the Motor Cables

⚠⚠DANGER

ELECTRIC SHOCK DUE TO OVERLOAD ON MOTOR CABLES

- Verify that the protective ground conductor complies with the requirements specified in IEC 61439-1.
- Verify compliance of the motor cables with the specification of IEC 60034-25.



Failure to follow these instructions will result in death or serious injury.

The recommended values for dimensioning the cable cross sections given in chapter Specification, page 50 are reference values for multi-core copper power cables laid in air at a maximum ambient temperature of 40°C (104°F). Observe different ambient conditions and local regulations.

The motor cables are dimensioned for the maximum continuous current. They apply to 0...100 Hz (up to 300 Hz the cable losses increase about 25 % because of the Skin-effect).

The IGBT modules cause high-frequent interferences which drain off more and more stronger to the ground potential with increasing motor cable length. As a result the line-conducted interferences to the mains increase. In case of too long motor cables the attenuation of the mains filters is not longer sufficient and the permitted interference limits are exceeded.

Recommended types of motor cables

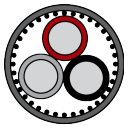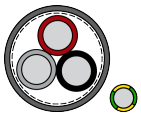Cable Type	Description
	Symmetrically shielded cable with 3 phase conductors, symmetrically arranged PE conductor and a shield. **NOTE:** Verify that the PE conductor complies with the requirements according to IEC 61439-1. Example: 2YSLCY-JB
	Symmetrically shielded cable with 3 phase conductors and a concentric PE conductor as shield. **NOTE:** Verify that the PE conductor complies with the requirements according to IEC 61439-1. Example: NYCY / NYCWY
	Three-phase cable with round conductors and reduced protective conductor. **NOTE:** A separate PE conductor is required if the shield does not fulfill the requirements according to IEC 61439-1.

NOTE: Shielded single-conductor cables are not recommended due to increased currents in the shield.

Length of Motor Cables



Because of the permitted mains disturbances, the allowed overvoltages at the motor, the occurring bearing currents and the permitted heat losses the distance between inverter and motor(s) is limited. The maximum distance heavily depends on the used motors (insulation material), the type of motor cable used (shielded/unshielded), the cable laying (cable channel, underground installation, ...) as well as from the used options.

Dynamic voltage load of the motor

Overvoltages at the motor terminals result from reflection in the motor cable. Basically the motors are stressed with measurable higher voltage peaks from a motor cable length of 10 m. With the length of the motor cable also the value of overvoltage increases.


The steep edges of the switching impulses at the output side of the frequency inverter lead to a further load of the motors. The slew rate of the voltage is typically over 5 kV/µs but it decreases with the length of the motor cable.

The ATV660 frequency inverters are equipped with a dv/dt filter choke (at higher types a "dv/dt filter choke" is already integrated), which significantly reduces the load of the motors and so it is in accordance with the allowed limits.

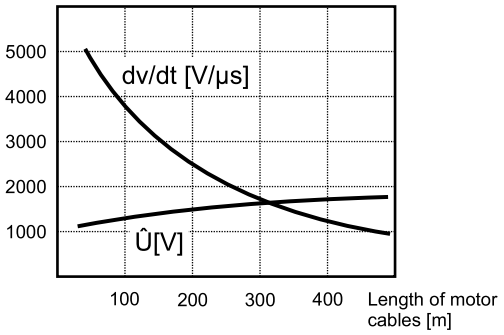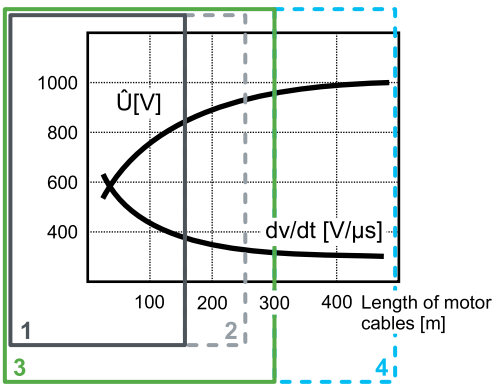Typical load of the motor (1)	Description
	Load of the motor with overvoltage and slew rate when using conventional frequency inverters without integrated dv/dt filter chokes.
	Reduced load of the motor by using Altivar Process Drive Systems with integrated dv/dt filter chokes 150 m (at higher types a "dv/dt filter choke" is already integrated). **1** When using a shielded motor cable **2** When using an unshielded motor cable **3** When using a shielded motor cable and a "dv/dt filter choke 300 m". **4** When using an unshielded motor cable and a "dv/dt filter choke 300 m".
(1) The given values are related to the voltage load phase-to-phase. The voltage values phase to ground are approximately 300 V lower, du/dt is approximately 150 V/µs lower.	

The motor standards for IEC and NEMA specify limits for the permitted load regarding slew rate and voltage peaks

- IEC 60034-17 – Permitted values for standard power supply driven motors at the frequency inverter, up to 500 V
- IEC 60034-25 – Permitted values for "inverter motors" up to 500 V
- NEMA MG1 – Permitted values for "inverter motors"

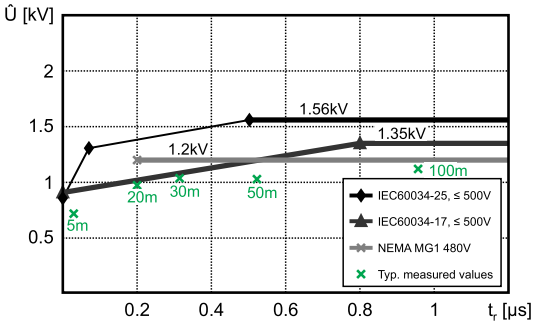Typical measured values	Description
	The typical measured values as shown in the diagram correspond with the ATV660 frequency inverter variant with built-in dv/dt filter choke 150 m (at higher types a "dv/dt filter choke" is already integrated).

Motors according IEC 60034-25 as well as motors according NEMA MG1 are dimensioned for operation with frequency inverters and thus they are well qualified for drives with ATV660 frequency inverters.

Motors according IEC 60034-17 are dimensioned for operation with pure sinusoidal voltage, but they can also be operated at ATV660 when observing the permitted cable lengths and correct customization.

The Low Harmonic Drive Systems ATV680 and ATV980 offer significant improvement regarding motor load in comparison with older generations with active mains rectifiers AFE (as still offered from many competitors). By the new "3-level" system architecture the voltage load is the same as for ATV660 and ATV960 with classic diode rectifiers and so it not required to take it into account separately.

Basically for all motors from frame size 315 (approximately 110 kW) an insulated bearing on the non-drive end is recommended. It helps to prevent internal current flow inside the motor which can result from unbalances. The insulated bearing is to be understood as supplement to the dv/dt filter choke inside the frequency inverter.

NOTICE

OVERVOLTAGE AT THE MOTOR

Do not exceed the maximum length of the motor cables as specified in this document.

Failure to follow these instructions can result in equipment damage.

EMC interferences

The IGBT modules cause high-frequent interferences which drain off more and more stronger to the ground potential with increasing motor cable length. As a result the line-conducted interferences to the mains increase. In case of too long motor cables the attenuation of the mains filters is not longer sufficient and the permitted interference limits are exceeded.

The IGBT modules cause high-frequency interference which increases with increasing motor cable lenght. If the motor cable length exceeds the maximum cable length, the internal mains filters are no longer sufficient.

⚠WARNING

UNEXPECTED EQUIPMENT OPERATION DUE TO HIGH-FREQUENCY INTERFERENCE

Do not exceed the maximum length of the motor cables as specified in this document.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

Limit values

This product meets the EMC requirements according to the standard IEC 61800-3 if the measures described in this manual are implemented during installation.

If the selected composition (product itself, mains filter, other accessories and measures) does not meet the requirements of category C1, the following information applies as it appears in IEC 61800-3:

⚠WARNING

RADIO INTERFERENCE

In a domestic environment this product may cause radio interference in which case supplementary mitigation measures may be required.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

Bearing currents

The dv/dt filter choke inside the ATV660 frequency inverter effects a significant reduction of the common mode bearing currents.

Especially in case of big motors with middle up to high motor cable lengths the filter chokes are considerable to increase the availability of the motor.

Multiplication factors

In case of conditions differing from the table the recommended cable lengths have to be converted by means of the following factors.

If several factors apply, please multiply them.

		Correction of the max. cable lengths
The pulse frequency does not correspond to factory setting:	at 4 kHz	multiply all values by 0.70
	at 8 kHz	multiply all values by 0.40
Output frequencies higher than 100 Hz.	up to 200 Hz	multiply all values by 0.80
	up to 300 Hz	multiply all values by 0.50
In case of 6-pole motor cabling (e.g. for star/delta starting circuit)		multiply all values by 0.75
In case of parallel motors with a dedicated cable to each motor the inverter values have to be converted in compliance with the number of motors. When a motor choke is used for each motor, the following values in brackets apply.	at 2 motors	multiply all values by 0.40 (0.80)
	at 3 motors	multiply all values by 0.25 (0.60)
	at 4 motors	multiply all values by 0.15 (0.40)
	at 5 motors	multiply all values by 0.10 (0.25)
In case of parallel motors with a common cable to all motors the inverter values have to be converted in compliance with the number of motors:	at 2 motors	multiply all values by 0.80
	at 3 motors	multiply all values by 0.60
	at 4 motors	multiply all values by 0.40
	at 5 motors	multiply all values by 0.25

Recommended maximum lengths of motor cables in second environment (industrial environment)

EMC category (EN 61800-3)	ATV660	Chosen option	Type of cable	Max. cable length
C3	C11●4X1…C16●4X1	–	Shielded	50 m
	C11●4X1…C16●4X1	dv/dt filter choke 150m	Shielded	150 m
	C20●4X1…C80●4X1	– (1)	Shielded	150 m
C4	C11●4X1…C16●4X1	–	Unshielded	100 m
	C11●4X1…C16●4X1	dv/dt filter choke 150m	Unshielded	250 m
	C20●4X1…C80●4X1	– (1)	Unshielded	250 m
	C11●4X1…C80●4X1	dv/dt filter choke 300m	Shielded	300 m
	C11●4X1…C80●4X1	dv/dt filter choke 300m	Unshielded	500 m

(1) At ATV660 Drive Systems from 200 kW the dv/dt filter choke 150m is built-in as standard.

NOTE: The specified lengths of motor cables are recommended limits based on typical motor cables, laying in cable channels, default pulse frequency and maximal output frequency of 100 Hz. Longer cable lengths are possible on request.

Thermal Motor Monitoring

In the Altivar Process Drive System several possibilities for thermal motor monitoring are available:

- Standard sensor inputs AI2, AI3 at the control block Suitable temperature sensors: PTC, Pt100, Pt1000, KTY84
- Sensor inputs AI4, AI5 at expansion card "Logic and analog I/O card" Suitable temperature sensors: PTC, Pt100, Pt1000, KTY84

⚠⚠DANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION OR ARC FLASH

- Verify that the temperature sensors in the motor meet the PELV requirements.
- Verify that the motor encoder meets the PELV requirements.
- Verify that any other equipment connected via signal cables meets the PELV requirements.

Failure to follow these instructions will result in death or serious injury.

- On customer request the motor monitoring PTC, a PTC thermistor relay (alternatively with ATEX certificate), is installed and the sensor inputs are wired with the option terminals. The evaluation is performed via the diagnostics system in the Altivar Process Drive System.
- On customer request the motor/bearing monitoring Pt100/Pt1000/KTY is installed, which includes evaluation relays and the wiring of the sensor inputs to the option terminals. The evaluation is performed via the diagnostics system in the Altivar Process Drive System.

NOTE: When protective separation of the thermistor sensors in the motor cannot be guaranteed or in case of long motor cables, this option is highly recommended.

Predefined Customizations

Customization / Page	Brief description
Enclosure options	
Increased protection degree IP54, page 122	Enclosure designed in increased protection degree IP54
Enclosure plinth, page 123	Enclosure plinth for basic device in protection degree IP23
Connection enclosure, page 123	Separate connection enclosure; for connection of cables alternatively from top or from bottom.
Enclosure lighting, page 124	Fluorescent lamp and a power socket 230 V AC
Enclosure heating, page 124	Heats the enclosure in order to avoid frost and condensation at an ambient temperature up to -10°C
Modified wiring colors, page 125	Modified wiring colors at the power cables
Control options	
Key switch "local / remote", page 127	Key switch in the enclosure door for switching between remote control and local control
Ethernet port on front door, page 127	Access to the Ethernet network directly on the enclosure door
I/O expansion cards	
Logic and analog I/O card, page 129	Expansion card for additional analog and digital inputs and outputs (6 digital inputs, 2 digital outputs, 2 analog inputs)
Relay output card, page 129	Expansion card with three additional relay outputs
Communication cards	
Communication card Modbus TCP or EtherNet IP, page 131	Dual port option card for control of the inverter via Modbus TCP or EtherNet/IP
Communication card CANopen Daisy Chain, page 131	Option card for control of the inverter via CANopen Daisy Chain
Communication card CANopen SUB-D9, page 131	Option card for control of the inverter via CANopen with SUB-D port
Communication card CANopen with screw terminals, page 131	Option card for control of the inverter via CANopen with screw terminals
Communication card DeviceNet, page 131	Option card for control of the inverter via DeviceNet
Communication card Profibus DP, page 132	Option card for control of the inverter via Profibus DP V1
Communication card PROFINET, page 132	Option card for control of the inverter via PROFINET
Functional safety	
STO - SIL 3 Stop category 0, page 134	This option effects a Safe Torque Off at the motor
STO - SIL 3 Stop category 1, page 134	This option effects a Safe Torque Off at the motor with controlled deceleration
Display options	
Front Display Module (FDM), page 136	Measuring device mounted in the enclosure door which indicates the operating data
Indicator lamps on front door, page 136	Three additional Indicator lamps mounted in the enclosure door which indicate the operating state
Motor options	
Motor monitoring PTC, page 138	PTC thermistor relay to monitor the motor temperature via PTC thermistors in the motor
Motor monitoring PTC with ATEX certificate, page 138	PTC thermistor relay to monitor the motor temperature via PTC thermistors in the motor with ATEX certificate
Motor monitoring Pt100/Pt1000/KTY, page 138	Tripping unit to monitor the motor temperature via Pt100/Pt1000/KTY sensors in the motor winding
Bearing monitoring Pt100/Pt1000/KTY, page 139	Tripping unit to monitor the motor temperature via Pt100/Pt1000/KTY sensors in the bearings of the motor
dv/dt filter choke 150 m, page 139	Reduces the slew rate, peak voltage and common mode interferences on the output of the inverter and helps to protect the motor
dv/dt filter choke 300 m, page 139	Helps to protect the motor winding and motor bearings in case of very long motor cable

Customization / Page	Brief description
Motor heating, page 140	Includes a motor circuit breaker, a contactor and the terminals to connect a motor heating
Mains supply	
Circuit breaker, page 142	Mains disconnect unit instead of the main switch, including door handle
Undervoltage coil for circuit breaker 230 V, page 142	When there is no voltage at the undervoltage coil, the circuit breaker switches off
Motor for circuit breaker 230 V, page 143	Remote control of the circuit breaker via control commands is possible by means of this motor drive.
12-pulse Supply, page 144	Contains the components for 12-pulse supply
Automated mains disconnect, page 143	Autonomous disconnection from the mains in case of a stop request, a detected fault or a safety disconnection via STO.
Monitoring	
EcoStruxure Asset Advisor, page 146	EcoStruxure Asset Advisor preventive services is a cloud based monitoring and smart alarming services.
Documentation / Packaging	
Safety labels in local language, page 149	With this option the devices can be ordered with labels in the local language.
Seaworthy packaging, page 149	This option contains a seaworthy packaging for transport by ship.

Wiring of the Control Terminals

What’s in This Part

Design/Position of the Individual Terminals 95
Control Block 98
Option "Logic and Analog I/O Card" 111
Option "Relay Output Card" 115
Option Terminals 117

Design/Position of the Individual Terminals

What's in This Chapter


Overview 96
Voltage Supply and Auxiliary Voltage 97

Overview

The Altivar Process Drive Systems are already equipped with extensive terminals on the control block as standard. The use and the function of all inputs and outputs can be parameterized.

In addition, there are the terminals X200 and X205, which are wired internally appropriate to the customizations.

For expansion the option cards Logic and analog I/O card and the relay output card are available. Both expansion cards can be installed, but the same card cannot be plugged twice.

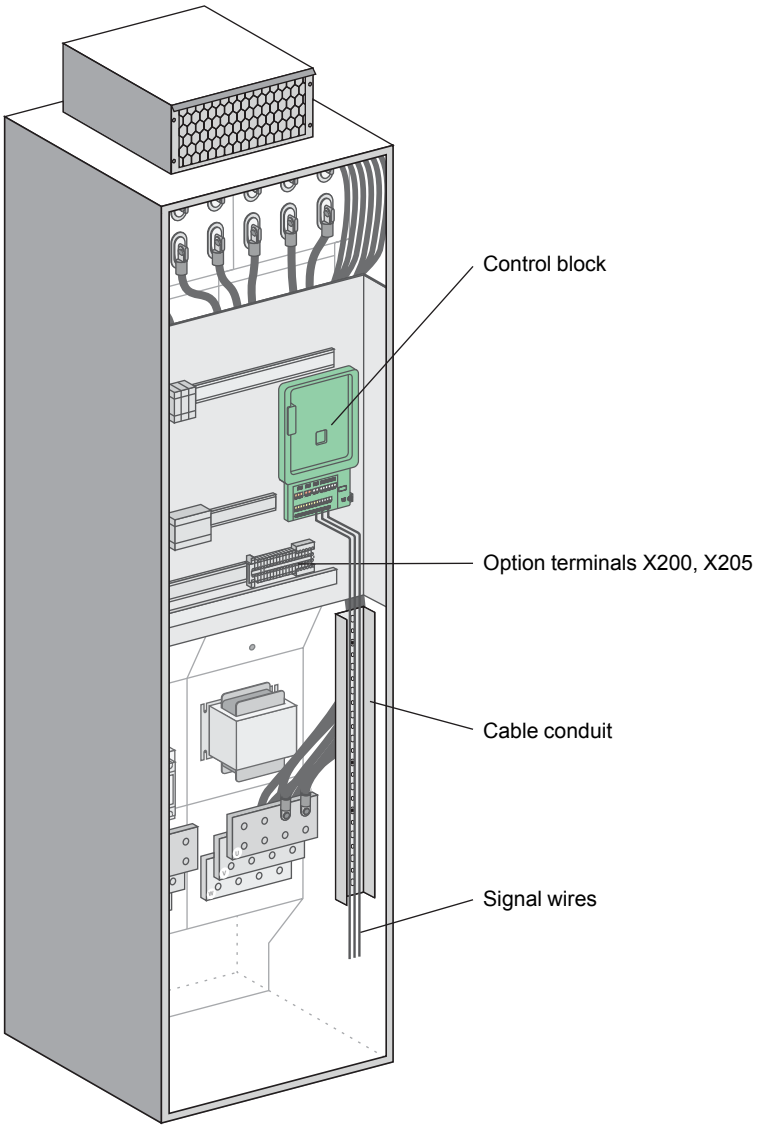

Voltage Supply and Auxiliary Voltage

All Drive Systems are equipped with a control transformer matching with the mains voltage and the required power. It provides a 230 Vac control voltage for supplying the fans in the enclosure doors and the DC supply units. The DC supply units generate 48 Vdc for the internal power part fans and a 24 Vdc auxiliary voltage. All control components are supplied by the internally provided voltages.

NOTE: For buffering the control block and with that keeping communication alive (e.g. fieldbus), the control block can be supplied via the terminals P24 and 0V externally with 24 Vdc.

⚠⚠DANGER

ELECTRIC SHOCK CAUSED BY INCORRECT POWER SUPPLY UNIT

The +24VDC supply voltage is connected with many exposed signal connections in the device.

- Use a power supply unit that meets the PELV (Protective Extra Low Voltage) requirements.


Failure to follow these instructions will result in death or serious injury.

Control Block

What's in This Chapter

Structure of the Control Block 99
Control Terminals at the Control Block 100
Specification of the Control Terminals 101
Control Cable Lengths 105
Relay Contacts Wiring 106
Digital Inputs Wiring Depending on Sink / Source Switch Configuration 109

Structure of the Control Block

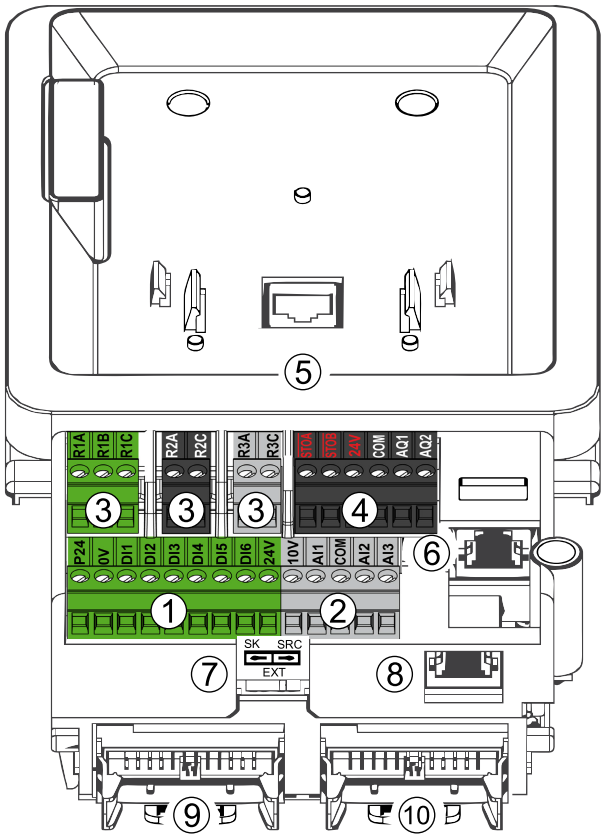

1 Control terminals of digital inputs

2 Control terminals of analog inputs

3 Control terminals of relay outputs

4 Control terminals STO (Safe Torque Off) and analog outputs

5 RJ45 port for the graphical keypad

6 RJ45 port for Ethernet IP or Modbus TCP


7 Sink-Ext-Source selector switch

8 RJ45 port for serial Modbus


9 Slot B for I/O expansion card

10 Slot A for communication card or I/O expansion card

Control Terminals at the Control Block

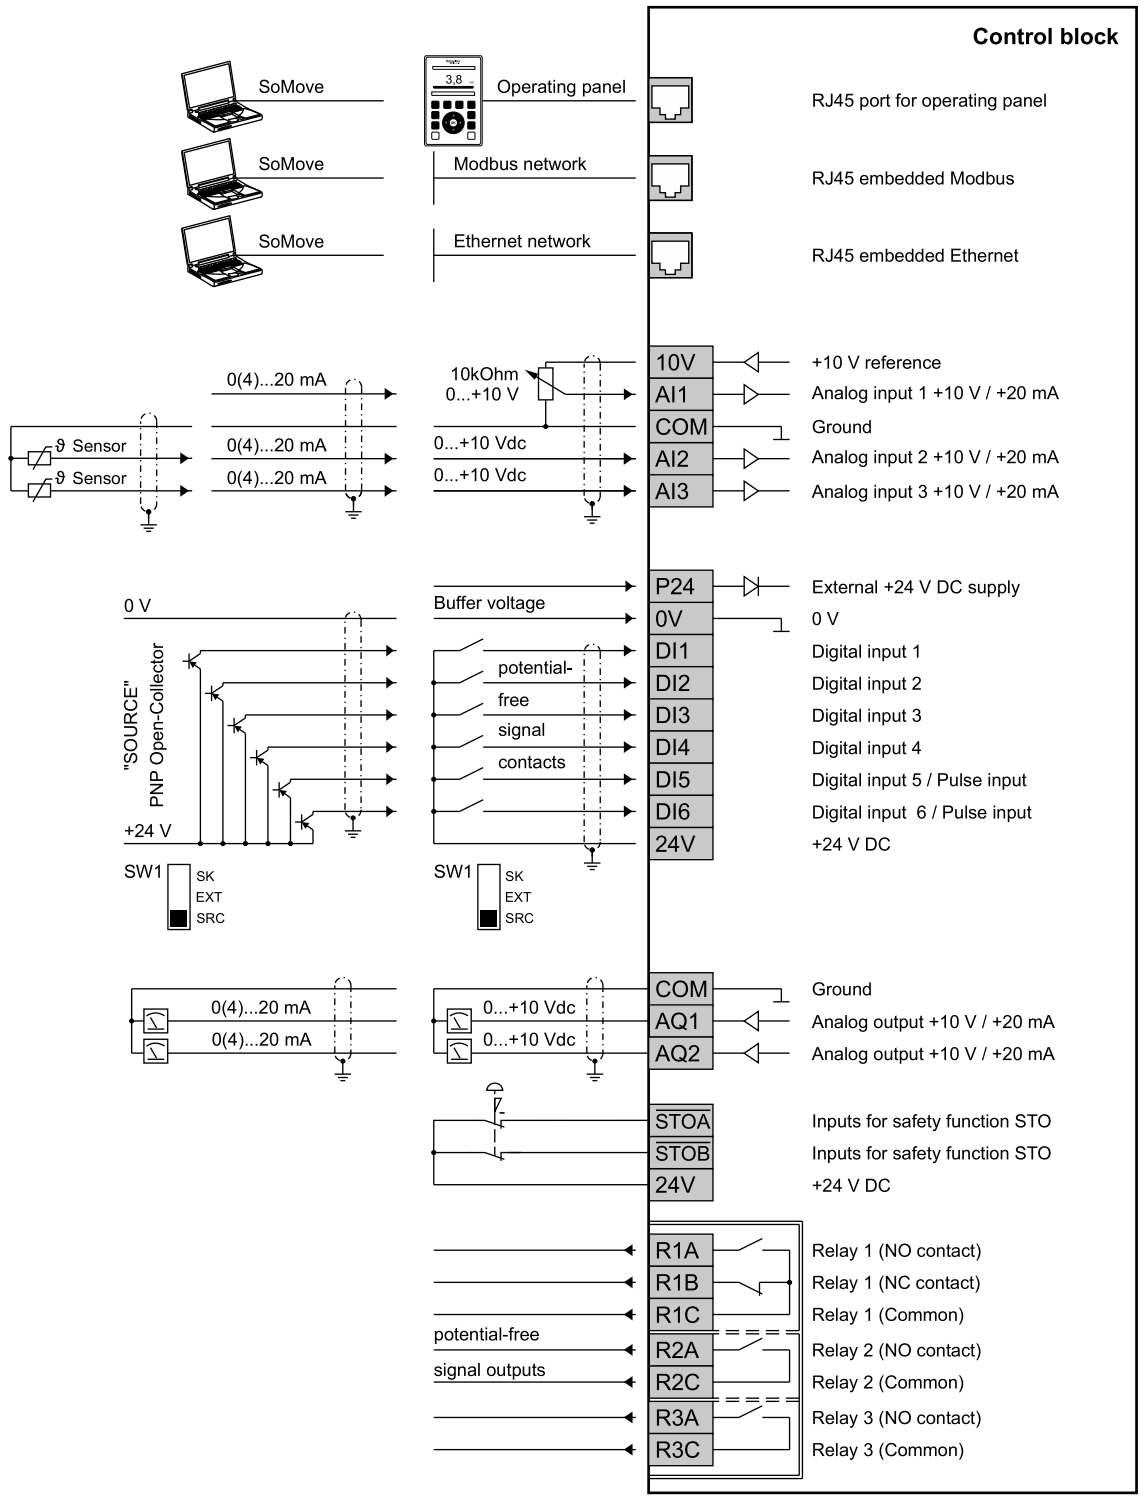

Specification of the Control Terminals

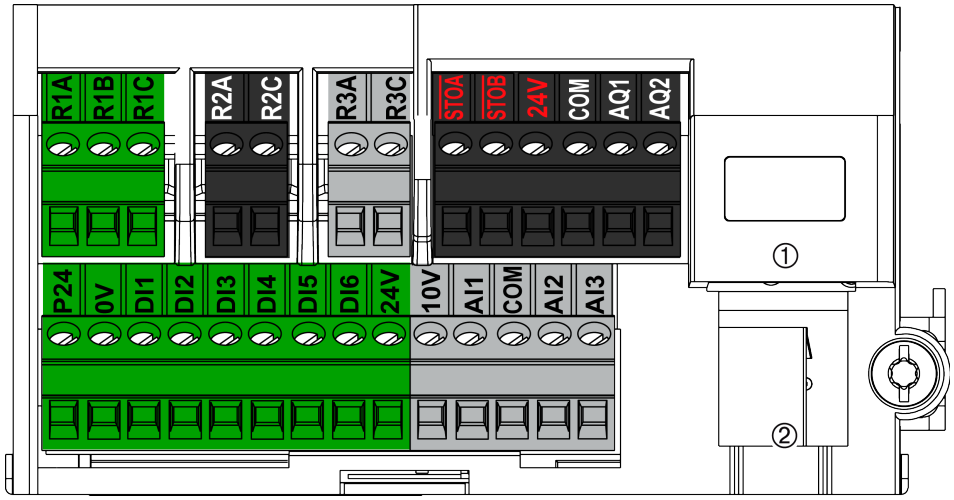

Screw terminals

Maximum cable cross section for all terminals:

- 1.5 mm² (AWG 16), 0.25 Nm (2.2 lbf.in)

Minimum cable cross section:

- For relay terminals 0.75 mm² (AWG 18)
- For all other terminals 0.5 mm² (AWG 20)

Strip length: 10 mm (0.39 in.)

Maximum cable length:

- AI●, AQ●, DI●, DQ●: 50 m (164 ft) shielded
- $\overline{\text{STOA}}$, $\overline{\text{STOB}}$: 30 m (98 ft) unshielded

Terminal	Description	I/O Type	Electrical characteristics
R1A	NO contact of relay R1	O	**Output Relay 1** • Minimum switching capacity: 5 mA for 24 Vdc • Maximum switching current on resistive load: 3 A for 250 Vac (OVC II) and 30 Vdc • Maximum switching current on inductive load (cos ϕ ≥0.4 and L/R ≤ 7 ms): 2 A for 250 Vac (OVC II) and 30 Vdc. Inductive load must be equipped with a voltage surge limitation device according to ac or dc operation with total energy dissipation greater than the inductive energy stored in the load. Refer to sections Output Relay with Inductive AC Loads , page 106 and Output Relay with Inductive DC Loads , page 107. • Refresh time: 5 ms ± 0.5 ms • Service life: 100,000 operations at maximum switching current
R1B	NC contact of relay R1	O	
R1C	Common point contact of relay R1	O	
R2A	NO contact of relay R2	O	**Output Relay 2** • Minimum switching capacity: 5 mA for 24 Vdc • Maximum switching current on resistive load: 5 A for 250 Vac (OVC II) and 3A for 30 Vdc • Maximum switching current on inductive load (cos ϕ ≥0.4 and L/R ≤ 7 ms): 2 A for 250 Vac (OVCII) and 30 Vdc. Inductive load must be equipped with a voltage surge limitation device according to ac or dc operation with total energy dissipation greater than the inductive energy stored in the load. Refer to sections Output Relay with Inductive AC Loads , page 106 and Output Relay with Inductive DC Loads , page 107 • Refresh time: 5 ms ± 0.5 ms • Service life: ◦ 100,000 operations at maximum switching current ◦ 1,000,000 operations at 0.5 A
R2C	Common point contact of relay R2	O	

Terminal	Description	I/O Type	Electrical characteristics
R3A	NO contact of relay R3	O	**Output Relay 3** • Minimum switching capacity: 5 mA for 24 Vdc • Maximum switching current on resistive load: 5 A for 250 Vac (OVCII) and 3A for 30 Vdc • Maximum switching current on inductive load (cos ϕ ≥0.4 and L/R ≤ 7 ms): 2 A for 250 Vac (OVCII) and 30 Vdc. Inductive load must be equipped with a voltage surge limitation device according to AC or DC operation with total energy dissipation greater than the inductive energy stored in the load. Refer to sections Output Relay with Inductive AC Loads , page 106 and Output Relay with Inductive DC Loads , page 107 • Refresh time: 5 ms ± 0.5 ms • Service life: ◦ 100,000 operations at maximum switching current ◦ 1,000,000 operations at 0.5 A
R3C	Common point contact of relay R3	O	
$\overline{\text{STOA}}$, $\overline{\text{STOB}}$	STO inputs	I	**Safety Function STO Inputs** Refer to the Embedded Safety Function Manual (EAV64334) available on www.se.com
24V	Output power supply for digital inputs and safety function STO inputs	O	Use only PELV standard power supply unit. • +24 Vdc • Tolerance: minimum 20.4 Vdc, maximum 27 Vdc • Current: maximum 200 mA for both 24 Vdc terminals • Terminal protected against overload and short-circuit • In Sink Ext position, this supply is powered by external PLC supply
COM	Analog I/O common	I/O	0 V for Analog outputs
AQ1	Analog output	O	AQ: Analog output software-configurable for voltage or current • Voltage analog output 0...10 Vdc, minimum. Minimum load impedance 470 Ω, • Current analog output X-Y mA by programming X and Y from 0...20 mA, maximum load impedance 500 Ω • Sampling time: 10 ms + 1 ms maximum • Resolution 10 bits • Accuracy: ±1 % for a temperature variation of 60 °C (108 °F) • Linearity ±0.2 %
AQ2	Analog output	O	
P24	External input supply	I	External input supply +24 Vdc • Tolerance: minimum 19 Vdc, maximum 30 Vdc • Current: maximum 0.8 A
0V	0 V	I/O	0 V for P24
DI1-DI6	Digital inputs	I	6 programmable logic inputs 24 Vdc, comply with IEC/EN 61131-2 logic type 1 • Positive logic (Source): State 0 if ≤ 5 Vdc or logic input not wired, state 1 if ≥ 11 Vdc • Negative logic (Sink):State 0 if ≥ 16 Vdc or logic input not wired, state 1 if ≤ 10 Vdc • Impedance 3.5 kΩ • Maximum voltage: 30 Vdc • Sampling time: 2 ms + 0.5 ms maximum Multiple assignment makes it possible to configure several functions on one input (example: DI1 assigned to forward and preset speed 2, DI3 assigned to reverse and preset speed 3).
DI5-DI6	Pulse inputs	I	Programmable Pulse input • Comply with level 1 PLC, IEC 65A-68 standard • State 0 if < 0.6 Vdc, state 1 if > 2.5 Vdc • Pulse counter 0...30 kHz • Frequency range: 0…30 kHz • Cyclic ratio: 50 % ±10 % • Maximum input voltage 30 Vdc, < 10 mA • Sampling time: 5 ms + 1 ms maximum

Terminal	Description	I/O Type	Electrical characteristics
10V	Output supply for Analog input	O	Internal supply for the analog inputs • 10.5 Vdc • Tolerance ±5 % • Current: maximum 10 mA • Short circuit protected
AI1-AI2-AI3	Analog inputs	I	Software-configurable V/A : voltage or current analog input • Voltage analog input 0...10 Vdc, impedance 30 kΩ, • Current analog input X-Y mA by programming X and Y from 0...20 mA, with impedance 250 Ω • Sampling time: 5 ms + 1 ms maximum • Resolution 12 bits • Accuracy: ±0.6 % for a temperature variation of 60 °C (108 °F) • Linearity ±0.15 % of maximum value
COM	Analog I/O common	I/O	0 V for Analog inputs
AI2-AI3	Sensor inputs	I	Software-configurable PT100/PT1000 or KTY84 or PTC or Water level sensor • **PT100** ◦ 1 thermal sensor or 3 thermal sensors mounted in series (configurable by software) ◦ Thermal sensor current: 5 mA ◦ Range –20...200 °C (–4...392 °F) ◦ Accuracy ±4 °C (7.2 °F) for a temperature variation of 60 °C (140 °F) • **PT1000** ◦ 1 thermal sensor or 3 thermal sensors mounted in series (configurable by software) ◦ Thermal sensor current: 1 mA ◦ Range –20...200 °C (–4...392 °F) ◦ Accuracy ±4 °C (7.2 °F) for a temperature variation of 60 °C (140 °F) • **PTC** ◦ 1 thermal sensor or 3 thermal sensors or 6 thermal sensors mounted in series ◦ Thermal sensor current: 1 mA ◦ Nominal value: < 1.5 kΩ ◦ Overheat trigger threshold : 2.9 kΩ ± 0.2kΩ ◦ Overheat reset threshold : 1.575 kΩ ± 75Ω ◦ Low impedance detection threshold : 50 Ω -10 Ω / +20 Ω ◦ Open circuit threshold : 100 kΩ ± 10kΩ • **KTY84** ◦ 1 thermal sensor ◦ Thermal sensor current: 1 mA ◦ Range –20...200 °C (–4...392 °F) ◦ Accuracy ±4 °C (7.2 °F) for a temperature variation of 60 °C (140 °F) • **Water Level Sensor** ◦ Sensitivity: 0...1 MΩ, adjustable by software ◦ Water level sensor current: 0.3 mA...1 mA maximum ◦ Adjustable delay: 0...10 s

⚠⚠DANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION OR ARC FLASH

- Verify that the temperature sensors in the motor meet the PELV requirements.
- Verify that the motor encoder meets the PELV requirements.
- Verify that any other equipment connected via signal cables meets the PELV requirements.

Failure to follow these instructions will result in death or serious injury.

Signal interference can cause unexpected responses of the device and of other equipment in the vicinity of the device.

⚠WARNING

SIGNAL AND EQUIPMENT INTERFERENCE

- Install the wiring in accordance with the EMC requirements described in this document.
- Verify compliance with the EMC requirements described in this document.
- Verify compliance with all EMC regulations and requirements applicable in the country in which the product is to be operated and with all EMC regulations and requirements applicable at the installation site.

Failure to follow these instructions can result in death, serious injury, or equipment damage.

Control Cable Lengths

Control terminal Input/Output Cables		Maximum wires length depending on cable cross section (*)	
		1.5 mm² / AWG16	**0.5 mm² / AWG20**
Analog inputs AI1, AI2, AI3	voltage: 0 - 10 V	30 m / 98 ft	30 m / 98 ft
	current: 0 - 20 mA	3000 m / 9840 ft	1000 m / 3280 ft
Analog inputs AI2, AI3	PT100	30 m / 98 ft	10 m / 32 ft
	PT1000	300 m / 984 ft	100 m / 328 ft
	KTY84	300 m / 984 ft	100 m / 328 ft
	PTC	300 m / 984 ft	100 m / 328 ft
	Water level	3000 m / 9840 ft	1000 m / 3280 ft
Output supply 10V		30 m / 98 ft	30 m / 98 ft
Analog outputs AQ1, AQ2	voltage: 0 - 10 V	30 m / 98 ft	10 m / 32 ft
	current: 0 - 20 mA	3000 m / 9840 ft	1000 m / 3280 ft
Output power supply 24V	200 mA max.	300 m / 984 ft	100 m / 328 ft
Digital inputs DI1...DI6		3000 m / 9840 ft	1000 m / 3280 ft
Safe Torque Off inputs STOA, STOB		3000 m / 9840 ft	1000 m / 3280 ft
Control power supply input P24	24 V input	120 m / 390 ft	40 m / 130 ft

(*) Shorter cable lengths or smaller cable cross sections can be adjusted using linear interpolation with the values listed in the table. For example: maximum 10 m / 32 ft with 0.5 mm² / AWG20 and maximum 30 m with 1.5 mm² / AWG16 listed in the table, is equivalent to maximum 20 m / 65 ft with 1 mm² / AWG17.

Relay Contacts Wiring

Output Relay with Inductive AC Loads


General

The AC voltage source must be of overvoltage category II (OVC II) according to IEC 61800-5-1.

If it is not the case, an isolation transformer must be used.

Contactors with AC Coil

If controlled by a relay, a resistor-capacitor (RC) circuit must be connected in parallel to the coil of the contactor as shown on the diagram below:

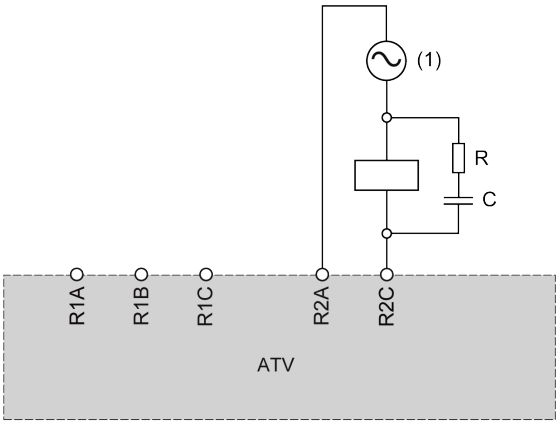

(1) AC 250 Vac maximum.

Schneider Electric AC contactors have a dedicated area on the housing to plug easily the RC device. Refer to the Motor control and protection components catalog MKTED210011EN available on se.com to find the RC device to be associated with the contactor used.

Example: With a 48 Vac source, contactors LC1D09E7 or LC1DT20E7 have to be used with LAD4RCE voltage suppression device.

Other Inductive AC Loads

For other inductive AC loads:


- Use an auxiliary contactor connected on the product to control the load.

  Example: with a 48 Vac source, auxiliary contactors CAD32E7 or CAD50E7 with LAD4RCE voltage suppression device.
- When using a third party inductive AC load, request the supplier to provide information on the voltage suppression device, in order to avoid overvoltage above 375 V during relay opening.

Output Relay with Inductive DC loads

Contactors with DC Coil

If controlled by a relay, a bidirectional transient voltage suppression (TVS) diode, also called transil, must be connected in parallel to the coil of the contactor as shown on the diagram below:

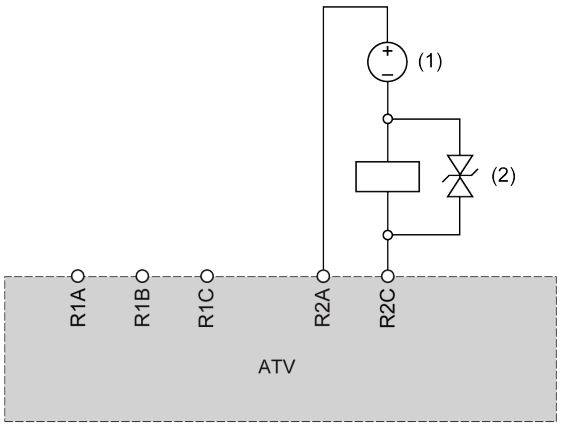

(1) DC 30 Vdc maximum.

(2) TVS diode

Schneider Electric contactors with DC coil include the TVS diode. No additional device is required.

Refer to the Motor control and protection components catalog MKTED210011EN available on se.com for more information.


Other Inductive DC Loads

Other inductive DC loads without embedded TVS diode must use one of the following voltage suppression device:

- A bidirectional TVS device as shown on the diagram above, defined by:
  - TVS break-down voltage greater than 35 Vdc,
  - TVS clamping voltage V(TVS) less than 50 Vdc
  - TVS peak power dissipation greater than load rated current, I(load) x V (TVS).

    Example: with I(load) = 0.9 A and V(TVS) = 50 Vdc, TVS peak power must be greater than 45 W
  - TVS average power dissipation greater than the value calculated by the following 0.5 x I(load) x V(TVS) x load time constant x number of operation per second.

    Example: with I(load) = 0.9 A and V(TVS) = 50 Vdc, load time constant = 40 ms (load inductance divided by load resistance) and 1 operation every 3 s, the TVS average power dissipation must be greater than 0.5 x 0.9 x 50 x 0.04 x 0.33 = 0.3 W.
- A fly-back diode as shown in the diagram below:

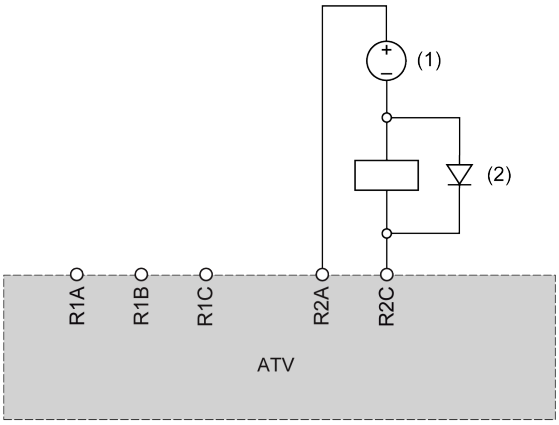

(1) DC 30 Vdc maxi.

(2) Flyback diode

The diode is a polarized device. The fly-back diode must be defined by:

- a reverse voltage greater than 100 Vdc,
- a rated current greater than two times the load rated current,
- a thermal resistance: junction to ambient temperature (in K/W) less than 90 / (1.1 x I(load)) to operate at maximum 60°C (140°F) ambient temperature.

  Example: with I(load) = 1.5 A, select a 100 V, 3 A rated current diode with a thermal resistance from junction to ambient less than 90 / (1.1 x 1.5) = 54.5 K/W.

Using a flyback diode, the relay opening time will be longer than with a TVS diode.

NOTE: Use diodes with leads for easy wiring and keep at least 1 cm (0.39 in.) of leads on each side of the case of the diode for a correct cooling.

Digital Inputs Wiring Depending on Sink / Source Switch Configuration

About the Switch

⚠WARNING

UNANTICIPATED EQUIPMENT OPERATION

- If the device is set to **SK** or **EXT**, do not connect the **0 V** terminal to ground or to protective ground.
- Verify that accidental grounding of digital inputs configured for sink logic, caused, for example, by damage to the signal cables, cannot occur.
- Follow all applicable standards and directives such as NFPA 79 and EN 60204 for proper control circuit grounding practices.

Failure to follow these instructions can result in death, serious injury, or equipment damage.


The switch is used to adapt the operation of the logic inputs to the technology of the programmable controller outputs. To access the switch, follow the Access to control Terminals procedure of the ATV600 or ATV900 Installation manual.

The switch is located below the control terminals at the control block, page 99.


- Set the switch to Source **SRC** (factory setting) if using PLC outputs with PNP transistors.
- Set the switch to **EXT** if using PLC outputs with NPN transistors.

Wiring With Use of the Output Power Supply for the Digital Inputs

Switch set to **SRC** (Source) position

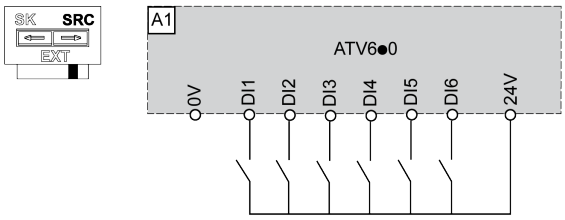

Switch set to **SK** (Sink) position

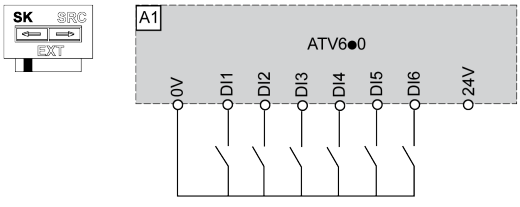

Wiring With Use of an External Power Supply for the Digital Inputs

⚠⚠DANGER


ELECTRIC SHOCK CAUSED BY INCORRECT POWER SUPPLY UNIT

The +24 Vdc supply voltage is connected with many exposed signal connections in the drive system.


- Use a power supply unit that meets the PELV (Protective Extra Low Voltage) requirements.

Failure to follow these instructions will result in death or serious injury.

Switch set to **EXT** (Sink External) position **without functional isolation** on digital inputs

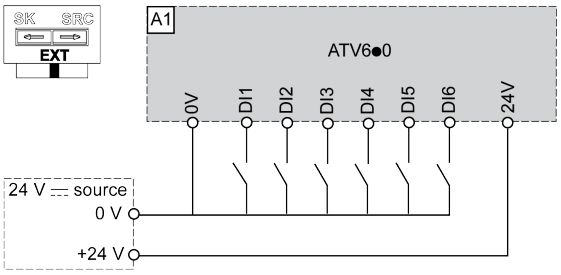

Switch set to **SRC** (Source) position

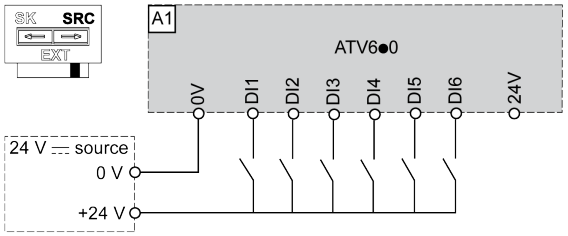


Option "Logic and Analog I/O Card"

What’s in This Chapter


Control terminals at the expansion card 112
Specification of the Control Terminals 113

Control terminals at the expansion card

Option to expand the control inputs and control outputs of the control block. The expansion card contains two analog inputs, six digital inputs and two digital outputs.

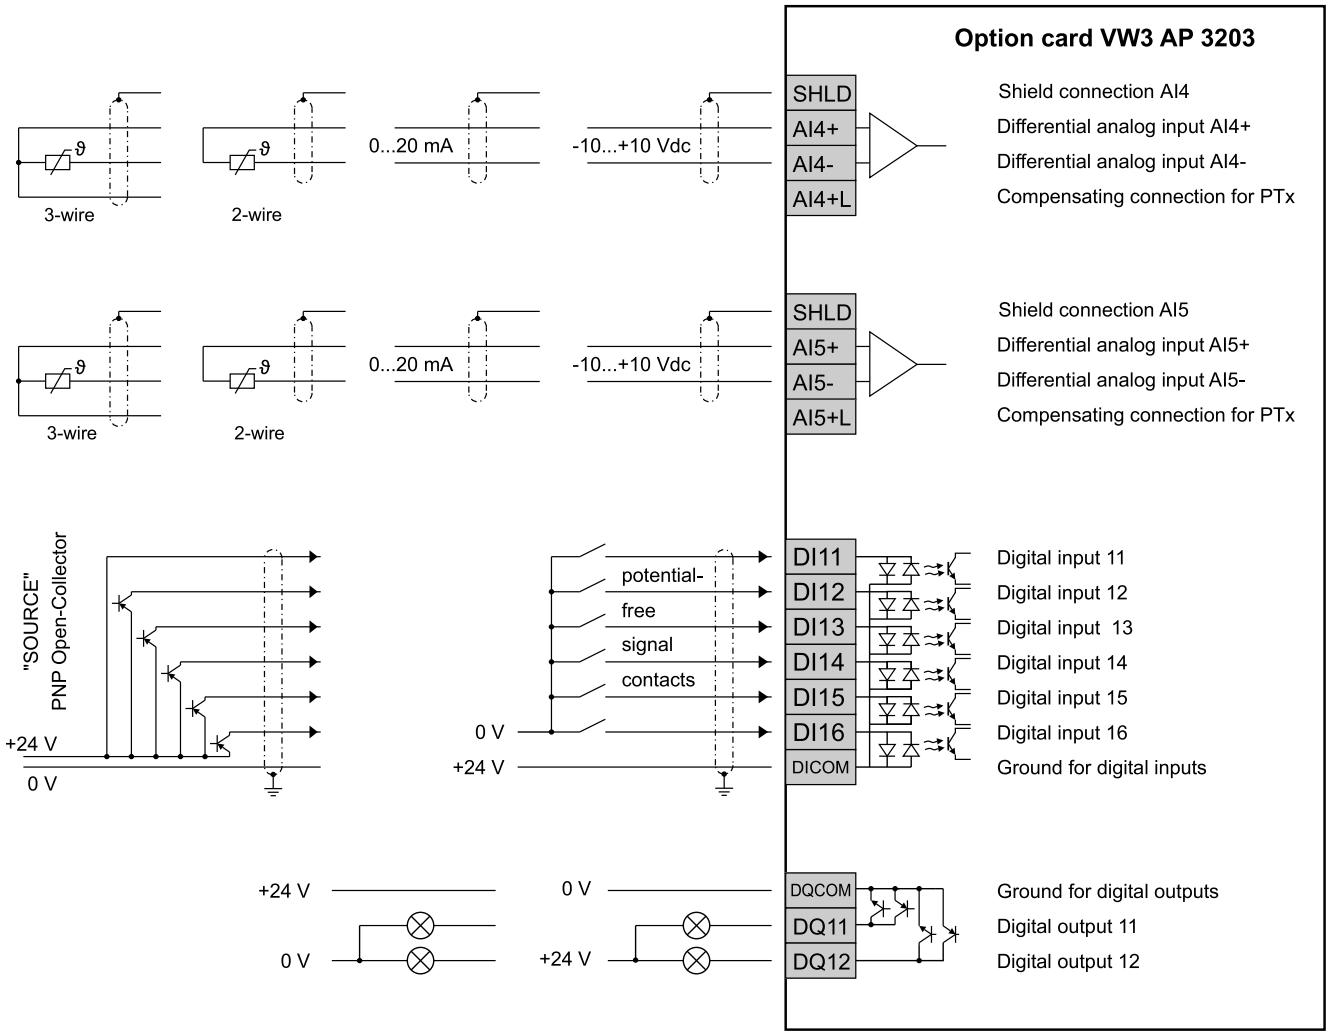

Specification of the Control Terminals

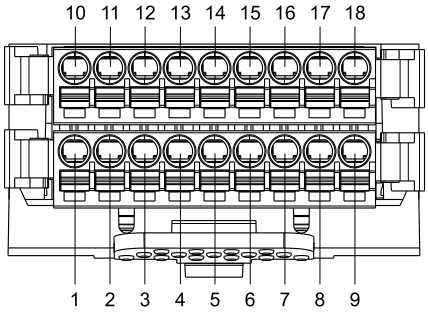

Spring terminals

Max. cable cross section: 1 mm² (AWG 16)

Strip length: 10 mm

Max. cable length AI●, AQ●, DI●, DQ●: 50 m (164 ft) shielded

Pin	Terminal	Description	Specification
1	SHLD	Shield connection for AI4	You can select between voltage, current, Pt100, Pt1000, KTY84 and PTC measurement by software configuration. **Differential voltage at the input circuit:** • Range: -10 V DC…+10 V DC • Impedance: 20 kΩ • Resolution: 11 bits + 1 sign bit • Accuracy: ±0.6 % for a temperature variation of 60 °C • Linearity ±0.15 % of maximum value **Current measurements:** • Range: freely programmable from 0…20 mA • Impedance: 250 Ω • Resolution: 12 bits • Accuracy: ±0.6 % for a temperature variation of 60 °C • Linearity ±0.15 % of maximum value • Sampling period: 1 ms **PTx measurement:** Pt100, Pt1000, PTC or KTY84 configurable by software • **Pt100** ◦ 1 or 3 temperature sensors in series per analog input (configurable by software) ◦ Temperature sensor current: max. 7.5 mA ◦ Range -20…200 °C ◦ Accuracy: ±3°C for a temperature variation of 60 °C • **Pt1000, KTY84** ◦ 1 (Pt1000, KTY84) or 3 (Pt1000) temperature sensors in series per analog input (configurable by software) ◦ Temperature sensor current: max. 1 mA ◦ Range -20…200 °C ◦ Accuracy: ±3 °C for a temperature variation of 60 °C • **PTC** ◦ 3 or 6 temperature sensors in series ◦ Temperature sensor current: max. 1 mA ◦ Nominal value: < 1.5 kΩ ◦ Overheat trigger threshold: 3 kΩ ◦ Overheat reset threshold: 1.8 kΩ ◦ Short-circuit detection threshold < 50 Ω ◦ Wire break detection: > 100 kΩ
2	AI4+	**Differential analog input 4** Depending on software configuration: • Measurement of differential voltage • PTx measurement • 0…20 mA measurement • Reference potential AI4- for AI4+	
3	AI4-		
4	AI4+L	Compensating connection for one temperature sensor Pt100, Pt1000 or KTY84 in 3-wire-design	
5	SHLD	Shield connection for AI5	
6	AI5+	**Differential analog input 5** Depending on software configuration: • Measurement of differential voltage • PTx measurement • 0…20 mA measurement • Reference potential AI5- for AI5+	
7	AI5-		
8	AI5+L	Compensating connection for one temperature sensor Pt100, Pt1000 or KTY84 in 3-wire-design	
9	DQ12	Digital output 12	The 24 V DC digital outputs DQ comply with the standard IEC/EN 61131-2. • Logic type selected by DQCOM wiring • Output voltage: ≤30 V DC • Switching capability: ≤100 mA • Voltage drop at 100 mA load: ≤3 V DC • Response time: 1 ms

Pin	Terminal	Description	Specification
10	DICOM	Reference potential for the digital inputs	The 24 V DC digital inputs DI are galvanically isolated via optocoupler and comply with the standard IEC/EN 61131-2. • Logic type selected by DICOM wiring • Positive logic (Source): state 0 when ≤5 V DC, state 1 when ≥11 V DC • Negative logic (Sink): state 0 when ≥16 V DC, state 1 when ≤10 V DC • Maximum voltage: ≤30 V DC • Input current (typically): 2.5 mA • Sampling period: 1 ms
11	DI11	Digital input 11	
12	DI12	Digital input 12	
13	DI13	Digital input 13	
14	DI14	Digital input 14	
15	DI15	Digital input 15	
16	DI16	Digital input 16	
17	DQCOM	Reference potential for the digital outputs	The 24 V DC digital outputs DQ comply with the standard IEC/EN 61131-2. • Logic type selected by DQCOM wiring • Output voltage: ≤30 V DC • Switching capability: ≤100 mA • Voltage drop at 100 mA load: ≤3 V DC • Response time: 1 ms
18	DQ11	Digital output 11	

⚠⚠DANGER

HAZARD OF ELECTRIC SHOCK, EXPLOSION OR ARC FLASH

- Verify that the temperature sensors in the motor meet the PELV requirements.
- Verify that the motor encoder meets the PELV requirements.
- Verify that any other equipment connected via signal cables meets the PELV requirements.

Failure to follow these instructions will result in death or serious injury.

Signal interference can cause unexpected responses of the device and of other equipment in the vicinity of the device.

⚠WARNING

SIGNAL AND EQUIPMENT INTERFERENCE

- Install the wiring in accordance with the EMC requirements described in this document.
- Verify compliance with the EMC requirements described in this document.
- Verify compliance with all EMC regulations and requirements applicable in the country in which the product is to be operated and with all EMC regulations and requirements applicable at the installation site.


Failure to follow these instructions can result in death, serious injury, or equipment damage.

Option "Relay Output Card"


What’s in This Chapter

Control terminals at the expansion card 116
Specification of the Control Terminals of the "Relay Output Card" 116

Control terminals at the expansion card

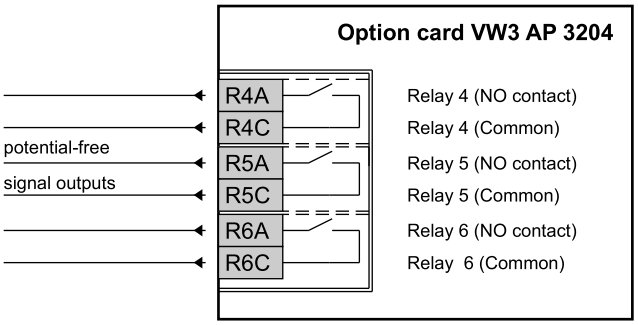

Specification of the Control Terminals of the "Relay Output Card"

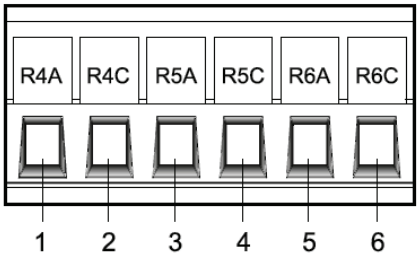

Spring terminals

Max. cable cross section: 1.5 mm² (AWG 16)

Maximum tightening torque: 0.5 Nm (4.4 lb.in)

Minimum cable cross section: 0.75 mm² (AWG 18)

Strip length: 10 mm

Pin	Terminal	Description	Specification
1	R4A	N. O. contact	**Programmable relay outputs R4, R5 and R6:** • Minimum switching capacity: 5 mA for 24 Vdc • Maximum switching capacity on resistive load: 5 A for 250 Vac (OVC II) and 30 Vdc • Maximum switching capacity on inductive load: 2 A for 250 Vac (OVC II) and 30 Vdc Inductive load must be equipped with a voltage surge suppression device according to AC or DC operation with total energy dissipation greater than the inductive energy stored in the load. Refer to sections Output Relay with Inductive AC Loads, page 106 and Output Relay with Inductive DC loads, page 107. • Refresh time according to the relay output of the drive in which the relay output card is installed. • Service life: ◦ 70,000 switching cycles at 5 A and resistive load ◦ 100,000 switching cycles at 4 A and resistive load ◦ 300,000 switching cycles at 2 A and resistive load ◦ 700,000 switching cycles at 0.5 A and resistive load
2	R4C		
3	R5A	N. O. contact	
4	R5C		
5	R6A	N. O. contact	
6	R6C		

Option Terminals

What’s in This Chapter


Control Terminals at the Option Terminals 118
Specification of the Option control terminals 119

Control Terminals at the Option Terminals

The option terminals X200 and X205 are built-in. They are designed as pluggable terminals.


Spring terminals pluggable


Max. cable cross section: 2.5 mm² [AWG 12]
Min. cable cross section: 0.25 mm² [AWG 26]
Strip length: 10 mm

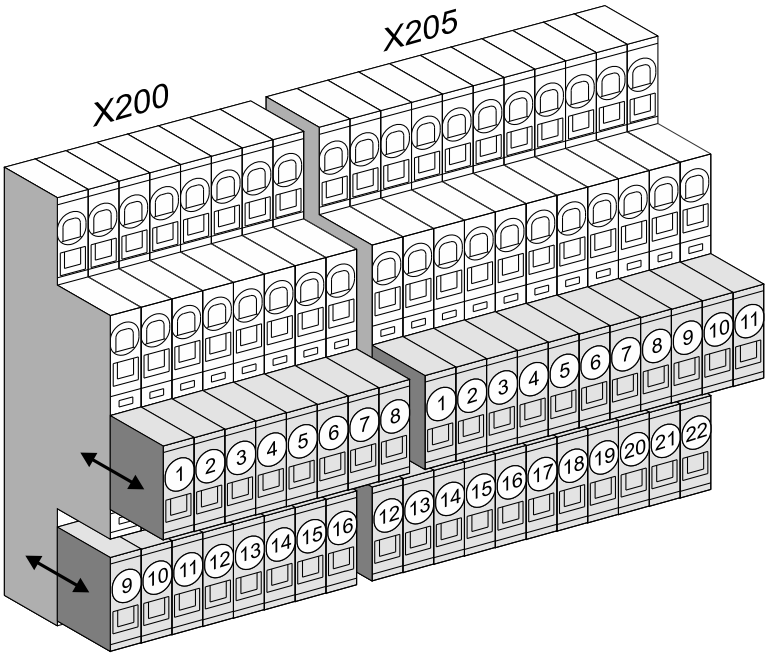

Specification of the Option control terminals

As shown in the following illustration, there are following connections available for the customer depending on the chosen options.

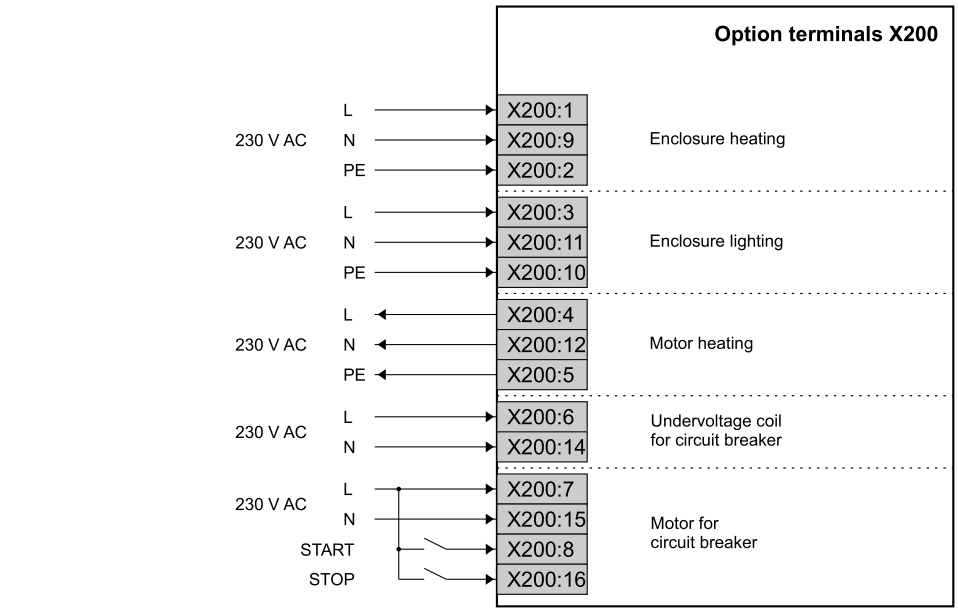

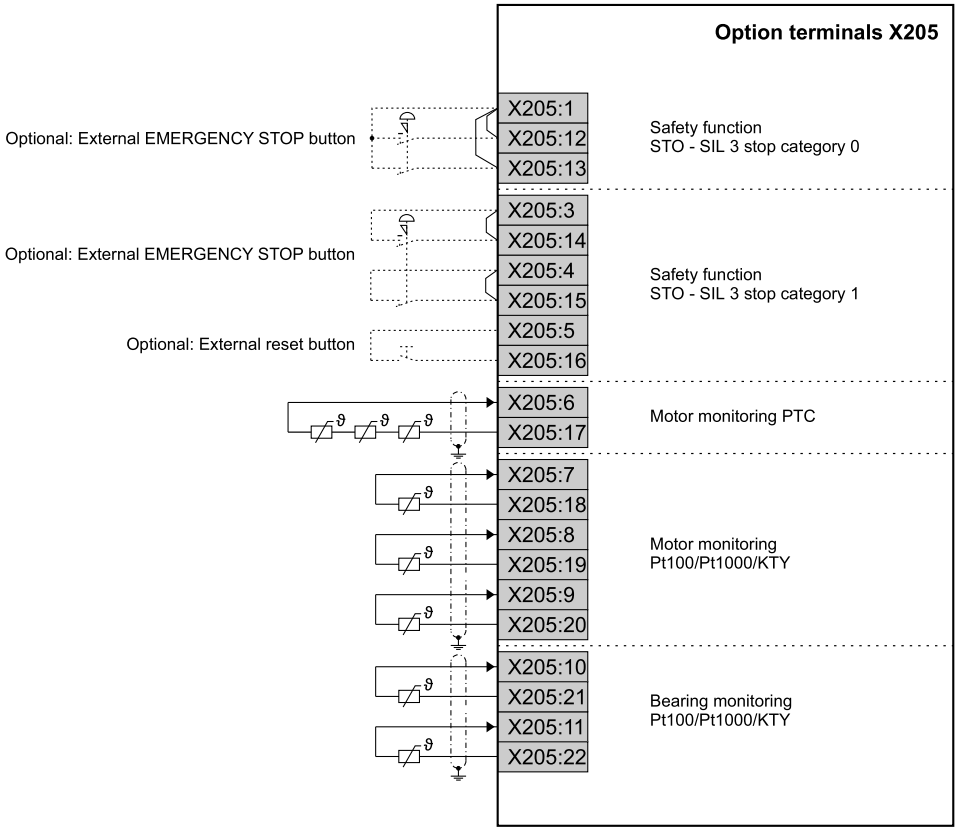

Customizations

What’s in This Part

Enclosure Options 121
Control Options 126
I/O Expansion Cards 128
Communication Cards 130
Functional Safety 133
Display Options 135
Motor Options 137
Mains Supply 141
EcoStruxure Asset Advisor 146
Documentation / Packaging 148

Enclosure Options

What's in This Chapter

General Information 122
Increased Protection Degree IP54 122
Enclosure Plinth for Basic Device 123
Connection Enclosure Cable from Top 123
Connection Enclosure Cable from Bottom 123
Enclosure Lighting 124
Enclosure Heating 124
Modified Wiring Colors 125

General Information

During manufacturing of the Altivar Process Drive Systems already all customizations are considered. In addition, parameter adjustments are carried out and permanently stored as factory setting, if required.

This chapter contains customizations, which we have already predefined as a result of our many years of experience in order to cover the essential requirements of our customers. But in many cases a unique system solution is necessary due to the variety of applications and requirements.

Your Drive Systems Tendering Team is looking forward to your specific request.

Increased Protection Degree IP54

For operation with rough ambient conditions the enclosure can be designed in protection degree IP54.


So when the doors are closed the Altivar Process Drive System is protected against:

- Touching live electrical parts
- Harmful dust accumulation inside
- Penetration of spray water from all directions

Typically, IP54 enclosure units are installed production halls and manufacturing sites, where heavy dirt accumulation is expected.

Our solution contains a clearly specified and tested cooling system with a separate cooling air channel which provides highest reliability.

Via this separated cooling air channel about 90 % of the heat losses are exhausted. The interior of the enclosure is cooled via fans in the enclosure door.

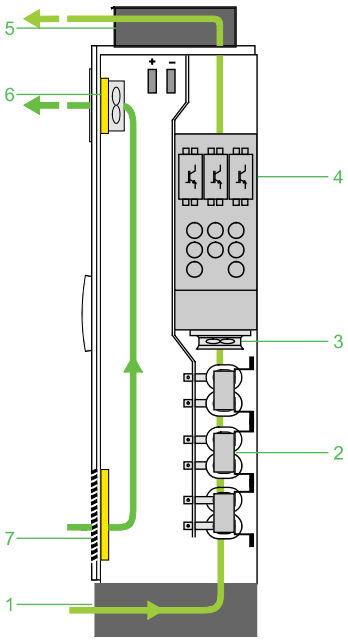

In case of increased protection degree IP54 with separate air channel the cooling air inflow for the power part takes place through the floor and the air outlet through the enclosure roof.

The control part is cooled by filter fans in the enclosure door.

1 Cooling air for power part (via enclosure plinth)

2...4 Power components (different for supply units and inverter units)

5 Air outlet through metal grid with splash water protection

6 Air outlet (with filter mat) with fans for control part


7 Air inflow grid (with filter mat) for control part

Air inflow temperature: -10...+50 °C

(below 0 °C with additional enclosure heating, above +40 ° C with derating)

NOTE: The additional enclosure plinth increases the enclosure by 200 mm to a total height of 2350 mm.

Enclosure Plinth for Basic Device

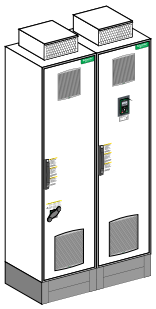


For adapting to the local conditions or for better protection of the enclosure against wet soil, the enclosure can be raised with a plinth (color: RAL 7022) by 200 mm.

So the enclosure height is increased to a total height of 2350 mm.

NOTE: At the customization "Increased protection degree IP54" the enclosure is already equipped with an enclosure plinth as standard.

Connection Enclosure Cable from Top

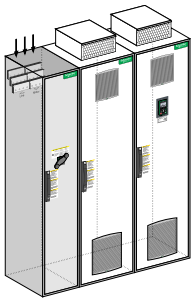


This separate connection enclosure makes it possible to insert and connect the mains cables and motor cables from the top of the enclosure.

The separated connecting enclosure contains all power terminals and the mains disconnection (e.g. main switch), which makes a voltage disconnection of the basic device during maintenance possible.

Furthermore, the connecting enclosure provides enough space for additional customizations.

NOTE: The additional connecting enclosure increases the total width of the enclosure.

Connection Enclosure Cable from Bottom

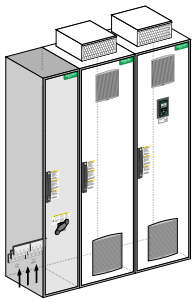


This separate connection enclosure makes it possible to insert and connect the mains cables and motor cables from the bottom of the enclosure.

The separated connecting enclosure contains all power terminals and the mains disconnection (e.g. main switch), which makes a voltage disconnection of the basic device during maintenance possible.

Furthermore, the connecting enclosure provides enough space for additional customizations.

NOTE: The additional connecting enclosure increases the total width of the enclosure.

Enclosure Lighting

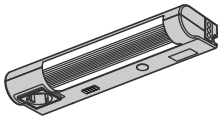

In order to make maintenance easier, the enclosure can be equipped with a lighting, which is switched on when opening the enclosure door.

The lighting is externally supplied and so it is also available at switched off mains supply. Furthermore, a power socket according to VDE standard (230 V / 50 Hz, 2 A) is located on the lighting to operate smaller consumers on-site.

NOTE: The additional power supply at terminals X200 has to be provided by the user.

Rated voltage:	230 V
Rated frequency:	50/60 Hz
Rated power:	500 VA

This option requires an additional external 230 V power supply with overvoltage category 1 or 2 (according to IEC/UL 61800-5-1) connected to terminals X200.


⚠⚠DANGER

HAZARD OF ELECTRIC SHOCK

Verify that the external power supply complies with all national and local electrical code requirements.

Failure to follow these instructions will result in death or serious injury.

Enclosure Heating

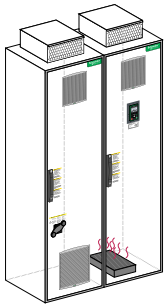

This customization is used to heat the enclosure in order to avoid frost and condensation at an ambient temperature up to -10°C. The enclosure heating is externally supplied, so the enclosure can be also heated when mains supply is switched off.

NOTE: The additional power supply at terminals X200 has to be provided by the user.

Rated voltage:	230 V
Rated frequency:	50/60 Hz
Rated power:	400...800 VA

This option requires an additional external 230 V power supply with overvoltage category 1 or 2 (according to IEC/UL 61800-5-1) connected to terminals X200.


⚠⚠DANGER

HAZARD OF ELECTRIC SHOCK

Verify that the external power supply complies with all national and local electrical code requirements.

Failure to follow these instructions will result in death or serious injury.

Modified Wiring Colors




This option contains modified wiring colors as well as red, white and blue heat shrink tubes at the power cables.

Control Options

What’s in This Chapter


Key Switch "local / remote" 127
Ethernet Port on Front Door 127

Key Switch "local / remote"

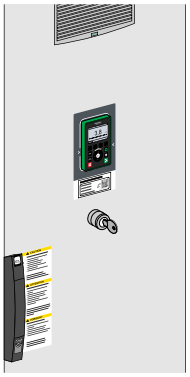

The key switch "local / remote" allows to switch between local operation (via the graphical operating panel) or remote control (terminals or bus). The switch can be only operated with a key and so it can be only switched by authorized personnel.

Ethernet Port on Front Door

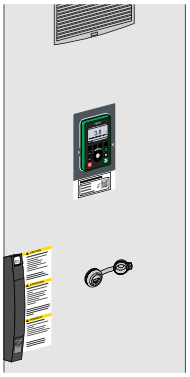

The Ethernet port in the enclosure door allows access to the frequency inverter without opening the enclosure door. The plug can be closed with a dust protection cap.

I/O Expansion Cards

What's in This Chapter

Expansion Card With Additional Inputs / Outputs 129
Expansion Card With Relay Outputs 129


Expansion Card With Additional Inputs / Outputs



Expansion card for additional analog and digital inputs and outputs (6 digital inputs, 2 digital outputs, 2 analog inputs)

You will find further information at chapter Option "Logic and Analog I/O Card", page 111.

Expansion Card With Relay Outputs

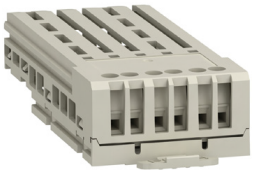

Expansion card with three additional relay outputs

You will find further information at chapter Option "Relay Output Card", page 115.

Communication Cards

What's in This Chapter

Communication Card Modbus TCP or EtherNet IP 131
Communication Card CANopen Daisy Chain 131
Communication Card CANopen SUB-D9 131
Communication Card CANopen With Spring Terminals 131
Communication Card DeviceNet 131
Communication Card Profibus DP 132
Communication Card PROFINET 132

You will find detailed information in the respective documentation. See listing under chapter Related Documents.

Communication Card Modbus TCP or EtherNet IP



Dual port option card for control of the inverter via Modbus TCP or EtherNet/IP

Communication Card CANopen Daisy Chain



Option card for control of the inverter via CANopen Daisy Chain

Communication Card CANopen SUB-D9




Option card for control of the inverter via CANopen with SUB-D port.

Communication Card CANopen With Spring Terminals



Option card for control of the inverter via CANopen with spring terminals

Communication Card DeviceNet

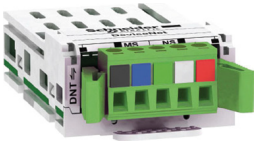


Option card for control of the inverter via DeviceNet

Communication Card Profibus DP



Option card for control of the inverter via Profibus DP V1

Communication Card PROFINET

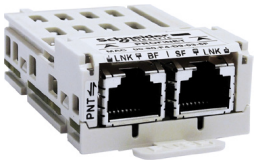

Option card for control of the inverter via PROFINET

Functional Safety

What's in This Chapter

Safe Torque Off (STO) 134
SIL 3 Stop Category 0 / Performance Level PL e 134
SIL 3 Stop Category 1 / Performance Level PL e 134


Safe Torque Off (STO)

The Altivar Process is equipped with the safety function "Safe Torque Off STO" according to ISO 13849-1, IEC/EN 61508, IEC/EN 60204-1, which helps to prevent any unintended start-up of the motor.

- Inputs $\overline{\text{STOA}}$ and $\overline{\text{STOB}}$ directly at the control terminals of the control block. This function fulfills, when correctly wired, the machine standard ISO 13849-1, Performance level PL e, the IEC/EN 61508 Safety integrity level SIL 3 standard for functional safety and the power drive system standard IEC/EN 61800-5-2.
- Customization SIL3, stop category 0 / PL e
  The triggering of the safety function leads to a coast down of the drive and helps to prevent an unintended restart.
- Customization SIL3, stop category 1 / PL e
  The triggering of this function starts a controlled deceleration, shuts down the drive after the set time and helps to prevent an unintended restart.

NOTE: You will find further information in the Safety Function Manual (EAV64334).


SIL 3 Stop Category 0 / Performance Level PL e

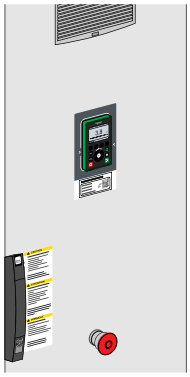

Via an EMERGENCY STOP button in the enclosure door or further implemented, external monitoring equipment, the torque at the motor can be switched off according SIL 3 stop category 0 / performance level PL e.

The triggering of the safety function leads to a coast down of the drive and helps to prevent an unintended restart.

SIL 3 Stop Category 1 / Performance Level PL e

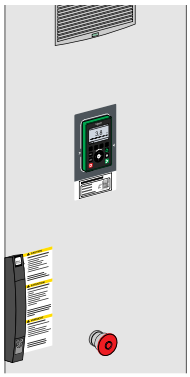

Via an EMERGENCY STOP button in the enclosure door or further implemented, external monitoring equipment, the torque at the motor can be switched off according SIL 3 stop category 1 / performance level PL e.


The triggering of this function starts a controlled deceleration, shuts down the drive after the set time and helps to prevent an unintended restart.

Display Options

What's in This Chapter

Front Display Module (FDM) 136
Indicator Lamps on Front Door 136

Front Display Module (FDM)

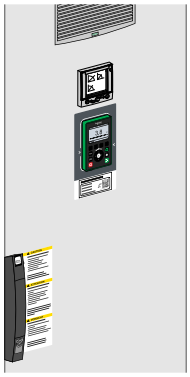


A display element mounted in the enclosure door enables clear indication of real-time values like:


- Indication of mains currents (3x)
- Mains voltages (3x phase voltages, 3x phase-to-phase voltages)
- Mains power

These values can be indicated graphically or digital.

The display element is provided with backlight for increased readability.

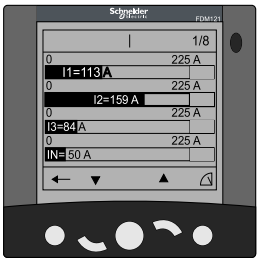

Indicator Lamps on Front Door

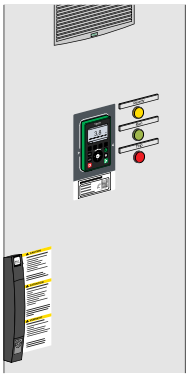

For quick, optical diagnostics of the actual operating state from a greater distance, the enclosure can be equipped with indicator lamps.

The lamps show following operating states:


Operating state	Indicator lamp	Labeling
Ready	Yellow	READY
Operation	Green	RUN
Detected fault	Red	TRIP

Motor Options

What's in This Chapter

Motor Monitoring PTC 138
Motor Monitoring PTC with ATEX Certificate 138
Motor monitoring Pt100/Pt1000/KTY 138
Bearing Monitoring Pt100/Pt1000/KTY 139
dv/dt Filter Choke 150 m 139
dv/dt Filter Choke 300 m 139
Motor Heating 140

Motor Monitoring PTC

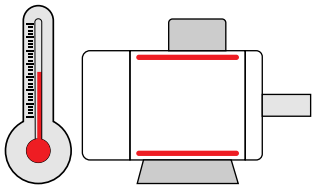


If the motor is equipped with integrated thermistor sensors to help to protect against thermal overload, they can be directly connected to a thermistor relay inside the Altivar Process Drive System.

If the frequency inverter detects an overtemperature at the motor, the drive stops the motor and generates an error message at the display. This operating state is also forwarded to the status relays and to the fieldbus.

NOTE: When protective separation of the thermistor sensors in the motor cannot be guaranteed or in case of long motor cables, this option is highly recommended.

Motor Monitoring PTC with ATEX Certificate

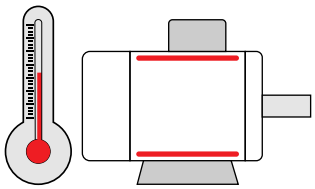

The motor monitoring PTC with ATEX certificate is used to monitor the thermistor sensors of motors which are installed in hazardous area (explosive atmosphere).

If the frequency inverter detects the overtemperature at the motor, the drive stops the motor and generates an error message at the display. This operating state is also forwarded to the status relays and to the fieldbus. The monitoring relay additionally triggers a safe shut-down of the drive.

This equipment has been designed to operate outside of any hazardous location. Only install this equipment in zones known to be free of a hazardous atmosphere.


⚠DANGER

POTENTIAL FOR EXPLOSION

Install and use this equipment in non-hazardous locations only.

Failure to follow these instructions will result in death or serious injury.

Motor monitoring Pt100/Pt1000/KTY

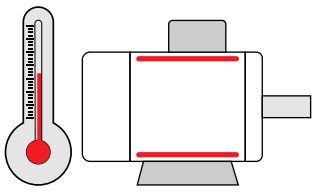


If the motor is equipped with integrated temperature sensors (Pt100, Pt1000, KTY 83/84) in the winding to help to protect against thermal overload, they can be directly connected to the relay inside the Altivar Process Drive System.

If the set temperature at the motor is exceeded, a warning message is generated. When the temperature is further rising over a set value, the drive is stopped and an error message is generated. The operating states are also forwarded to the status relays and to the fieldbus.

NOTE: When protective separation of the thermistor sensors in the motor cannot be guaranteed or in case of long motor cables, this option is highly recommended.

Bearing Monitoring Pt100/Pt1000/KTY

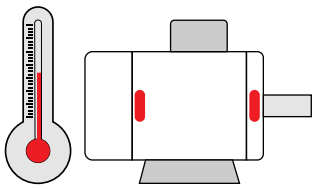


If the motor is equipped with integrated temperature sensors (Pt100, Pt1000, KTY 83/84) in the bearings to help to protect against thermal overload, they can be directly connected to the relay inside the Altivar Process Drive System.

If the set temperature at the motor is exceeded, a warning message is generated. When the temperature is further rising over a set value, the drive is stopped and an error message is generated. The operating states are also forwarded to the status relays and to the fieldbus.

NOTE: When protective separation of the thermistor sensors in the motor cannot be guaranteed or in case of long motor cables, this option is highly recommended.

dv/dt Filter Choke 150 m

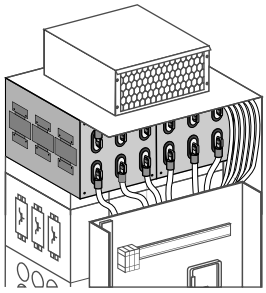


The use of the customization dv/dt filter choke 150 m has significant advantages concerning the operation of the drive:

- Decrease of the dv/dt and peak voltage load of the motor
- Prevention of common mode bearing currents in the motor – especially important at high power
- Great reduction of the influences to other cables – important if the separate laying of motor cables is not possible
- In case of long motor cables up to 150 m shielded or up to 250 m unshielded
- dv/dt filter choke 150 m can be installed without enlarged enclosure width.

NOTE: You will find further information about long motor cables under chapter Length of Motor Cables, page 87.

dv/dt Filter Choke 300 m

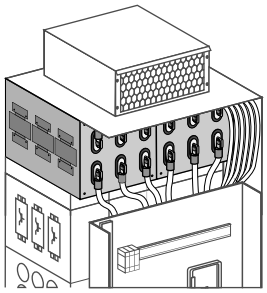


The use of the customization dv/dt filter choke 300 m has significant advantages concerning the operation of the drive:

- Decrease of the dv/dt and peak voltage load of the motor
- Prevention of common mode bearing currents in the motor – especially important at high power
- Great reduction of the influences to other cables – important if the separate laying of motor cables is not ensured
- In case of long motor cables up to 300 m shielded or up to 500 m unshielded
- dv/dt filter choke 300 m can be installed without enlarged enclosure width.

NOTE: You will find further information about long motor cables under chapter Length of Motor Cables, page 87.

Motor Heating

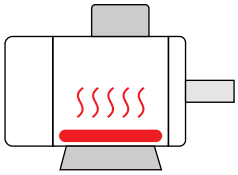


The motor standstill heating is used to avoid condensate and frost damages at standstill of the motors in cold environment. It is activated when the motor is shut down.

Mains Supply

What's in This Chapter


Circuit Breaker 142
Undervoltage Coil for Circuit Breaker 230 V 142
Motor for Circuit Breaker 230 V 143
Automated Mains Disconnect 143
12-pulse Supply 144

Circuit Breaker




The circuit breaker is used for mains disconnection instead of the main switch. It is operated by a handle in the enclosure door.

The circuit breaker can be optionally equipped with an undervoltage coil and motor.

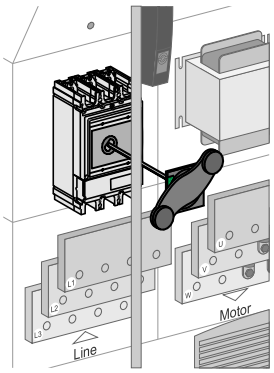

Undervoltage Coil for Circuit Breaker 230 V

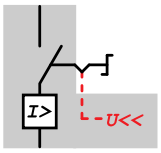

When there is no voltage at the undervoltage coil, the circuit breaker switches off.
The undervoltage coil is built into the circuit breaker and is wired to the option terminals.


Specification of the control terminals

X200: 6/14	External control voltage 220…240 V AC 50/60 Hz

NOTE:

- Only when control voltage is applied, the circuit breaker can be switched on manually.
- You will find further information about the topic wiring under chapter Option Terminals, page 117.

Motor for Circuit Breaker 230 V

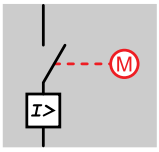

Remote control of the circuit breaker via control commands is possible by means of this motor drive. The motor drive is built into the circuit breaker and is wired to the option terminals.

Specification of the control terminals

X200: 7/15	External control voltage 220…240 V AC 50/60 Hz
X200: 8	Start request
X200: 16	Stop request

Specification of the motor drive:

External control circuit voltage:

- 230 V AC ± 5% 50/60 Hz

Reaction time:

- < 80 ms when closing
- < 600 ms when opening


Power input:

- ≤ 500 VA when closing
- ≤ 500 VA when opening

NOTE:

- At this customization no handle for the circuit breaker is possible.
- You will find further information about the topic wiring under chapter Option Terminals, page 117.
- You will find further information about the topic switching rate under chapter Switching Rate, page 36.

Automated Mains Disconnect

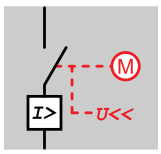

With the automated mains disconnect the Altivar Process Drive System is autonomously disconnected from the mains in case of a stop request, a detected fault or a safety disconnection via STO. The control voltage still remains. When a start request is given, the mains voltage is automatically connected again.

The control voltage is tapped upstream to the circuit breaker. So an additional main switch (for the control voltage) is integrated for total disconnection of the Altivar Process Drive System.

The automated mains disconnect contains following components:

- Circuit breaker with undervoltage coil and motor
- Timer module for delayed triggering of the undervoltage coil (200 ms)
- Main switch for control voltage

NOTE: Observe the maximum switching rate under chapter Switching Rate, page 36.

12-pulse Supply

The ATV660 frequency inverters can be equipped with parallel input rectifiers for 12-pulse rectification on request.

The supply results from a separate transformer with two out-of-phase secondary windings (e.g. superimposing transformer Yy6 Yd5).


Due to the lower tolerances of superimposing transformer in zig-zag-connection you can assume that the output current is approximately 7 % lower.

Example: For 90 kW instead of 2 x 90 A at 400 V only 2 x 84 A.

If the existing mains distortion is mainly caused by frequency inverters with normal 6-pulse-circuit, we highly recommend a superimposing transformer in zig-zag-connection (± 15° phase shift at each secondary windings e.g. Yy1130 Yy0030).

On the main side of the transformer the 5th and 7th current harmonics are practically non-existent as they have been cancelled by the shifted transformer windings.

Due to the internal circuit structure it is possible to operate a single frequency inverter as well as several frequency inverters in parallel at one transformer.

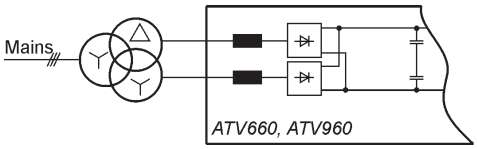

The following specifications must be kept:

Transformer:

- Converter transformer for 12-pulse supply with half-controlled rectifier bridges in a common voltage DC link.

• Recommended design:	Superimposing
• Nominal voltage at the primary side:	According to the application
• Voltage adaptation at the primary side:	+5 % / +2.5 % / 0 / -2.5 % / -5 %
• Nominal output current:	See the following table
• Current harmonics at the secondary side:	See the following table
• Nominal output voltage (= no-load voltage):	See the following table
• Tolerance of the secondary voltages to each other:	< 0.3 % (< 0.1 %) of U_{NOM}
• Short-circuit voltage:	See the following table
• Tolerance of the relative short-circuit voltage:	±10 % of u_{SC-NOM}
• Tolerance of the relative short-circuit voltage between both secondary windings:	< 5 % (< 2 %) of u_{SC-NOM}
• Further specifications:	According to the application
• Tolerance for unbalance of phase-shift:	(±0.5°)

Mains:

- Allowed mains distortion: THD(u) < 8 %
- Max. single harmonic (5.): < 5 %

( ) Values in brackets for transformer in zig-zag-connection (±15° phase shift at both secondary windings e.g. Yy1130 Yy0030)

Recommended values for dimensioning a "12-pulse transformer"

Inverter power [kW]	Transformer			Inverter power [hp]	Transformer				
	Output current				Output current		Short circuit voltage	Harmonics	
	400 V	500 V	690 V		480 V	600 V		Secondary (THDi LV)	Primary (THDi HV)
90	2x 90 A	2x 70 A	2x 60 A	**125**	2x 80 A	2x 65 A	4 %	< 40 %	≤12 %
110	2x 110 A	2x 80 A	2x 65 A	**150**	2x 95 A	2x 75 A	4 %	< 42 %	≤12 %
132	2x 130 A	2x 95 A	2x 75 A	**200**	2x 125 A	2x 115 A	4 %	< 42 %	≤12 %
160	2x 155 A	2x 120 A	2x 90 A	**250**	2x 155 A	2x 140 A	4 %	< 42 %	≤12 %
200	2x 190 A	2x 145 A	2x 120 A	**300**	2x 185 A	2x 160 A	4 %	< 42 %	≤12 %
250	2x 240 A	2x 180 A	2x 145 A	**400**	2x 245 A	2x 200 A	4 %	< 42 %	≤12 %
315	2x 300 A	2x 230 A	2x 180 A	**500**	2x 305 A	2x 250 A	4 %	< 42 %	≤12 %
355	2x 340 A	2x 250 A	2x 210 A	**550**	2x 330 A	2x 275 A	4 %	< 42 %	≤12 %
400	2x 380 A	2x 285 A	2x 230 A	**600**	2x 365 A	2x 290 A	4 %	< 40 %	≤12 %
450	2x 440 A	2x 340 A	2x 260 A	**650**	2x 400 A	2x 320 A	4 %	< 40 %	≤12 %
500	2x 490 A	2x 385 A	2x 285 A	**700**	2x 420 A	2x 340 A	6 %	< 33 %	≤10 %
560	2x 550 A	2x 440 A	2x 320 A	**800**	2x 480 A	2x 395 A	6 %	< 33 %	≤10 %
630	2x 610 A	2x 490 A	2x 365 A	**900**	2x 540 A	2x 430 A	6 %	< 33 %	≤10 %
710	2x 680 A	2x 540 A	2x 420 A	**1000**	2x 600 A	2x 480 A	6 %	< 33 %	≤10 %
800	2x 770 A	2x 610 A	2x 465 A	**1100**	–	2x 540 A	6 %	< 33 %	≤10 %
900	2x 860 A	2x 685 A	2x 525 A	**1250**	–	2x 590 A	6 %	< 33 %	≤10 %
1000	2x 940 A	2x 770 A	2x 570 A	**1400**	–	2x 660 A	6 %	< 33 %	≤10 %
1100	2x 1040 A	2x 840 A	2x 620 A	**1600**	–	2x 755 A	6 %	< 33 %	≤10 %
1200	2x 1110 A	2x 900 A	2x 665 A	**1700**	–	2x 790 A	6 %	< 33 %	≤10 %
1300	2x 1200 A	2x 980 A	2x 725 A	**1900**	–	2x 885 A	6 %	< 33 %	≤10 %
1400	2x 1300 A	2x 1050 A	2x 780 A	**2000**	–	2x 930 A	6 %	< 33 %	≤10 %
1500	–	2x 1120 A	2x 840 A	**2100**	–	2x 980 A	6 %	< 33 %	≤10 %
1800	–	2x 1330 A	2x 1000 A	**2200**	–	2x 1020 A	6 %	< 33 %	≤10 %
2000	–	–	2x 1100 A	**2500**	–	2x 1150 A	6 %	< 33 %	≤10 %
2100	–	–	2x 1150 A	–	–	–	6 %	< 33 %	≤10 %
2400	–	–	2x 1300 A	–	–	–	6 %	< 33 %	≤10 %

Recommended output voltage for the transformer


The nominal output voltage of a transformer is specified at no load operation. Therefore this value should be 3...5 % higher than the rated voltage of the drive.

Inverter	Transformer output voltage phase / phase (no load)						
	Nominal voltage						
	380 V	400 V	440 V	480 V	500 V	600 V	690 V
400 V range	400 V	425 V	460 V	500 V	–	–	–
690 V range	–	–	–	–	525 V	630 V	715 V

EcoStruxure Asset Advisor

EcoStruxure Asset Advisor is part and fully integrated in the unique Schneider Electric EcoStruxure platform and helps to reduce risks for personnel and increase operational continuity of your installation.

Asset Advisor is integrated in the “Apps, Analytics & Services” layer and provide cloud based monitoring and smart alarming services.

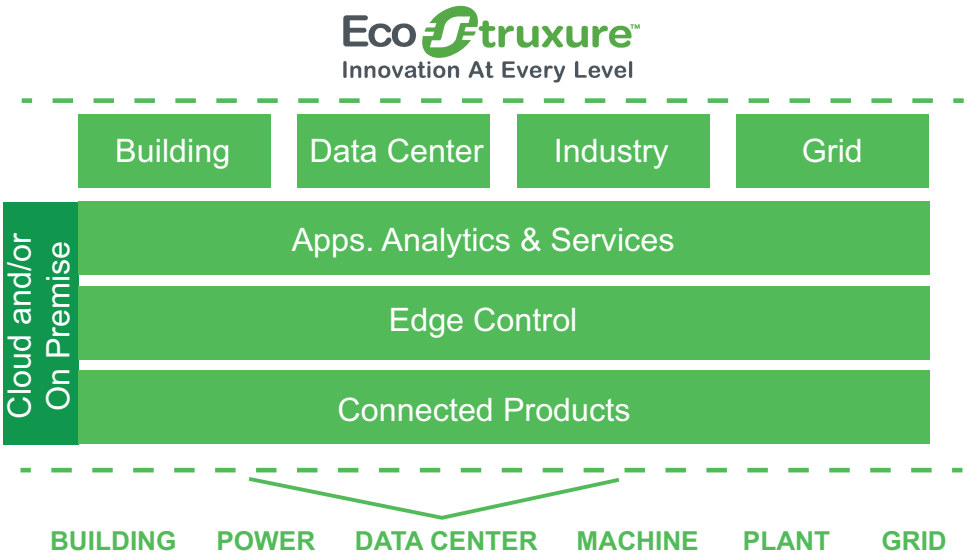

Altivar Process Drives belong to the “Connected Products” layer of EcoStruxure and provide solutions to optimize the operation and maintenance of your drives installation.

Utilizing newest technologies seamless integrated into Schneider Electric Managed Services and IoT architecture, you benefit from predictive maintenance effectiveness.

It allows you to manage maintenance tasks on your assets based on condition based monitoring and predictive analytics. All thanks to the combination of smart connected device technologies and powerful cloud-based risk prediction capabilities. An Altivar Process with EcoStruxure Asset Advisor transforms data into insight and help to run your operations more efficiently and safer, with more availability, and increased profits.

In summary the Asset Advisor functionality can be described in 3 steps:

Continuous health monitoring

The operator gets a health monitoring view of its assets and conditions of usage (extensive drive information and essential data from peripheral equipment). These assets act as super-sensors providing relevant data and KPIs.

Risk evaluation

The operator knows where and what risks are on the installation. Predictive analytics constantly evaluates the level and criticality of risk by looking at an asset, the process duty cycle, and the condition of usage. This enables the ability to predict, in advance, a potential failure or dysfunction of the installation.

Risk mitigation

The operator receives notification of the necessary maintenance task required at the right time to secure the asset and production at minimal cost, mitigating the risks of downtime.



Health monitoring
➔ Dashboards

Risk evaluation
➔ Digital reports


Risk mitigation
➔ Work order

Documentation / Packaging

What's in This Chapter


Safety Labels in Local Language 149
Seaworthy Packaging 149

Safety Labels in Local Language

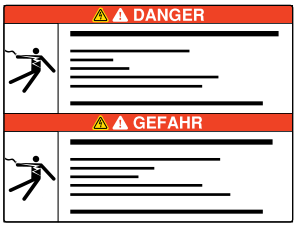

All Altivar Process Drive Systems are delivered with safety labels in English and French.
Optionally the devices can be also ordered with labels in the local language.

Seaworthy Packaging

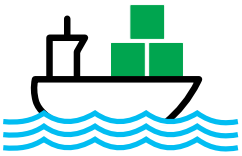

This option contains a seaworthy packaging for transport by ship. The packaging complies with the HPE packaging guidelines (federal association for wooden packages, pallets and export packaging in Germany).

Schneider Electric
1884 Boulevard de la Défense
92000 Nanterre
France

www.se.com

As standards, specifications, and design change from time to time, please ask for confirmation of the information given in this publication.

© 2016 – 2026 Schneider Electric. All rights reserved.

NHA37111.05